



A40/A41(W) IP Phone User Manual

Version: 2.0

2017-05-26

Content

Contact ATCOM.....	5
1. Overview of A40/A41(W).....	6
1.1. Interface.....	6
1.2. Hardware.....	7
1.3. Software.....	7
1.4. Network.....	8
1.5. Management and Maintenance.....	8
1.6. Protocol.....	8
1.7. Compliant and Certified Standard.....	9
1.8. Packing list.....	9
1.9. Installation.....	9
2. Keypad and GUI.....	14
2.1. Keypad.....	14
2.2. Starting.....	16
2.3. Standby.....	18
3. Call Function.....	20
3.1. Answer the calls.....	20
3.2. Make Calls.....	20
3.3. Pre-dial.....	22
3.4. Multiple line dial-up.....	22
3.5. Call Hold.....	22
3.6. Call Transfer.....	23
3.7. Mute calls.....	23

3.8	3-Way Conference.....	24
3.9.	Hang up the phone.....	24
3.10.	Voicemail.....	25
4.	Configuration.....	25
4.1.	Status info.....	27
4.2.	Call Features.....	29
4.2.1.	Call Forward.....	29
4.2.2.	Call Waiting.....	33
4.2.3.	Auto Answer.....	34
4.2.4.	DSS Keys.....	35
4.2.5.	Key as Send.....	40
4.2.6.	Hotline.....	40
4.2.7.	Anonymous Call.....	41
4.3.	Contacts.....	42
4.4.	History.....	49
4.5.	Message.....	52
4.6.	Settings.....	54
4.7.	Display.....	72
5.	Advanced Feature.....	74
5.1.	Codecs.....	74
5.2.	Capture and Upgrading.....	75
4.3.	Auto Provision.....	76
5.4.	Export & Import configuration file.....	78
5.4.1.	Export configuration file.....	78
5.4.2.	Import configuration file.....	79

5.5. Export System log.....	79
5.6. Dial plan.....	80
5.6.1. Replace Rule.....	81
5.6.2. Dial-now.....	82
5.6.3. Area Code.....	83
5.6.4. Block Out.....	84
6. WI-FI(only for A41W).....	85
6.1. Configure the WIFI on the phone.....	85
6.2. Configure the WIFI on the WEB.....	85
6.3. Enterprise WiFi.....	86
7. FAQ.....	87
7.1. How to reset to factory.....	87
7.2. Upgrade the firmware on safe mode.....	88
7.3. How to make IP Peer to Peer call.....	88
8. Troubleshooting.....	90
8.1. The phone is failed to register to SIP server.....	90
8.2. The phone is failed to gain IP address.....	90
8.3. Only one party can hear from another on calling.....	90
9. Abbreviation.....	91
10. FCC Caution.....	92

Contact ATCOM

Overview of ATCOM

ATCOM is the leading VoIP hardware manufacturer in global market. We have been keeping innovating with customer's needs oriented , working with partners to establish a total solution for SMB VoIP with IP phone , IP PBX and Asterisk cards.

With over 10 years' experience of R&D , manufacturing and service in network and VoIP filed; mission of creating the biggest value for IP terminals , we commit ourselves in supplying the competitive IP phone and other terminals for IP PBX , soft switch , IMS , NGN providers and carriers; supplying the competitive total VoIP solution for SMB market. We keep improving the customer's experience and creating the bigger value with our reliable products. Until now, our VoIP products have been available in 100+ countries and used by millions of end users.

Contact Sales

Address	Area C, A2F , Block 3 ,Huangguan Technology Park , #21 Tairan 9th Rd, Chegongmiao , Futian District , Shenzhen China
Tel	+ (86) 755-83018618-8806
FA41(w)	+ (86) 755-83018319
E-mail	sales@atcom.com.cn

Contact Technical Support

Tel	+ (86) 755-83018618-8003
E-mail	Support@atcom.com.cn

Website Address: <http://www.atcom.cn/>

Download Center: <http://www.atcom.cn/download.html>

1. Overview of A40/A41(W)



A40/A41(W)

Type	POE	Power adapter	Wi-Fi	1000M
A40	No	Necessary	No	No
A41	Yes	Optional accessory	No	No
A41(w)	Yes	Optional accessory	Yes	No

1.1. Interface

Power Input	DC 5V-1000mA or POE
LAN Port	RJ45
PC Port	RJ45
Headset Jack	RJ9
Handset Jack	RJ9

1.2. Hardware

LCD	132*52
CPU	400MHz Dual-Core
LED Indicator	1 Status Light

1.3. Software

- Sip 2.0 (RFC3261) and other related SIP RFCs
- 4 SIP line registration
- STUN
- Jitter Buffer, VAD,CNG
- G711A, G711U, G722, G726-16, G726-24, G726-32, G726-40, G729, L16, iLBC_13_3, iLBC_15_2
- Echo Cancellation
- SIP Domain name, Authentication and Backup SIP Server
- DTMF (RFC2833, Inband, SIP INFO)
- Call transfer, Call forward, 3-way conference, Call hold, Call back
- DND(Do Not Disturb), Auto answer, Blacklists, Block Call-ID, Block Anonymous call, Dial plan, IP call
- Phone book with 400 contacts and 200 blacklists
- Call History with 400 records include answered calls, missed calls, dialed calls and forward calls
- Auto update via HTTP, HTTPS, FTP, TFTP, DHCP, RPS and PNP
- Syslog
- SNTP,NTP
- Customized Ringtone
- Daylight Saving time
- VLAN, OpenVPN, Span to PC port, QoS
- 802.1X, LLDP
- Enterprise WIFI

- WEB access with different login level
- Soft button: soft button *4
- Redundancy SIP server
- Multi-language: English, French, Hebrew, Russian, Spanish, Chinese, Persian, Polish, Portuguese, Turkish, German, Italian

1.4. Network

- LAN/PC: Support Bridge mode
- Support VLAN
- Support Open VPN
- Support DHCP, STATIC IP
- Primary/Secondary DNS Server
- Support QoS
- Support LLDP
- Support 802.1X
- Support Span pc port
- Support Enterprise WIFI
- Web access via HTTP&HTTPS

1.5. Management and Maintenance

- Support firmware updating under safe mode
- Support different level user management
- Configuration via web , keyboard
- Support multi-language
- Firmware and configuration file auto provision
- Support system log

1.6. Protocol

- IEEE 802.3 /802.3 u 10 Base T / 100Base TX
- DHCP: Dynamic Host Configuration Protocol
- SIP RFC3261, RFC3262, RFC3263, RFC3264, RFC3265, RFC2543, RFC3489, RFC3842, RFC3515, RFC2976, RFC3428, RFC2327, RFC2782, RFC1889
- TCP/IP: Transfer Control Protocol/Internet Protocol
- RTP: Real-time Transport Protocol
- RTCP:RTP Control Protocol
- DNS: Domain Name Server
- TFTP: Trivial File Transfer Protocol
- HTTP:Hypertext Transfer Protocol

- FTP:File Transfer Protocol

1.7. Compliant and Certified Standard

- CE: AGC01180140201E2, AGC01180140202E2
- Comply with ROHS in EU
- Comply with ROHS in China



- Operation temperature: lower than 60° C
- Storage temperature: lower than 60° C
- Humidity: 10 to 90% no dew


1.8. Packing list

Model	A40/A41(W)
Telephone	1 Unit
Handset	1 Unit
Handset cable	1 Unit
Stand bracket	1 Unit
Wall bracket	1 Unit
Power adapter	Optional for A41,A41(w) Standard for A40
Network Cable	1 Unit, 1.5 meters
Quickstart Guide	1 Unit
Headset	Optional

1.9. Installation

Connect network cable

A40/A41(W) is able to be connected with network via LAN port. Under the Bridge mode, other devices (Laptop, IP phone) is able to access network via the PC port of A40/A41(W).

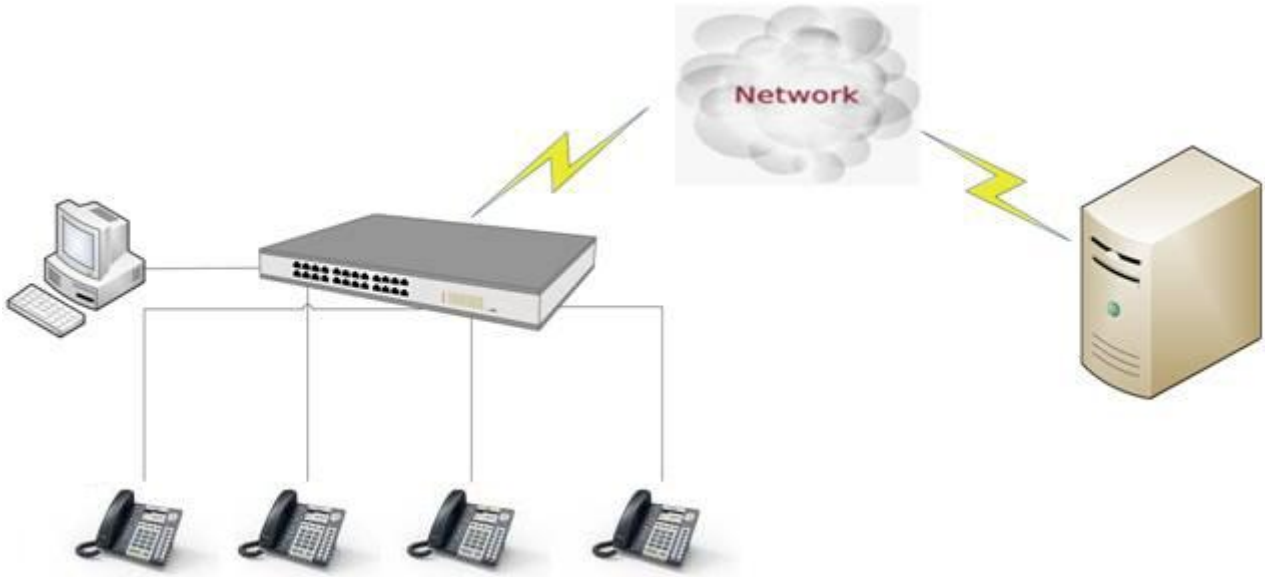


Connect WiFi

A41W is able to connect the WiFi.




1. Stand bracket installation instruction


A. Put the bottom side of the IP phone upside and press one-side joints of stand bracket into the slot, please refer the picture as below:

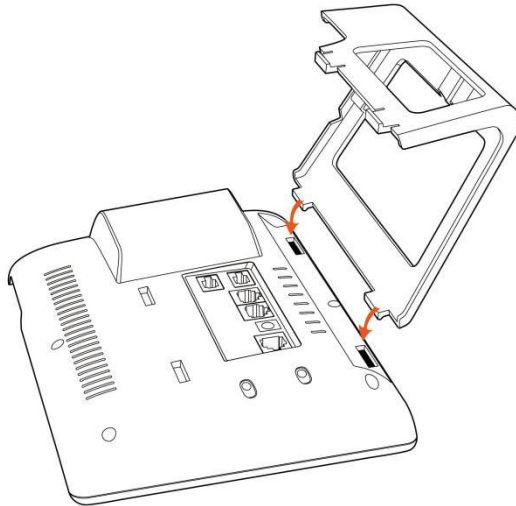

B. Press the other side joints into the slot according to the direction of the arrow:

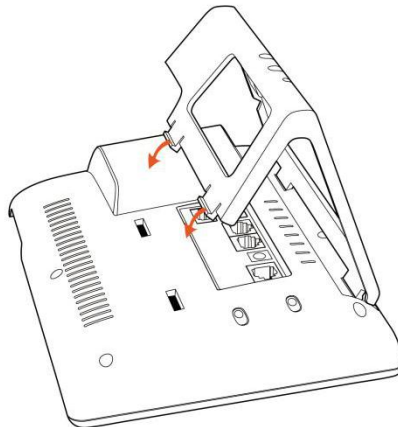


C. It is the right picture after fixing the stand bracket below:

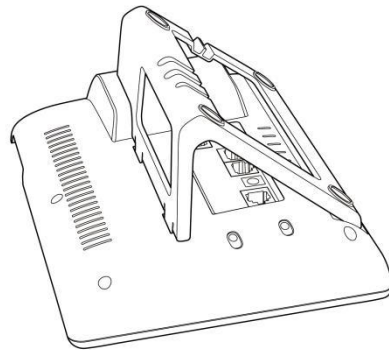


D. Disassemble the stand bracket:

Push the spring joint of stand and pull the stand according to the direction of the arrow. When the joints are pulled out of the slot, you can take off the stand bracket

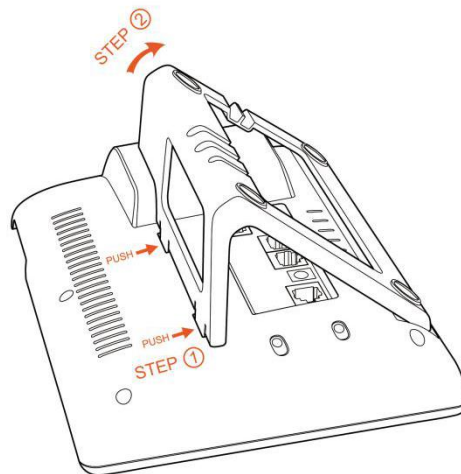

2. Programmable keys' paster using instruction

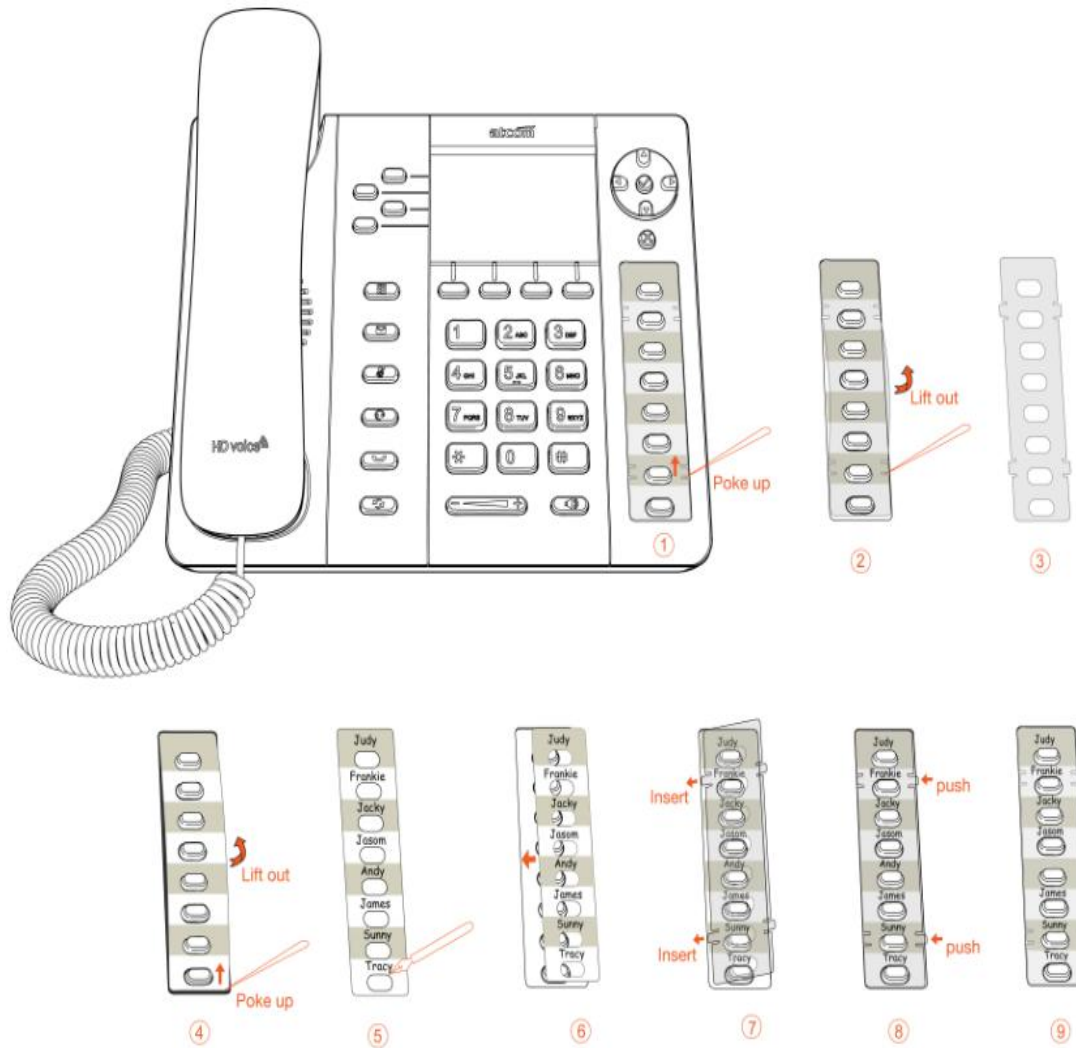

Step1. Use needle or some other tools to insert into the hole of the plastic sheet, hog the plastic sheet.

Step2. Lift out the plastic sheet

Step3. Take off the plastic sheet

Step4. Use needle or some other tools to insert into the edge of the paster, hog and lift out the paster

Step5. Write down the identification of each programmable key on the paster after taking off the paster


Step6. Put back the paster

Step7. Insert the plastic sheet into the slot

Step8. Push the other side of the plastic sheet into the other slot


3. Wiring instruction

Plug in the power adapter, cable and handset or headset to the corresponding ports as below picture and press them to the slots on the stand bracket.

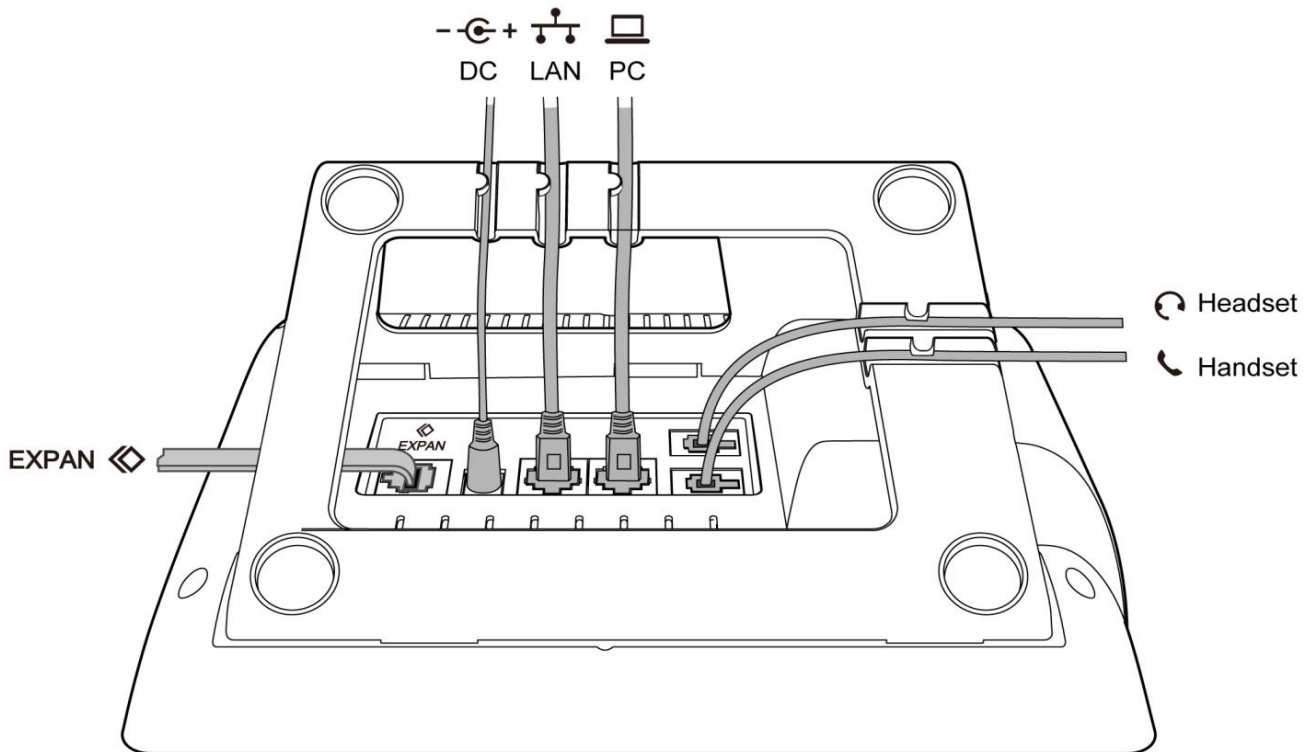





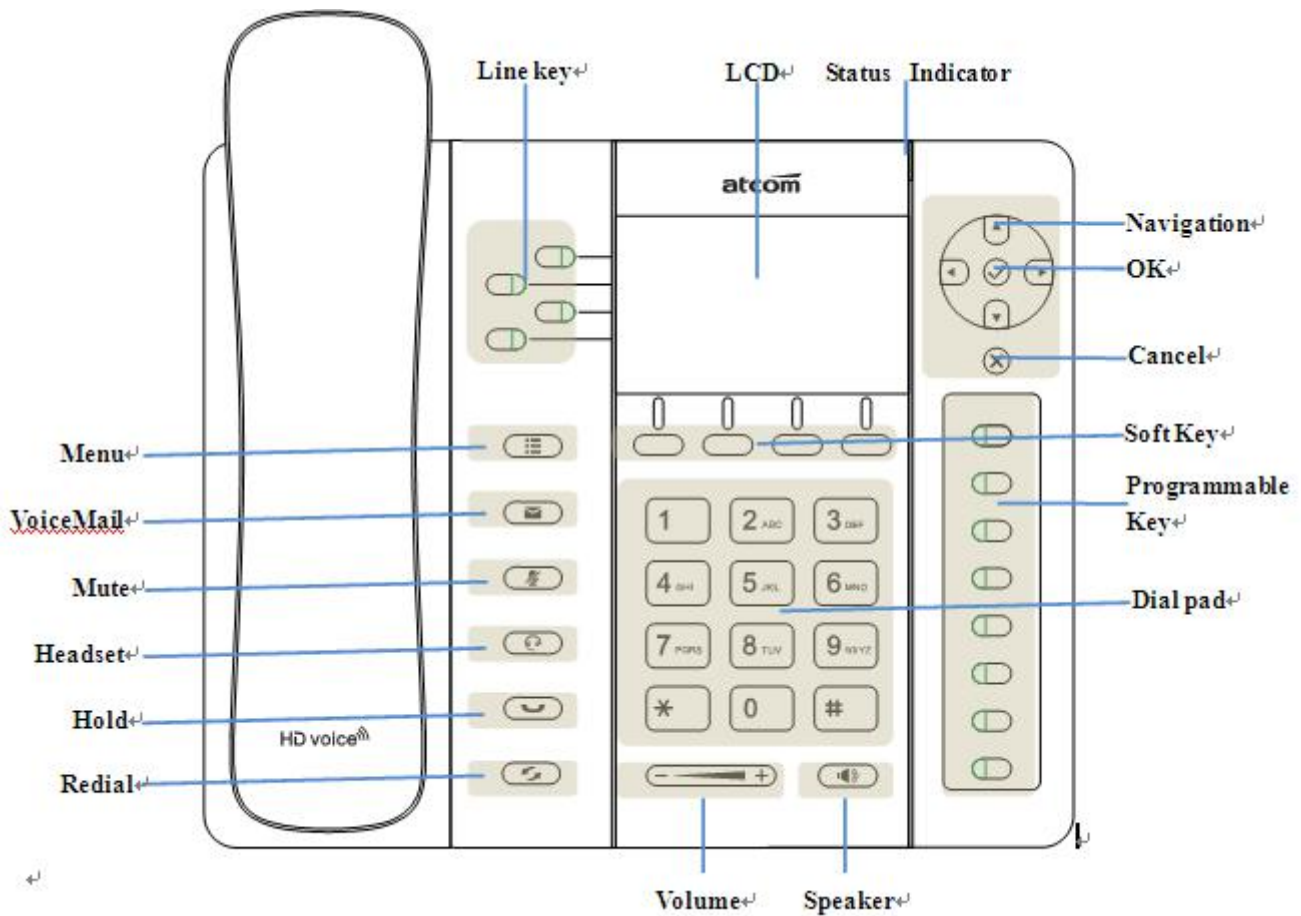







2. Keypad and GUI

2.1. Keypad



Soft Keys	<p>Press to select a function which displayed at the softkey zone of screen</p> <p>Display all optional functions at the last line of LCD screen.</p>
Status Indicator LED	<p>Indicates the phone's status,</p> <ul style="list-style-type: none"> ➤ If the phone is being started ,the LED is on ➤ If the phone is standby, the LED is off ➤ If there is income calling, the LED will blink at 120ms on, 120ms off. ➤ If there is a new message, the LED will blink at 600ms on, 600ms off.
LCD Screen	<p>All information such as date, time, phone number, incoming caller's ID(if available),line/call status, extension numbers and the soft key features are displayed on it.</p>
Dial pad	<p>Entering numbers or characters.</p>

<p>Navigation keys</p>	<p>Allows users to navigate (left, right, up, down). Press  can enter "Directory". Press  can enter "History".</p>
	<p>Adjust the volume (speaker/handset/headset/ring). Volume level will be displayed on LCD when pressing volume key.</p>
	<p>Confirm users' operation and show status when A40/A41(W) is idle.</p>
	<p>Cancel users' operation.</p>
	<p>Enter menu settings.</p>
	<p>Pick up and hung up under the speaker mode.</p>
	<p>Mute the mic in a conversation by pressing the Mute button; this prevents the person on the active call from hearing what you or someone else in the room is saying.</p> <p>To un-mute, press the Mute button again.</p>
	<p>Pick up and hung up under headset mode.</p>
	<p>Check the Voicemail status.</p>
	<p>Hold the current call.</p>
	<p>Redial the last dialed number</p>


2.2. Starting

1. When start on the phone, it turns to standby status in about 50 seconds.


Welcome

2. After absolute boot up (first use or after reset to factory setting), User can select the Language and time manually, and choose to connect the WIFI or not in the WIFI phone.



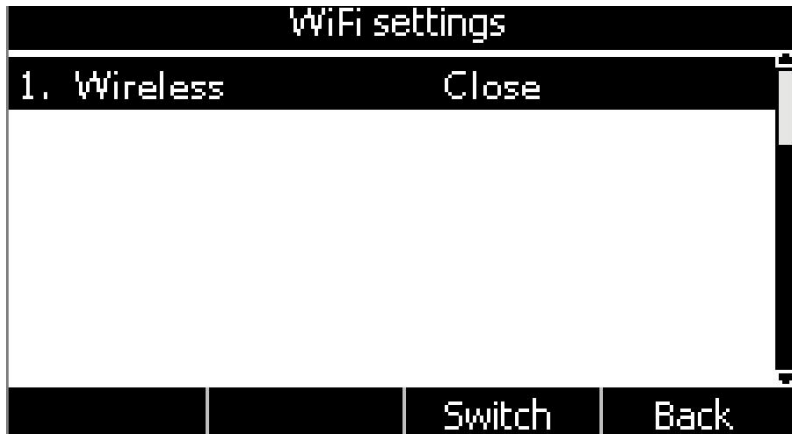



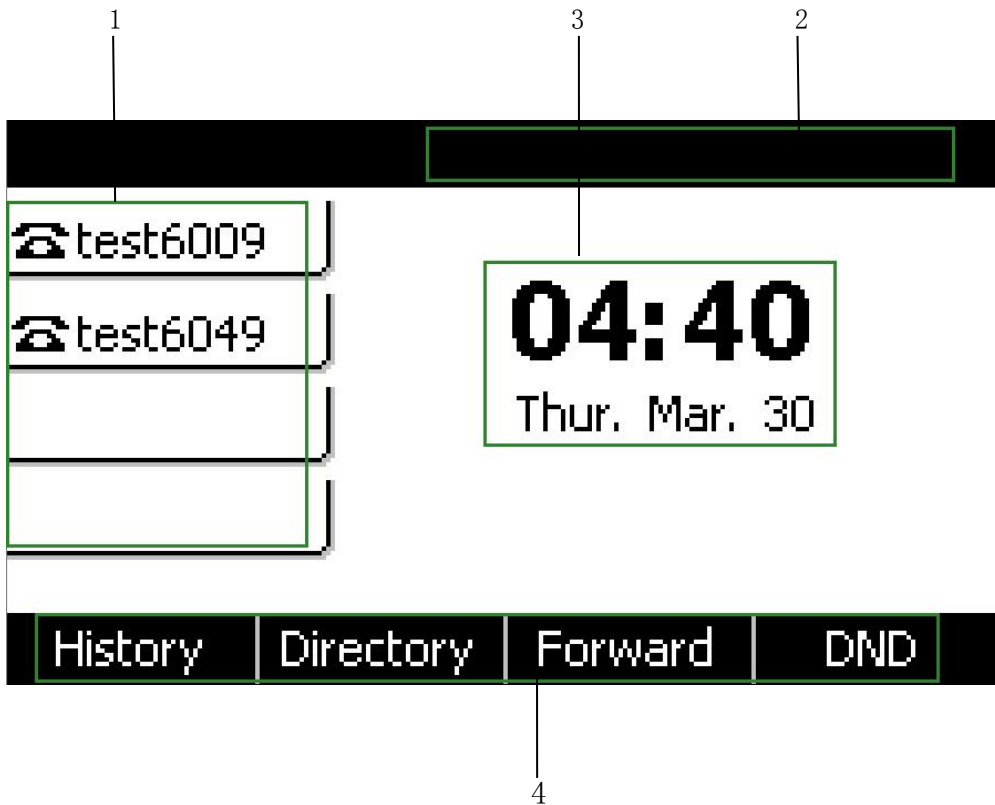


 








2.3. Standby



Area Item	Description
1	Status: to indicate the call status
2	Time
3	Softkey: "History", "Directory", "Forward," "DND"
4	Date

Icon on Standby UI



Icon	Description
	The account is registered successfully.
	The account is not registered successfully.
	The line is being occupied for dialing.
	New incoming call
	Call hold.
	Unavailable Network.
	Calling via handset
	Calling via Speaker.
	Calling via headset.
	WiFi Signal indicator
	Call Forward is activated.
	New Voicemail.
	Auto-Answer is activated.
	DND is activated

3. Call Function




3.1. Answer the calls

When there is an incoming call, phone will remind user with ringing. There are 3 ways to answer the call:




A. Answer by handset

Pick up the handset and talk with the caller. If you want to hang up, just put back the handset. When you are talking with the handset and want to switch to speaker or headset mode, please press  key or  key, and then put down the handset.

B. Answer by speaker

Press  key and talk with callers by built-in Micro-phone and Speaker. If you want to hang up, please press  key again. Switch calling or talking into handset mode by lifting the handset under speaker mode. Press  key will switch calling or talking into headset mode.

C. Answer by headset


Keep your microphone connected with the RJ9 headset jack, when there is an incoming call, press  and talk with the caller. If you want to hang up, please press  again. Pressing  can change calling or talking into speaker mode, and lifting the handset switches to handset mode.

3.2. Make Calls


A. Use the handset

Pickup the handset, the LCD will show the current lines (user is able to switch from line1 to line4 by pressing the line key beside the LCD). Press soft key "**Send**" to dial the number. When you hear the tones of "du~~du~~" and the phone number your dialed is being displayed on the LCD, the phone at the side of being called should be ringing. If the called party answers this calling, the call is established and the calling timer is started immediately.



B. Use the speaker

Press  key, the LCD will show the current lines (user is able to switch from line1 to line6 by pressing the line key beside the LCD). Input the phone number and press soft key "**Send**" to dial the number. When caller hear the tones of "du~~du~~" and the phone number your dialed is being displayed on the LCD, the phone at the side of being called should be ringing. If the called party answers this calling, the call is established and the calling timer is started immediately.



C. Use the headset

Press  Key, the LCD will show the current lines (user is able to switch from line1 to line6 by pressing the line key beside the LCD). Input the phone number and press soft key "**Send**" to dial the number. When caller hear the tones of "du~~du~~" and the phone number your dialed is being displayed on the LCD, the phone at the side of being called should be ringing. If the called party answers this calling, the call is established and the calling timer is started immediately.

D. Dial from phone book

1. Press  key to enter the menu and choose "**Contact**" option. Press "**Enter**" soft key and then find the contact person by navigation keys. When the certain contact person is highlighted, press "**Dial**" or just pick up the handset to call this number.
2. Pick up the handset, press "**Contact**" soft key, then find the contact person and press "**Dial**" soft key.
3. Pick up the handset, press  and enter "**Contact**", then find the contact person and press "**Dial**" soft key.

E. Dial from call history



1. Press  key to enter the menu and choose "**History**" option, then select one of call history entry, and press "**Dial**" soft key or pickup the handset to call this number.
2. Pickup the handset, press "**History**" soft key, then select one of call history entry, and press "**Dial**" soft key to call this number.
3. Pickup the handset, press  and enter "**Call History**", then select one of call history entry, and press "**Dial**" soft key to call this number.

3.3. Pre-dial

It's a method to dial a phone number immediacy at standby mode.

The method is as below:



A. Dial-up the phone number at standby mode

- B. Press soft key "**Dial**" or Pick up the handset or Press  or  to send out the number.

3.4. Multiple line dial-up

A40/A41(W) supports up to 8 concurrent calls. If there is a new incoming call when you're talking on A40/A41(W), the new incoming call will be displayed on LCD and status indicator LED will be fast blinking. User can press soft key "Hold" then press "Answer" to receive the new incoming call.

3.5. Call Hold

The current calling will be hold by pressing soft key "**Hold**" or , and the held call will be resumed after pressing soft key "**Resume**" or  or the corresponding line key. Even

on 3-way conference calling, the conference will be held after pressing "**Hold**" key, and be resumed to 3-way conference after pressing "**Hold**" Key again. Remember the conversation is still on hold without being ended even if hung up under the status of hold.

3.6. Call Transfer

1. Attended call transfer

The attended transfer allows user to call a third-party before transferring the calling.

While calling, press the "**Transfer**" soft key to hold the current call and dial the target number you want to transfer to on the activated line and press "**Send**" soft key to call that number. After the target party answers the call, press "**Transfer**" soft key again to complete the transfer.

If the target number has been setup in the current BLF list, and you have already finished the necessary setup on Webpage of A40/A41(W), there is an easier way to complete the attend transfer. While calling, press the corresponding BLF key of the target number and then press the "**Transfer**" soft key, the attend transfer will be achieved.


2. Blind call transfer

The blind transfer allows user to transfer a call without speaking to the third party. On the user side, the call will be ended as soon as the target phone number is dialed.

Operating steps: Press "**Transfer**" soft key to get more option, then press "**Blind**" soft key, input the transfer target number and press "**Send**" soft key.

If the target number has been setup in the current BLF list, and you have already finished the necessary setup on Webpage of A40/A41(W), there is an easier way to complete the Blind transfer. While calling, press the corresponding BLF key of the target number, the blind transfer will be achieved.

3.7. Mute calls

The input audio will be not transmitted to peer phone after pressing  key, and the phone will be muted even switched among different modes of speaker, handset and headset.

To un-mute, just press  key again.

3.8 3-Way Conference

1. While on calling, press the soft key "**Conf**", input the 3rd party's phone number and then press the softkey "**Dial**" or press the soft key "**Conf**" and press the corresponding BLF key to invite the 3rd party to join a conference call.
2. After the third party answers the call, pressing "**Conf**" key again to establish the 3-way conference
3. The initiator of 3-way conference can press the soft key "**Hold**" to hold the conversation with other two parties, and press "**Resume**" to back to 3-way conference.
4. If the initiator hangs up the call or press the soft key "**End Conf**", the conference will be ended and the calling between the other two parties will be hung up as well.
5. The initiator of 3-way conference can press the soft key "**Split**" to separate the conference call, and the calling between initiator and the other two parties are still active but under the status of Call hold.
6. After split the 3-way conference, press the soft key "**More**" and then press the softkey "**Join**" to resume the 3-way conference or press the softkey "**Conf**" to setup a new 3-way conference call.

3.9. Hang up the phone


1. Softkey hang up

While on calling, press the softkey "**End Call**" to hang up.


2. Handset hang up

Put back the handset at handset mode, the current calling will be hung up.

3. Speaker hang up

Press  key at speaker model, the current calling will be hung up.


4. Headset Hang up


Press  key at headset model, the current calling will be hung up.

5. Hang up one line call


Press the hook to hang up the current calling when 2 calls happened simultaneously.

3.10. Voicemail

A40/A41(W) has a  key for entering voicemail box and indicating new voicemail.

Press  key to enter the menu to configure voicemail number if you have never configured it previously. Otherwise, the voicemail number will be called after pressing it.

4. Configuration

Press the key  to enter the Main Menu:


A41(w):



Move the navigation key and press the softkey "**Enter**" or input the corresponding Number key
 Select the item of Main Menu:

Number Key "1"	Enter "Status"
Number Key "2"	Enter "WiFi Setting"
Number Key "3"	Enter "Feature"
Number Key "4"	Enter "Directory"
Number Key "5"	Enter "History"
Number Key "6"	Enter "Message"
Number Key "7"	Enter "Settings"
Number Key "8"	Enter "Display"

A40 and A41:

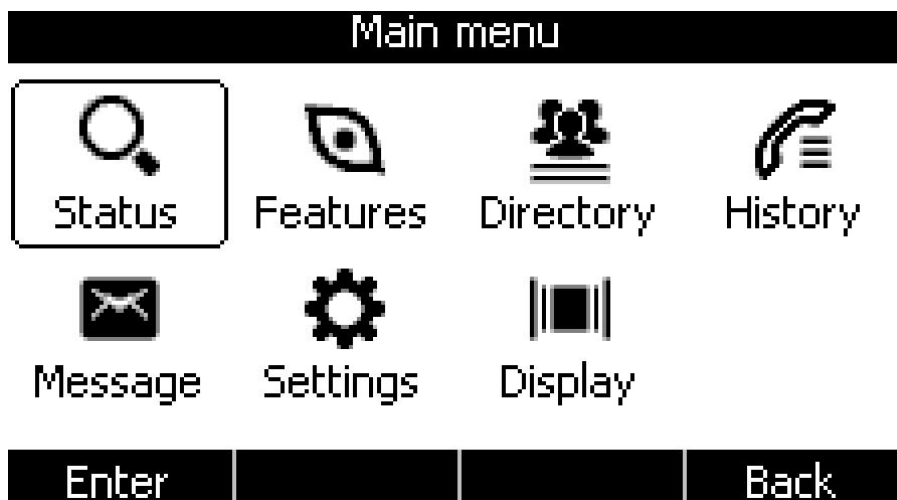

Move the navigation key and press the softkey "**Enter**" or input the corresponding Number key
 Select the item of Main Menu:

Number Key “ 1 ”	Enter “Status”
Number Key “ 2 ”	Enter “Feature”
Number Key “ 3 ”	Enter “Directory”
Number Key “ 4 ”	Enter “History”
Number Key “ 5 ”	Enter “Message”
Number Key “ 6 ”	Enter “Settings”
Number Key “ 7 ”	Enter “Display”

4.1. Status info



It's able to check the status info via LCD Display or Web.


And the basic status and details status will be optional displayed on LCD display

1. Basic Status——IP address.MAC address. Firmware version.
2. Details Status——Network info. Production info and Account info in details.

Basic Status


You're able to check the basic status in both ways as below:

1. **Press the key**  **on standby.**
2. **Press the key**  **and select the “Status” of Main Menu.**
3. **Move the navigation key, the status display the Model, IP, MAC, Firmware, More**

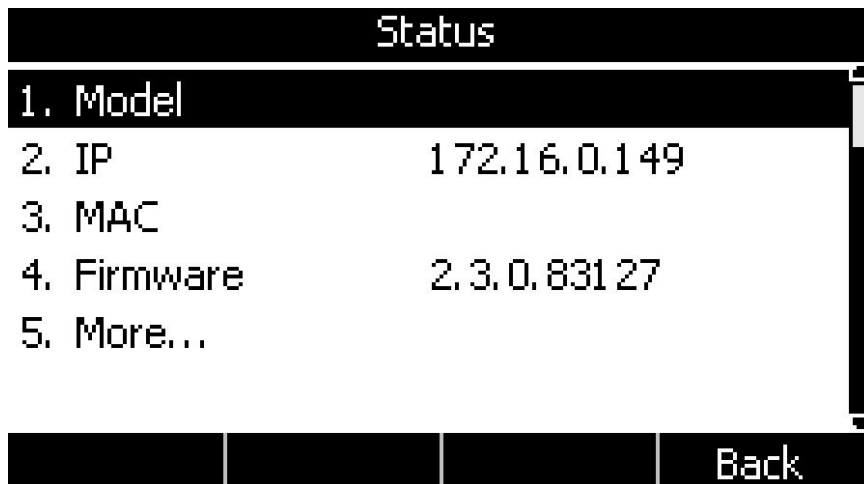

Details Status

Select "**More**" and then press the softkey "**Enter**" to check details info, and move the navigation key to check more.

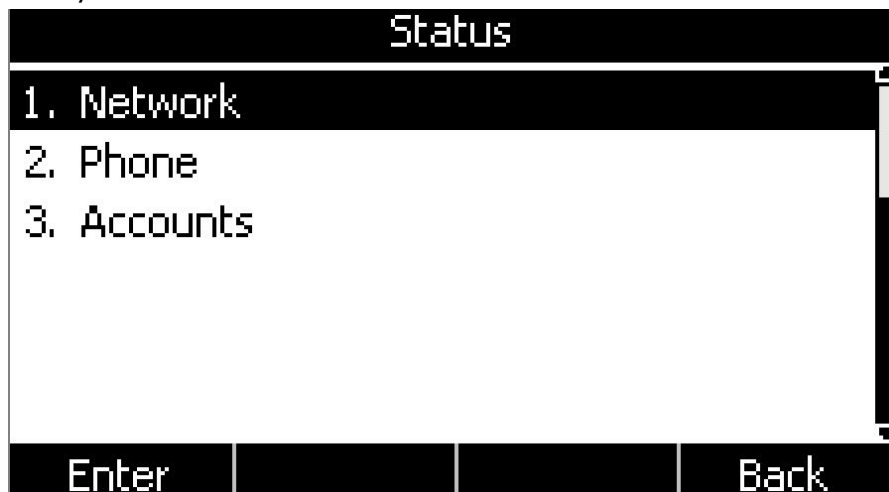

Press the softkey "**Enter**" to check status info, and "**Back**" to return the Basis Status page.

Check the Status info via Web

1. Check the IP address of IP phone;
2. Type the IP address on a web browser;

3. Input the username and password, the default user and password for Administrator is (admin, admin), for general user is (user, user), and then press "**Enter**".
4. By default, the Status info will be displayed.

4.2. Call Features


In this part, we will introduce the following content:

- [Call Forward](#)
- [Call Waiting](#)
- [Auto Answer](#)
- [DSS Keys](#)
- [Key as send](#)
- [Hotline](#)
- [Anonymous Calls](#)

4.2.1. Call Forward

"Call Forward" includes "Always Forward", "Busy Forward", "No Answer Forward".



"Always Forward" has the highest priority, and "Busy Forward" has the same priority as "No Answer Forward", that means once the function of "Always Forward" is activated, other call forward features will be unavailable.

Any type of Call forward feature is activated, the Icon  will be indicated on the LCD Display.

Always Forward

All incoming calls will be forwarded to target phone number once the "**Always Forward**" activated, setup this feature as follow and please move the navigation to check more:


Always forward	
1. Always	Enable
2. To	<input type="text"/>
3. On code	<input type="text"/>
4. Off code	<input type="text"/>
Save	Switch Back

Item	Operation	Description
Always	Press the key   or the soft key "Switch" to setup	Switch on or Switch off the feature. "Enable" mean this feature is enabled. "Disable" mean this feature is disabled.
Forward to	The Number key, "*"key, and "#"are permitted to be input.	Setup the target phone number which all incoming calls transferred to
On Code	The Number key, "*" key, and "#"are permitted to be input.	The feature code to enable all incoming calls forward, the phone will send the feature code directly to open all incoming calls forward
Off Code	The Number key, "*" key, and "#"are permitted to be input.	The feature code to disable all incoming calls forward, the phone will send the feature code to close all incoming calls forward directly

Busy Forward

It means the phone is busy once the phone is not at standby mode. Setup this feature as below:





Busy forward	
1. Busy forward	Enable
2. To	110
3. On code	
4. Off code	
Save	Switch
	Back

Item	Operation	Description
Busy	Press the key  or softkey "Switch" to setup	Switch on or Switch off the feature. "Enable" mean this feature is enabled, "Disable" mean this feature is disabled.
Forward to	The Number key, "*" key, and "#" are permitted to be input.	Setup the target phone number which all incoming calls transferred to
On Code	The Number key, "*" key, and "#" are permitted to be input.	The feature code to enable busy calls forward, the phone will send the feature code directly to open busy call forward
Off Code	The Number key, "*" key, and "#" are permitted to be input.	The feature code to disable busy calls forward, the phone will send the feature code directly to close busy call forward

No Answer Forward


All incoming calls will be forwarded after time out, once the feature of "No Answer Forward" is activated. Setup this feature as below, and please move the navigation key to check more:

No answer forward	
1. No answer	Enable
2. To	<input type="text"/>
3. After ring time	12s
4. On code	<input type="text"/>
5. Off code	<input type="text"/>
Save	Switch
	Back

Item	Operation	Description
No Answer	Press the key   or softkey "Switch" to setup	Switch on or Switch off the feature. "On" mean this feature is activated, "Off" mean this feature is unactivated .
Forward to	The Number key, "*" key, and "#" are permitted to be input.	Setup the target phone number which all incoming calls transferred to
After Ring Time	Press the key   or softkey "Switch" to setup	Setup timer for no answer status. All incoming calls will be forwarded after time out once Call forward when no answer activated.
On Code	The Number key, "*" key, and "#" are permitted to be input.	The feature code to enable no answer call forward, the phone will send the feature code directly to open all incoming calls forward
Off Code	The Number key, "*" key, and "#" are permitted to be input.	The feature code to disable all incoming calls forward, the phone will send the feature code directly to close all incoming calls forward


Setup Call Forward Via Web



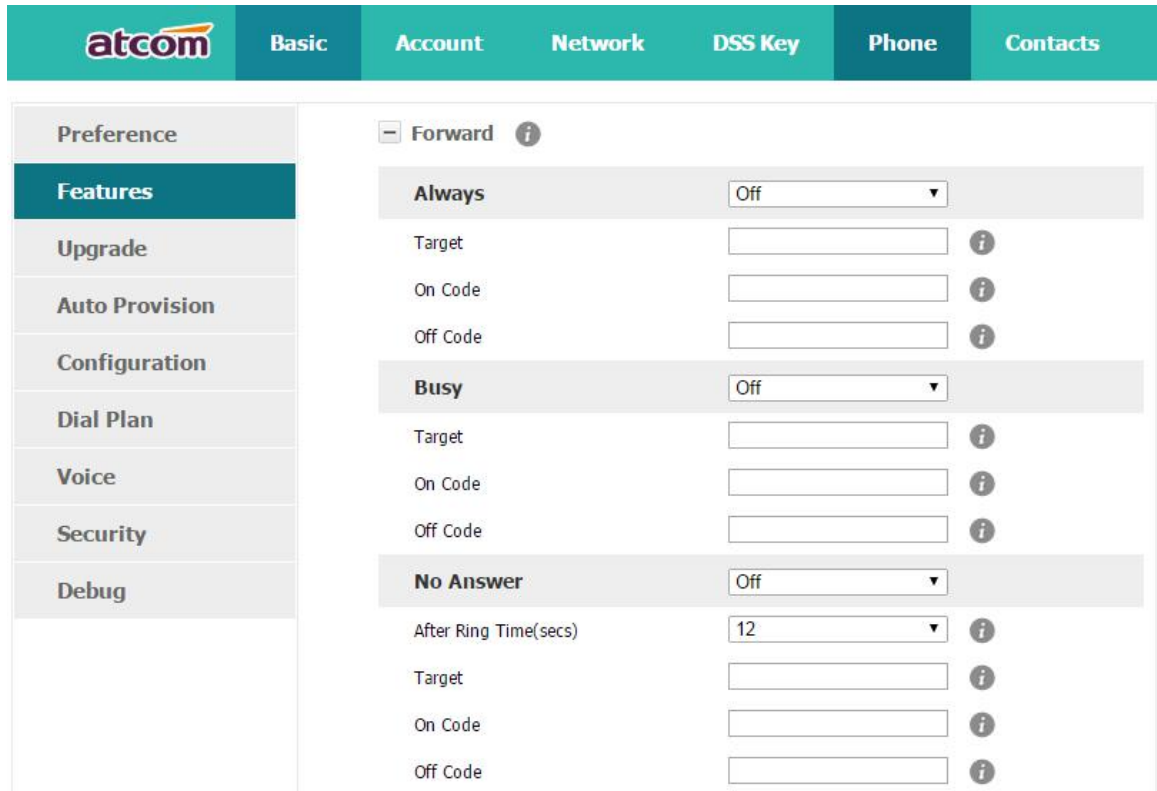

Set Call Forward via web: **Phone**→**Features**→**Forward**.

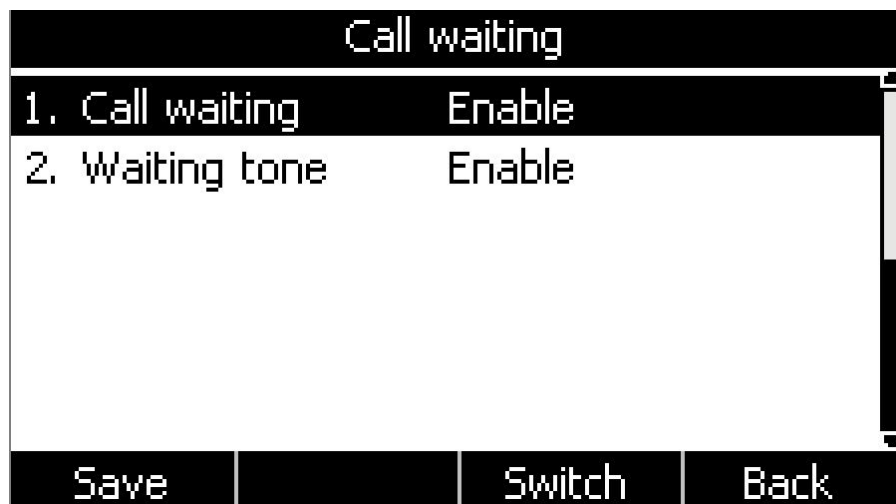

4.2.2. Call Waiting

The feature of “Call Waiting” is available by default. If switch off this feature, whatever multiple SIP accounts had been registered successfully, only one single active calling is permitted (for example Dialing, Ringing, Calling, Holding).



Item	Operation	Description
Call Waiting	Press the key   or softkey "Switch" to setup	Switch on or Switch off the feature. "Enable" mean this feature is enabled, "Disable" mean this feature is disabled.
Call Waiting Tone	Press the key   or softkey "Switch" to setup	Switch on or Switch off the prompt playing. "Enable" mean this feature is enabled, "Disable" mean this feature is disabled .


Setup call waiting via web: "Phone" → "Feature" → "General information" → "Call Waiting".


Setup call waiting Tone via web: "Phone" → "Feature" → "Audio Settings" → "Call Waiting Tone".

4.2.3. Auto Answer

The feature of "Auto Answer" is switched off by default. All incoming calls will be answered automatically when the phone is standby once "Auto Answer" is activated. "Auto Answer" when the phone is under "on Calling" status.

Please move the navigation key to check more:

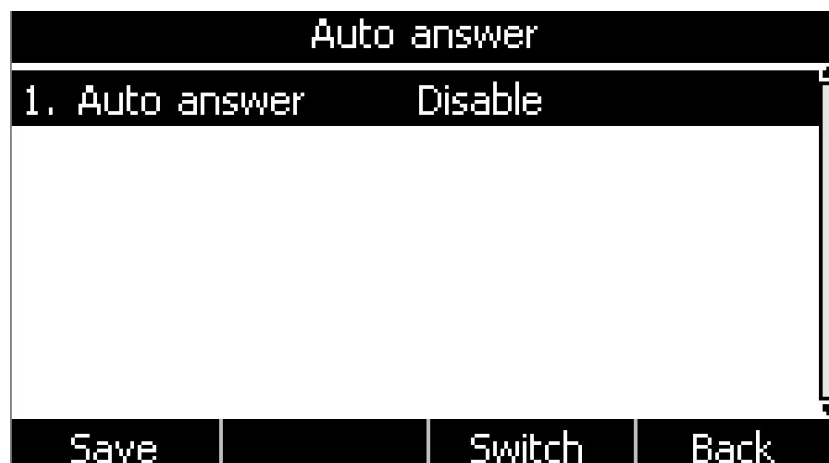

The Icon  will be indicated once "Auto Answer" is available.

Setup "Auto Answer" via Web: **"Phone"** → **"Feature"** → **"General information"** → **"Auto Answer"**

4.2.4. DSS Keys

The programmable keys include Line keys, Memory keys (aside the BLF LCD Display), Programmable keys and Soft keys on Standby UI.

Press the memory key for 2 seconds, it is able to modify the feature of each programmable key.

All programmable keys has been classified as "N/A", "Line Key", "BLF", "Key event", "Speed dial", "Intercom"

And the "Key Event" has been classified as "Conference", "Hold" "DND", "Redial", "Call return", "Pickup", "Call Park", "DTMF", "Directory".

Comments:



N/A

N/A means this key is not permitted to be set as a programmable key.

Line key


Display the account information, press it for making a call, answering incoming calls, call hold and resume.

Line key1		
1. Type	Line key	
2. Account ID	Account 1	
3. Account name	test5008	
4. SIP server	172.16.0.55	
Save	Switch	Back

Item	Description
Account ID	To display the account ID, press the soft key " Switch " or  、  to modify, the optional value is Account 1 to 4.
Account name	Display the account name of each account ID, non-modifiable.
SIP Server	The SIP server of each Account ID, non-modifiable. If not set any value for some account ID, the account name will be null.

BLF

Indicate the status of monitored account. Once set the BLF key with Pickup feature, user is able to answer the incoming call to the monitored account by pressing the corresponding BLF key. If the monitored account is idle, press the corresponding BLF key for speed dial.

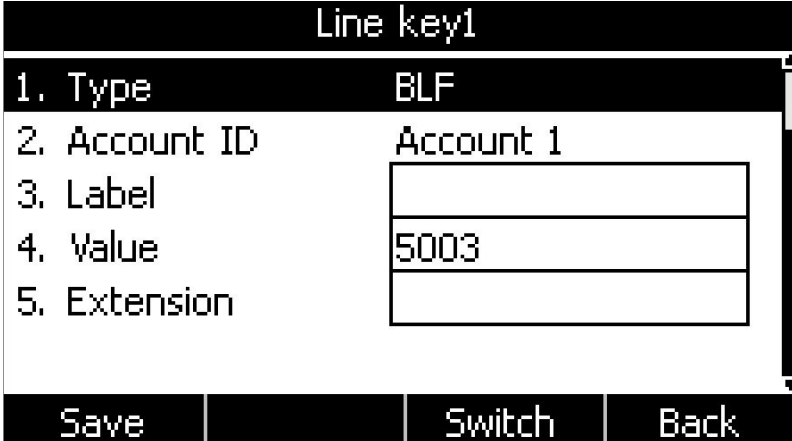



```

Line key1
1. Type      BLF
2. Account ID Account 1
3. Label
4. Value     5003
5. Extension

Save      Switch      Back

```


Item	Description
Account ID	To display the account ID, press the soft key " Switch " or  、  to modify, the optional value is Account 1 to 4.
Label	To identify this key on LED, for example "blf"
Value	The phone number will be monitored by this key. For example, if user want to monitor the phone number (5003), please set "6070" here.
Extension	This code must be configured for pickup, and this code provide by Server. If the code is not matched by Server, the feature of pickup will not work.

Conference

The 3-way conference will be setup by pressing the key “Conf” while on calling. For more info, please refer to [Chapter 3.8](#).

The configuration item **Label** is a name to identify the key on LED, can be set as “conference”.

Hold

The same feature as the key . For more info, please refer to [Chapter 3.5](#).


The configuration item **Label** is a name to identify the key on LED, can be set as “hold”.

DND

Press this key will switch on or switch off the feature of “DND”.

The configuration item **Label** is a name to identify the key on LED, can be set as “DND”.

Redial

The same feature as the key .

The configuration item **Label** is a name to identify the key on LED, can be set as “redial”.

Call return

Automatically dial the latest phone number in history.

The configuration item **Label** is a name to identify the key on LED, can be set as “return”.

Call Pickup

Press this key to pick up if new incoming call to the monitored phone number.

Item	Description
Value	The phone number monitored for pickup
Label	A41 cannot definition label

Reminding: This code must be set for pickup, and this code can be set via Web only.

Set the Pickup code as follow:

Set the pickup code for one single Account: **Account**→**Advanced**→**Select an account to be configured**→**Directed Call Pickup Code**.

Set the pickup code for all Accounts: **Phone**→**Features**→**Call Pickup**→**Direct Call Pickup**.
Direct Call Pickup Code (Direct Call Pickup should be set as Enable) .

Call Park

Press this key while on calling, the phone will dial the specified phone number, user will receive a code on the phone prompt, and then press the soft key "Transfer", the current calling will be parked successfully. At this moment, user is able to continue the parked calling with any other phones which registered on the same SIP server by dialing the code which user have received.

Item	Description
Value	The code for pickup the parked call and it is provided by SIP server.
Label	A41 cannot definition label

DTMF

Press this key while on calling, the phone will send the configured "**Value**" automatically.

Item	Description
Value	The value sent to remote end while on calling.
Label	A41 cannot definition label

Directory

Press this key to access Directory.

Speed Dial

Press this key while standby state, the specified target phone number will be dial from the specified account.

Item	Description
Value	The target phone number for speed dial
Label	A41 cannot definition label

Intercom

Press this key when the phone is idle, the phone will dial the specified "Value", and there mote end will answer the call automatically.

Note: This feature is supported by specified servers only.

Item	Description
Value	The target phone number for Intercom
Label	A41 cannot definition label

atcom						
Basic Account Network DSS Keys Phone Contacts						
Memory Keys						
Line Keys						
Programmable Keys						
EXT Keys						
Key	Type	Value	Label	Account	Extension	
DSS Key1	BLF	113		Account 1		
DSS Key2	BLF	114		Account 1		
DSS Key3	Speed Dial	110		Account 1		
DSS Key4	BLF	111		Account 1		
DSS Key5	BLF	120		Account 1		
DSS Key6	BLF	123		Account 1		
DSS Key7	BLF	147		Account 1		
DSS Key8	BLF	112		Account 1		
<input type="button" value="Confirm"/> <input type="button" value="Cancel"/>						

4.2.5. Key as Send

The key "Key as Send" has the same function as the soft key "Dial".

Reminding: This key is not available while pre-dial. It's the only way to press the soft key "Dial" or pickup the handset to finish pre-dial.

The default value is "#", and it could be set as "*". If set the value as "disable", it means the function "Key as Send" is forbidden.

Set "Key as Send" via web : **Phone**→**Features**→**General Information**→**Key As Send**.

4.2.6. Hotline

Once "Hotline" has been set, the phone will automatically dial the hotline via the 1st available line if the phone stay in the standby status exceed the specified waiting time and there is no input (or input something and then all deleted).

Hotline	
1. Hotline	10000
2. Hotline timeout	4

Save 123 Delete Back

Item	Description
Hotline	Set up the hotline number, the value is null by default.
Hotline timeout	Set up the timeout for hotline activation, 4 seconds by default.

Set hotline via web: **Phone**→**Features**→**General Information**→**Hotline**.

Set Hotline Time-out(secs) via web: **Phone**→**Features**→**General Information**→**Hotline Time-out(secs)**.

4.2.7. Anonymous Call







This function includes making anonymous calls and blocking all anonymous calls.

If switch on the feature "Anonymous call", all outgoing calls will be displayed as anonymous call in the other side.

If switch on the feature "Rejection", all incoming anonymous calls will be blocked automatically.

Anonymous call	
1. Accounts	Account 1
2. Anonymous call	Disable
3. Call on code	
4. Call off code	
5. Rejection	Disable
6. Reject on code	

Save Switch Back

Item	Operation	Description
Accounts	press the soft key "Switch" or  .  to modify,	Select the Account for anonymous call.
Anonymous Call	press the soft key "Switch" or  .  to modify,	Switch on/off the feature of making anonymous calls.
Call On Code	The Number key, "*" key, and "#" are permitted to be input.	Set the feature code to turning on anonymous call, the phone enables anonymous call by sending the feature code to the server
Call Off Code	The Number key, "*" key, and "#" are permitted to be input.	Set the feature code to turning off anonymous call, the phone disables anonymous call by sending the feature code to the server
Rejection	press the soft key "Switch" or  .  to modify	Switch on/off the feature of blocking anonymous calls.
Reject On Code	The Number key, "*" key, and "#" are permitted to be input.	Set the feature code to turning on anonymous call rejection, the phone enables anonymous call rejection by sending the feature code to the server
Reject Off Code	The Number key, "*" key, and "#" are permitted to be input.	Set the feature code to turning off anonymous call rejection, the phone disables anonymous call rejection by sending the feature code to the server

Set Anonymous Call via web: **Account**→**Basic**→**Select the Account**→**Anonymous Call**.

Set Anonymous Call Rejection via web: **Account**→**Basic**→**Select the Account**→**Anonymous Call Rejection**.

4.3. Contacts


The content of Directory includes local phonebook and blacklist. Enter Directory as follow,

1. Press the soft key "Contacts" when the phone is standby

2. Press the navigation key 

3. Press the menu key , and then select "Contacts"

Configure the "Contacts" via Web:

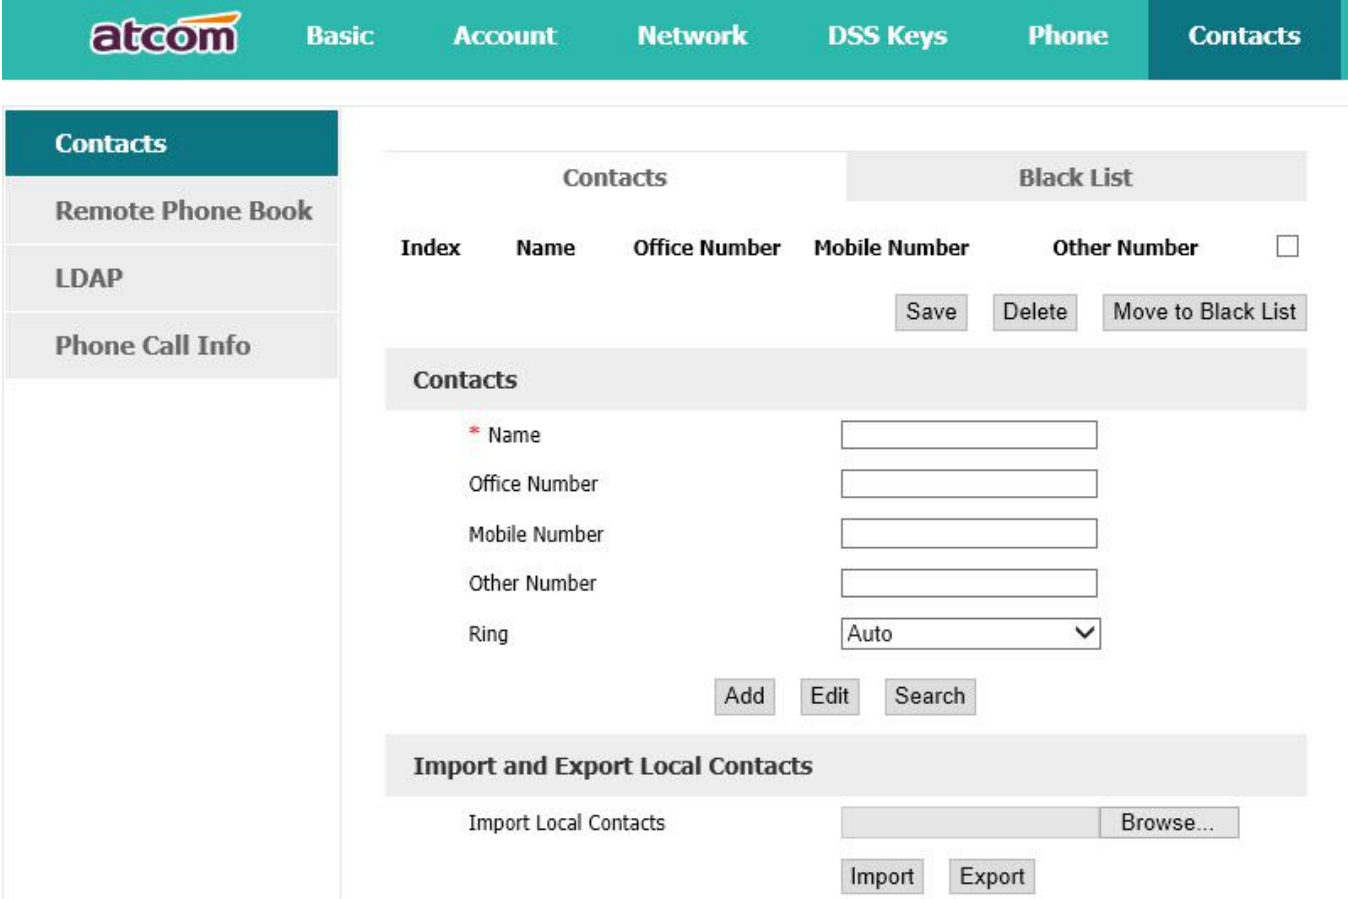

All operations on Directory via Web will be not active until click "Save". When too much item existed in the Directory, it will be an easy way to search by keyword about name, Office Number, Mobile Number or other Number. The exactly matched item will be listed, otherwise you will be prompted "Not find the specified contact".

Local Contacts



Name and phone number are permitted to be saved into the local phonebook, and up to 400 items. It's able to add new group, new contact, edit or delete exist contact or dial, also move the item to blacklist.

Make calls from directory


Path to set on the phone:  → **Contacts** → **Local Contacts** → **All contact** → **Select the record** → **Dial**.



If only one phone number saved with the selected contact person, the phone number will be dialed while calling the contact person.

If multiple phone numbers saved with the selected contact person, user must select one of the phone numbers for dialing while calling the contact person.

Add new contact

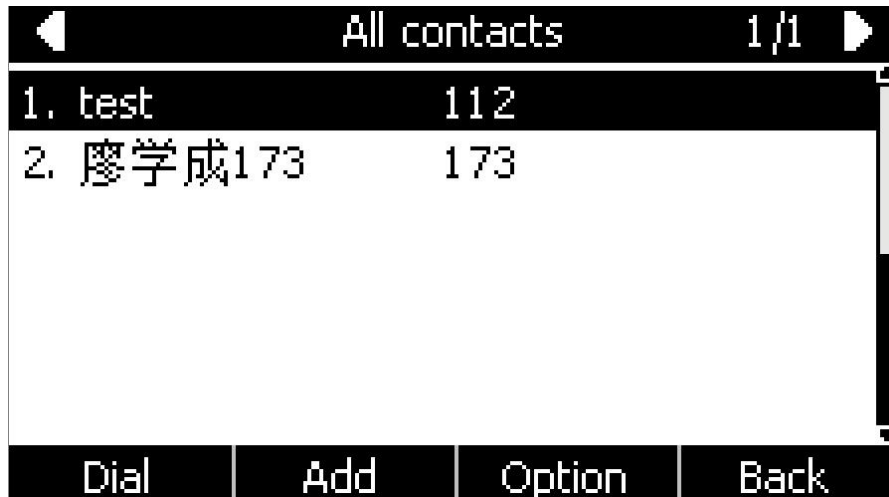Path to add new contact on the phone: **Press**  → **Contacts** → **Local Contacts** → **All contact** → **Add**.




Item	Operation	Description
Name	Input by number keys, "*" or "#" key, change the input-method via pressing the soft key "abc"	It's used to identify different phone numbers. Any reduplicated names are not permitted in the contacts.
Office	Input by number keys, "*" or "#" key, change the input-method via pressing the soft key "abc"	You can save three numbers at most. While calling a contact person in contacts, the phone will redirect to the page that to select one number to dial when multiple numbers are saved for one contact record
Mobile		
Other		
Ring	Press the key   or the soft key "Switch" to modify the account ID.	It's used to bundle each item with the corresponding ringtone, and the optional value is "Auto" or "Ringtone 1" to "Ringtone 10". "Auto" means the default ringtone will be played if new incoming call happened, otherwise the selected ringtone will be played.

Add new contact via web: **Contacts**→ **Contacts**→**Input messages**→**Add**→**Save**.

Edit the contact

User must re-edit the contact item while updating one item of local phonebook.

Path to edit the contact on the phone: Press  → **Contacts**→**Local Contacts**→**All contacts**→ **Select the item to edit**→**Option**→**Edit**→**OK**.

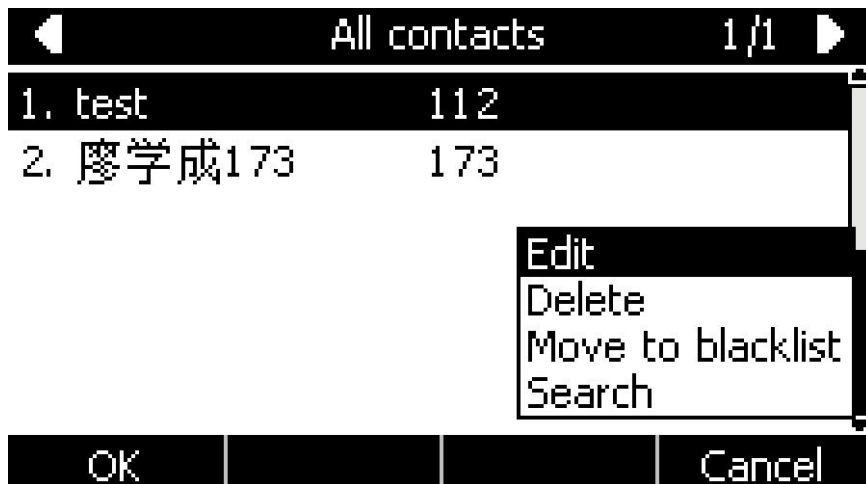

Edit the contact item via Web: **Contacts**→ **Contacts**→**click on the item to edit**→**modify messages**→**Click "Edit"**→**Click "Save"**.


Delete the contact

Path to delete the contact on the phone: Press  →**Contacts**→**Local Contacts**→**All contacts**→**Select the item to delete**→**Option**→**Delete**→ **OK**→**OK**.

Press the soft key "**Cancel**" at the Warning UI to stop deleting.

Delete the contact item via web: **Contacts**→ **Contacts**→**Select the item to delete**→**Click on "Delete"**→**Click on "Save"**.

Move to blacklist

Path to move to blacklist on the phone: Press  →**Contacts**→**Local Contacts**→**All contacts**→**Select the item to move**→**Option** →**Move to Blacklist** → **OK**→**OK**.

Press the soft key "**Cancel**" at the Warning UI to stop this operation.


Move the contact item to blacklist via web : **Contacts**→ **Contacts**→**Select the item to move to blacklist**→**Click on "Move to black List"**→**Click on "Save"**。

Blacklist

The purpose of blacklist's feature is to block the phone number inside blacklist to call the host phone number, but it's available for the hosted phone number to call any phone number in the black list.

The most operation of blacklist is the same as local phonebook except for the feature “Move to Contacts”, it means moving an item of blacklist to local phonebook to resume the phone number to dial the host phone number normally.

Remote phonebook

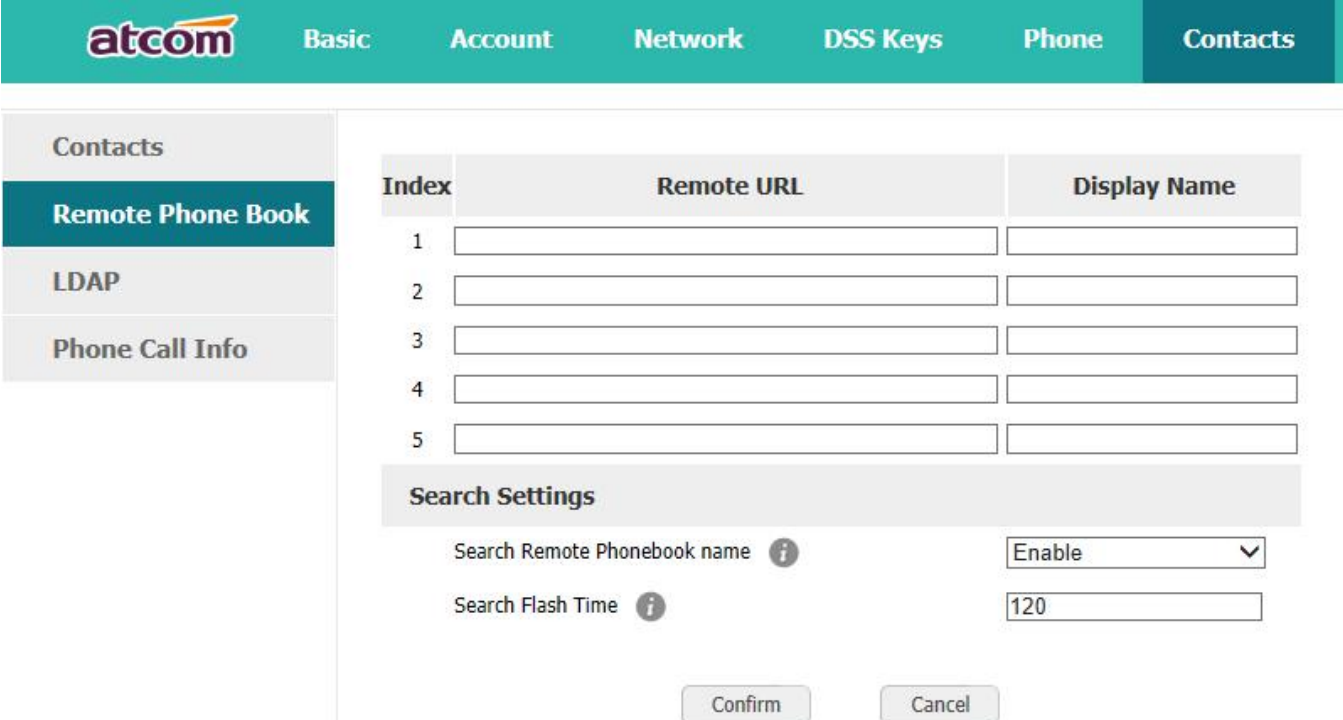

The screenshot shows the 'Remote Phone Book' configuration page. At the top, there is a navigation bar with tabs for 'Basic', 'Account', 'Network', 'DSS Keys', 'Phone', and 'Contacts'. The 'Contacts' tab is selected. On the left side, there is a sidebar menu with options: 'Contacts', 'Remote Phone Book' (highlighted), 'LDAP', and 'Phone Call Info'. The main content area contains a table with 5 rows for configuring remote phonebooks. Each row has an 'Index' column, a 'Remote URL' input field, and a 'Display Name' input field. Below the table is a 'Search Settings' section with two options: 'Search Remote Phonebook name' (set to 'Enable') and 'Search Flash Time' (set to '120'). At the bottom of the settings section are 'Confirm' and 'Cancel' buttons.

Index	Remote URL	Display Name
1	<input type="text"/>	<input type="text"/>
2	<input type="text"/>	<input type="text"/>
3	<input type="text"/>	<input type="text"/>
4	<input type="text"/>	<input type="text"/>
5	<input type="text"/>	<input type="text"/>




















Search Settings

Search Remote Phonebook name i

Search Flash Time i

1. Remote URL: Set a remote phonebook download path. Support the TFTP,FTP,HTTP and HTTPs server.
2. Display name: Set a display name on the phone.
3. Search Remote Phonebook name: Select “Yes” or “No” to enable or disable search remote phonebook name.
4. Search Flash Time: Set the search flash time. Defaults to 120.

LDAP

LDAP 	
Enable LDAP	<input type="text" value="Disable"/> 
LDAP Name Filter	<input type="text"/> 
LDAP Number Filter	<input type="text"/> 
Server Address	<input type="text"/> Port <input type="text" value="389"/> 
Base	<input type="text"/> 
Username	<input type="text"/> 
Password	<input type="text"/> 
Max Hits	<input type="text" value="50"/>  (1~32000)
LDAP Name Attributes	<input type="text"/> 
LDAP Number Attributes	<input type="text"/> 
LDAP Display Name	<input type="text"/> 
Protocol	<input type="text" value="Version 3"/> 
LDAP Sorting Results	<input type="text" value="Disable"/>  
LDAP Lookup For Incoming Call	<input type="text" value="Disable"/>  
LDAP Lookup For dialing	<input type="text" value="Disable"/>  



1. Enable LDAP: Select "Yes" or "No" to enable or disable LDAP.
2. LDAP Name Filter: Set the name of the LDAP search attributes.
3. LDAP Number Filter: Set the number of the LDAP search attributes.
4. Server Address: Set the LDAP server domain name or IP address.
5. Port: Set the LDAP server port number. Default to 389.
6. Base: Set the LDAP search base.
7. Username: Set the LDAP server username.
8. Password: Set the LDAP server password.
9. MA41(w) Hits(1~32000): Set the mA41(w)imum number of search results from the LDAP server.

10. LDAP Name Attributes: Set the name of the attributes returned from the server.
11. LDAP Number Attributes: Set the number of the attributes returned from the server.
12. LDAP Display Name: The contact record the name of the displayed on the LCD.
13. Protocol: Set the phone to support LDAP protocol version. Defaults to version 3.
14. LDAP Sorting Results: Set the phone to sort the search results.
15. LDAP Lookup For Incoming Call: Set the phone for LDAP search when incoming call.
16. LDAP Lookup For dialing: Set the phone for LDAP search when dialing,

4.4. History


It includes the dialed, answered, missed and transferred items, maximum 400 items.

User is able to review or delete any item of the history on the phone. And enter "History" in below ways:

1. Press the key 
2. Press the key , then select "History"
3. Press the soft key "History" while phone is under standby status

When any operations above is done, details info of all recent history will be listed on LCD display, include the type of each item, the name of contact person, date and time.

Also, user is able to check the detail info of call history via Web, but only review operation is allowed while accessing via web.

 Basic Account Network DSS Keys Phone Contacts						
Contacts						
Remote Phone Book						
LDAP						
Phone Call Info						
Dialed List		Missed List		Received List		
Forwarded List	Index	Datetime	Duration	Local Identity	Name	
Tel Number						
	1	2017/5/5 10:03	00:00:02	115@172.16.0.237:5060	114	114@172.16.0.237
	2	2017/5/5 09:46	00:00:36	115@172.16.0.237:5060	120	120@172.16.0.237

Make calls from history


Path to make calls from history on the phone: **Enter history UI**→**Select the item to dial**→**Dial**.




Delete one item from history

Path to delete one item from history on the phone: **Enter history UI**→**Select the item to delete**→**Delete**.

Check the details of history

Path to check the details of history on the phone: **Enter history UI**→**Select the item to check**→**Option**→**Detail**→Press  or "OK".

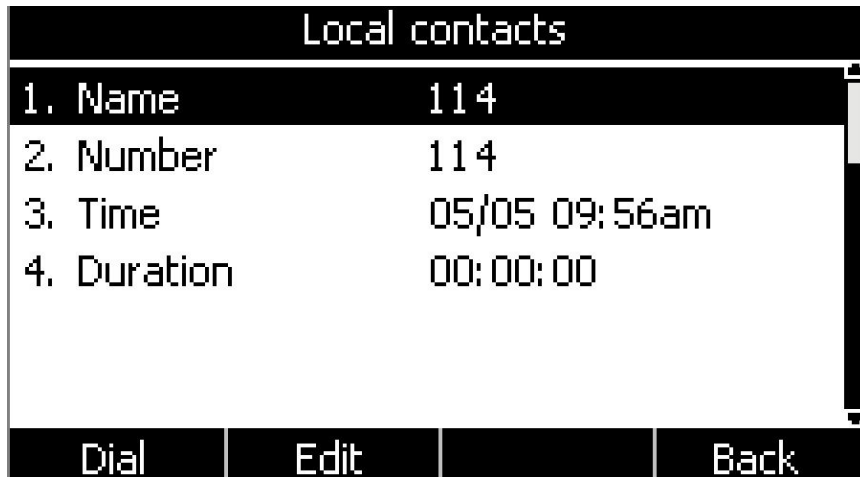


Add to Contact

1. Enter "Call History" → Select the target item → Option → add to Contact → Press the key  or soft key "Confirm".

At this moment an "edit" page will be popped up.

please move the navigation key to check more

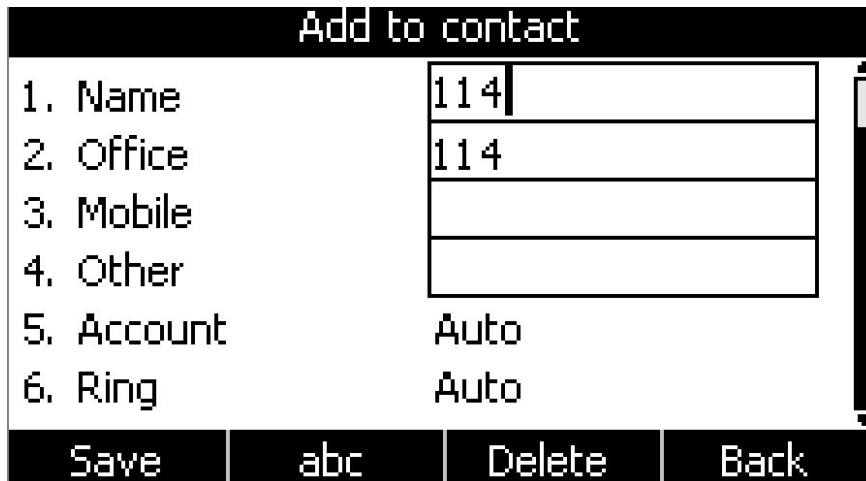

The item of "Office", "Mobile" and "Other" are able to be switched over between "Old Number" and current number. If the being operated item had been saved already in the contacts, "Old Number" will be the previous value, otherwise "Old Number" will be null. The UI page of "Add to Blacklist" is the same as above.

2. **Modify the contact name, phone number and ringtone.**

3. **Press the key  or soft key "Saved" to save the modification, press the key**



or soft key “Cancel” to Cancel the modification.

Add to Blacklist

For more info about this operation, please refer to [Add to Contact](#).

Delete all History’s records

Path to delete all history’s records on the phone: **Enter History UI→Option→Delete all→**

Press  or “OK”.

4.5. Message

User will benefit from the feature of voicemail when they’re not available to answer an incoming call or missed some incoming calls. However this feature must be supported by Server. Voicemail must be set up before using it.

Set the voicemail via Web: **Account→Basic→Select an account to configure→Voice Mail.**

Sometimes the voicemail push can’t be reached in time, because the configuration problem with Server, you must configure some related parameter via Web to make the phone automatically send its request to Server for getting voicemail info.

Set “Subscribe for MWI” via web: **Account→Advanced→Subscribe for MWI.**

Set “MWI Subscription Period(secs)” via web: **Account→Advanced→MWI Subscription Period(secs).**

Set Voice Mail

There are 3 different methods to set up the voicemail,

1. Press the key  after factory set

2. Press the key  for a while

3. Press the key  → Select "Message" → Setup Voicemail

Set voice mail			
1. 118	6750		
2. Account 2			
3. Account 3			
4. Account 4			
Save	123	Delete	Back

View Voice Mail

User is able to check voicemail in below ways:

1. Setup voicemail number → Press the key 

2. Press the key  → Select "Message" → "View Voicemail"

View voice mail			
1. 118	0 New 0 Old mail		
2. Account 2	Unregistered		
3. Account 3	Unregistered		
4. Account 4	Unregistered		
Connect			Back


Select the account with "N new N old mail", and press the soft key "Connect", the corresponding voicemail will be connected.

Select the account with "Unregistered", and press the soft key "Connect", the setting page of Voicemail will be popped up.

4.6. Settings

Basic settings and Advanced settings will be introduced in this part,

Basic Settings

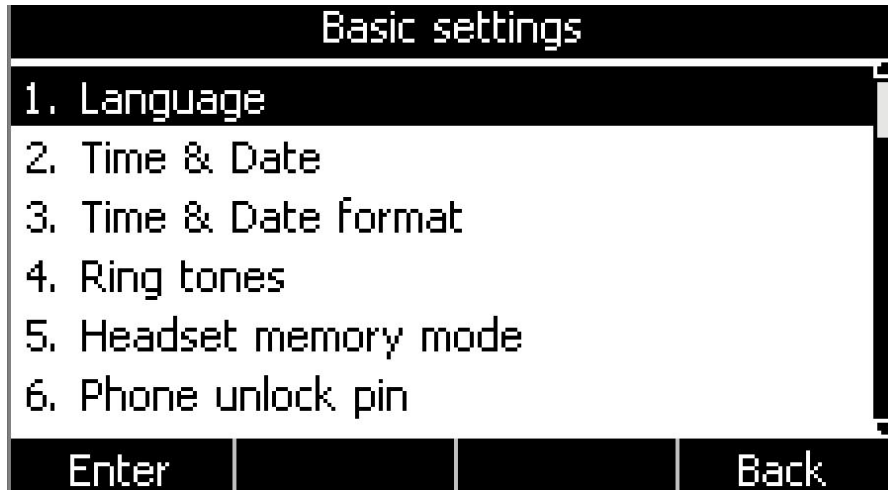

1. Language

 
A40/A41(W) supports multiple language, to modify the language, please press the key



→ **Setting** → **Basic setting** → **Language** → **Select the target language and press the soft key "Save"**.




Set language via web: There is a drop-down box at the top left corner of webpage, choice one kind of language and click, the language will take effect immediately.



atcom
Basic
Account
Network
DSS Keys
Phone
Contacts

Status

Wizard

Version 

Model	A41W
Firmware Version	2.3.3.c8ddd
Hardware Version	6


2. Time & Date





Time & Date will be displayed at the standby page of A40/A41(W), and these info will be related with all process of IP phone. "Time & Date" can be gained by NTP Server automatically or set manually.

NTP Setting

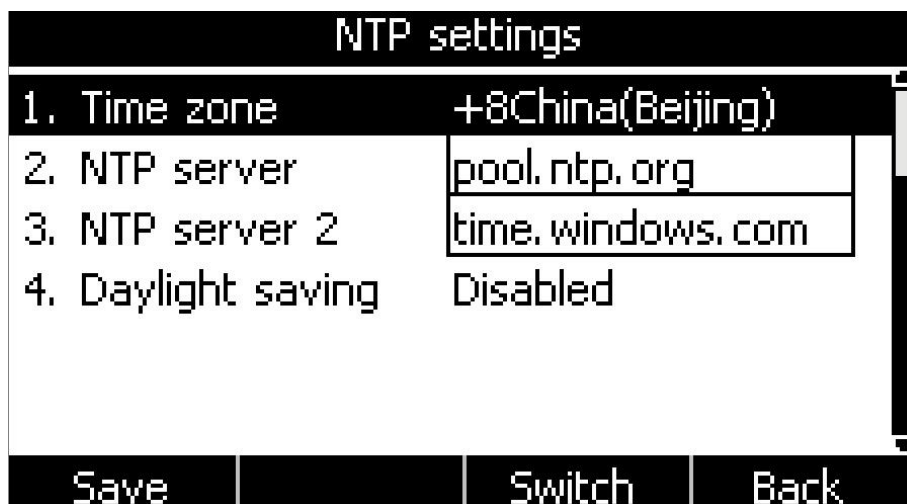


Path to set on the phone: Press  → **Settings** → **Basic Settings** → **Time & Date** → **NTP Settings**.

Please move the navigation key to check more:



Item	Operation	Description
Time Zone	Press the key  .  or soft key "Switch" to modify it.	Select the correct Time Zone for the IP phone.
NTP Server	Key in the IP address of domain name by the number keys, "*" , "#"	Specify the NTP Server
Secondary NTP Server	Key in the IP address of domain name by the number keys, "*" , "#"	Specify the standby NTP Server
Daylight-Saving Time	Press the key  .  or soft key "Switch" to modify it.	Optional: "Off", "Auto" or "Manual". And "Manual" mean user must set this via web.


Set NTP via Web: **Phone**→**Preference**.

Time Zone	<input type="text" value="+8 China(Beijing)"/>	
Primary NTP Server	<input type="text" value="pool.ntp.org"/>	
Secondary NTP Server	<input type="text" value="time.windows.com"/>	
Update Interval(secs)	<input type="text" value="1000"/>	
daylight	<input type="text" value="Disable"/>	
Fixed Type	<input checked="" type="radio"/> By Date <input type="radio"/> By Week	
Start Month	<input type="text" value="January"/>	
Start Date	<input type="text" value="1"/>	
Start Hour of Day	<input type="text" value="0"/>	
Start Day of Week	<input type="text" value="Sunday"/>	
Start Week of Month	<input type="text" value="First In Month"/>	
Stop Month	<input type="text" value="January"/>	
Stop Date	<input type="text" value="1"/>	
Stop Hour of Day	<input type="text" value="0"/>	
Stop Day of Week	<input type="text" value="Sunday"/>	
Stop Week of Month	<input type="text" value="First In Month"/>	
Offset(minutes)	<input type="text" value="0"/>	


Item	Operation	Description
Time Zone	Click drop-down box to select	Set a time zone matches condition
Primary NTP Server	Manual input	The primary NTP server that provide time and date
Secondary NTP Server	Manual input	The secondary NTP server that provide time and date
Update Interval(secs)	Manual input	The interval that the phone gains time and date from NTP server
Daylight	Click drop-down box to select	A switch to control the status that whether to enable the daylight or not
Fixed Type	Radio content	Daylight fixed type, only the specified items are configurable
Start Month	Click drop-down box to select	The month that the daylight rule begins taking effect
Start Date	Manual input	The day that the daylight rule begins taking effect
Start Hour of Day	Manual input	The hour of day that the daylight rule begins taking effect
Start Day of Week	Click drop-down box to select	The day of week that the daylight rule begins taking effect
Start Week of Month	Click drop-down box to select	The week of month that the daylight rule begins taking effect
Stop Month	Click drop-down box to select	The month that the daylight rule stops taking effect
Stop Date	Manual input	The day that the daylight rule stops taking effect
Stop Hour of Day	Manual input	The hour of day that the daylight rule stops taking effect
Stop Day of Week	Click drop-down box to select	The day of week that the daylight rule stops taking effect
Stop Week of Month	Click drop-down box to select	The week of month that the daylight rule stops taking effect

Offset(minutes)	Manual input	The offset time that daylight rule takes effect
------------------------	--------------	---

Manual Settings

Path to set on the phone: Press  → **Settings** → **Basic Settings** → **Time & Date** → **Manual Settings**.

Please move the navigation key to check more:

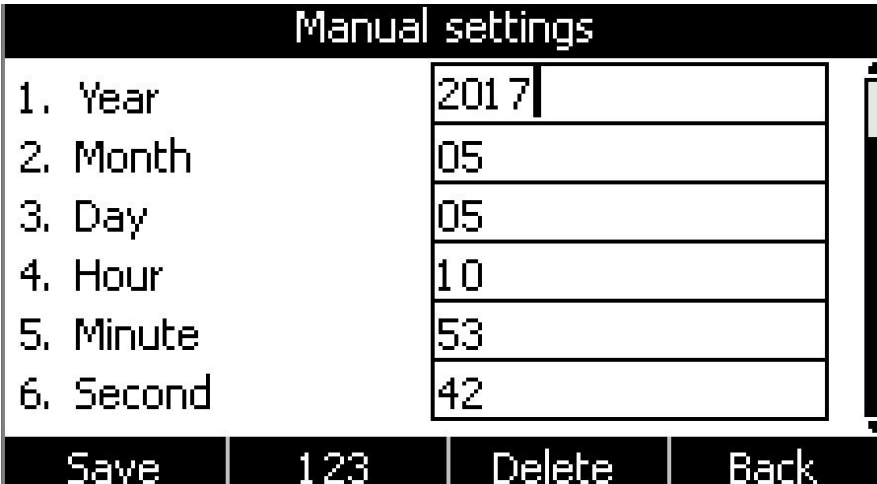

Manual settings	
1. Year	2017
2. Month	05
3. Day	05
4. Hour	10
5. Minute	53
6. Second	42
Save	123
Delete	Back

Item	Operation	Description
Year	Key in "Year" with the number key, "*" and "#"	Date info
Month	Key in "Month" with the number key, "*" and "#"	
Day	Key in "Day" with the number key, "*" and "#"	
Hour	Key in "Hour" with the number key, "*" and "#"	Time info
Minute	Key in "Minute" with the number key, "*" and "#"	
Second	Key in "Second" with the number key, "*" and "#"	

Set the Time & Date manually via web: **Phone** → **Preference**.

Manual Time

Date

Time

Item	Operation	Description
Manual Time	Click the drop-down box to select	A switch to control the status whether to enable the manual time or not
Date	Manual input, click "Generated Date" to gains date from the computer	Set date manually
Time	Manual input, click "Generated Time" to gains time from the computer	Set time manually

3. Time&Date Format

Path to set on the phone: Press → **Settings** → **Basic Settings** → **Time & Date Format**.

please move the navigation key to check more:



Item	Optional	Example of result
Clock	12 hour	03:30pm


	24 hour	15:30
Date	WWW MMM DD	TuesdayOct.16
	DD-MMM-YY	16-Oct.-16
	YYYY-MM-DD	2016-10-16
	DD/MM/YYYY	16/10/2016
	MM/DD/YY	10/16/16
	DD MMM YYYY	16,Oct.,2016
	WWW DD MMM	Tuesday,17,Oct.



Set the Time &Date Format via Web: **Phone**→**Preference**

4. Ringtones

10 different ringtones have been provided by A40/A41(W) for selection. Path to set on the

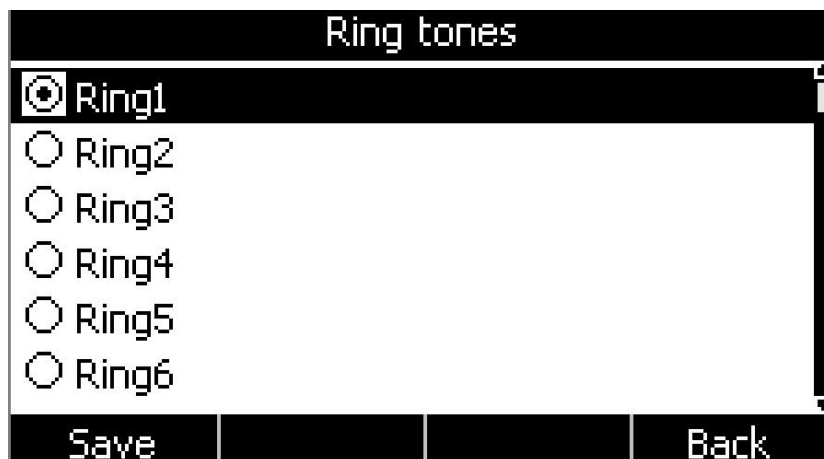
phone: **Press the key**  →**Settings**→**Basic Settings**→**Ringtones**.




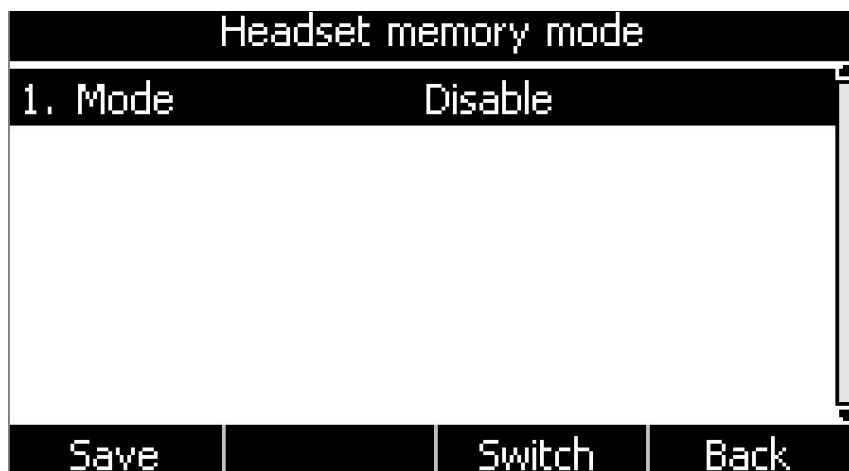
For the selected ringtone, there is a dot inside the circle. Press the key   to select other ringtone for playing.

Set ringtones via Web: **Account**→**Basic**→**Ring tones**.

5. Headset Memory Mode

Headset memory mode can be used to control the default device to make or answer calls. This function is disabled by default, which means the phone will communicate with others by hand-free when pre-dial or making calls from history or contacts, and so is the situation that pressing "Answer" soft key to accept an incoming call. Once this function is enabled, the phone will make or answer calls by headset. Long press  can change the status of the "Headset Memory Mode".


This function can be configured on the phone only: Press  → **Settings** → **Basic Settings** → **Headset Memory Mode**.



6. Phone Unlock PIN

Phone Unlock PIN: Unlock the phone locked conditions.

please move the navigation key to check more and press the cancel key to back the function,

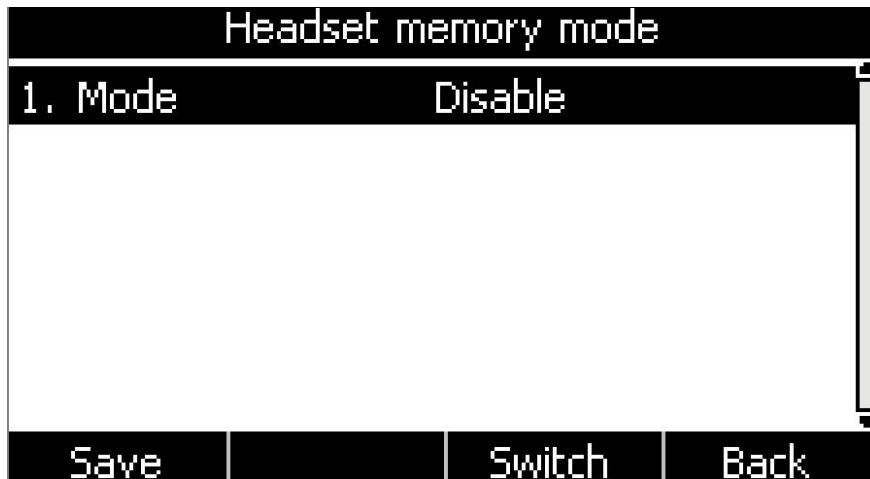

Item	Operation	Description
Current PIN	Manual input	Input the phone current PIN, Default factory pin:123
New PIN	Manual input	Set the new PIN
Confirm PIN	Manual input	Confirm the new PIN

Advanced Settings

Password will be requested while accessing the page of "Advanced Settings". This password is the same as the user's("admin") to access.

1. Account

path to set the account info on phone: **Press**  **→Settings→Advanced Settings→Input password→Accounts.**

Account 1	
1. Activation	Enable
2. Label	
3. Display name	test118
4. Register name	
5. User name	118
6. Password	*****
Save	Switch
	Back

Item	Description
Activation	The status of account, the default is "Enable", if set this as "Disable", the account will be forbidden.
Label	It will show on the phone, can skip this item
Display Name	Parameter that in the SIP, if the SIP Server is supportable, this name will show on the phone of called
Register Name	The register ID, supplied by SIP Server, can skip this item
User Name	Account ID
Password	Password for account
SIP Server	The address that accounts needed to register from
Outbound Status	The status of Outbound Server, "off" by default
Outbound Proxy	IP address of Outbound Agency
Stun Status	The status of Stun Server, "off" by default
Stun Server	IP address of Stun Server

Configure account via web: **Account**→**Basic**

atcom		Basic	Account	Network	DSS Key	Phone	Contacts
Basic	Account	Account 1					
Codecs	Register Status	Register failed					
Advanced	Account Active	Enable					
	Label	<input type="text"/>	<i>i</i>				
	Display Name	<input type="text"/>	<i>i</i>				
	Register Name	<input type="text"/>	<i>i</i>				
	* User Name	<input type="text"/>	<i>i</i>				
	Password	<input type="text"/>	<i>i</i>				
	* SIP Server	<input type="text"/>	Port 5060	<i>i</i>			
	Enable Outbound Proxy Server	Disable		<i>i</i>			
	Outbound Proxy Server	<input type="text"/>	Port 5060	<i>i</i>			
	Transport	UDP		<i>i</i>			
	NAT Traversal	Disable		<i>i</i>			
	STUN Server	<input type="text"/>	Port 3478	<i>i</i>			

2. Set Password

The password for Advanced Settings also is used for Web access as the role "admin". Path to

set password on phone: Press  → **Settings** → **Advanced Settings** → **Input password** → **Set Password**.


Set password

1. Current PWD	<input style="width: 95%;" type="text"/>
2. New PWD	<input style="width: 95%;" type="text"/>
3. Confirm PWD	<input style="width: 95%;" type="text"/>

Save
abc
Delete
Back

Item	Description
Current PWD	The current password for web access as the role of "admin", it's "admin" by default.
New PWD	To set the new password, blank is acceptable.
Confirm PWD	Input the new password again, to confirm the new password.

Set password via Web: **Phone**→**Security**.

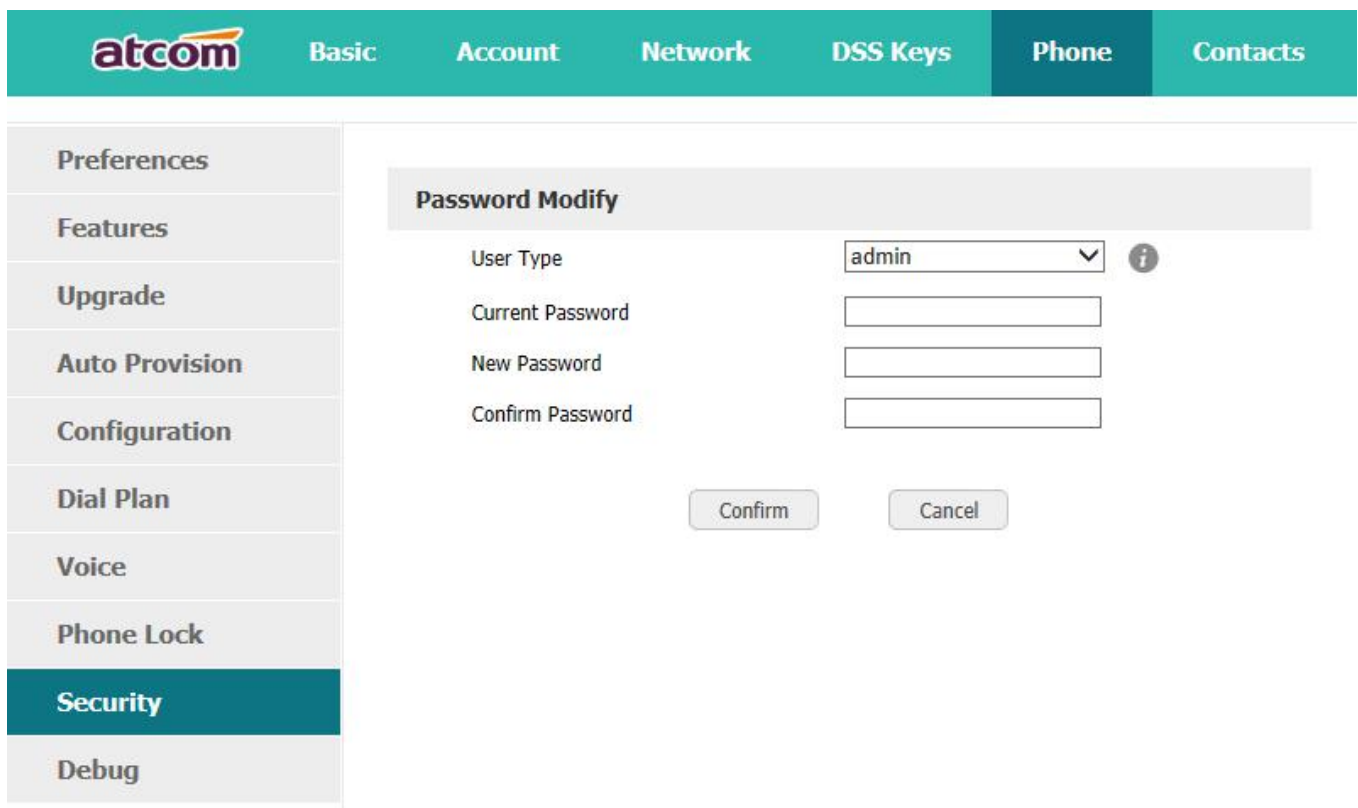


The screenshot shows the atcom web interface with the 'Phone' tab selected. The left sidebar contains a menu with 'Security' highlighted. The main content area displays the 'Password Modify' form. The form includes a 'User Type' dropdown menu set to 'admin', and three input fields for 'Current Password', 'New Password', and 'Confirm Password'. Below the input fields are 'Confirm' and 'Cancel' buttons.

3. Network

Path to set network parameters on phone: **Press**  → **Settings**→**Advanced Settings**→**Input the password**→**Network**.

please move the navigation key to check more:

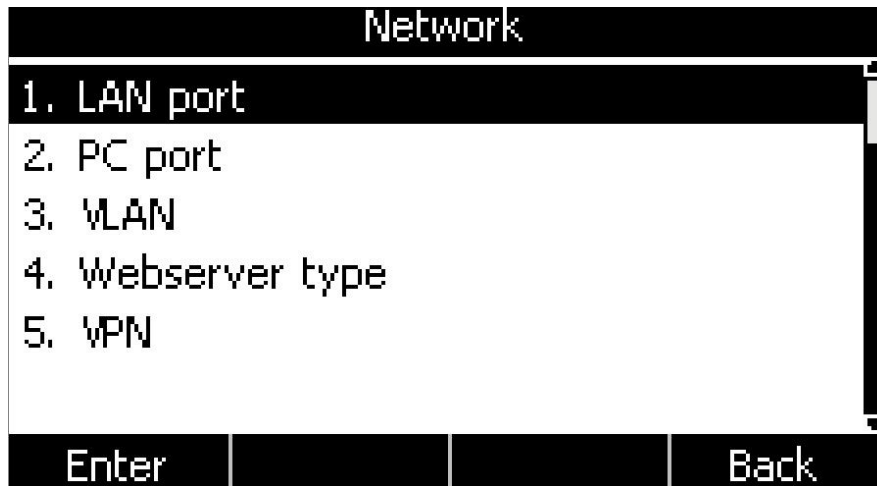

➤ LAN Port

Connect the phone with local network via LAN port, to gain IP address in 3 ways: DHCP, Static. Set the LAN port via Web: **Network**→ **Basic**.

DHCP

The phone gains IP address via DHCP and Static DNS by default.

STATIC IP

If the phone gains IP address via Static IP, user must input the IP address info manually.

➤ PC Port

Only bridge mode support by PC port.

➤ VLAN

The feature of VLAN must be supported by network switch, and by default this feature it's not activated.

Set the VLAN via Web: **Network** →**Advanced**→**VLAN**.


➤ Webserver Type

Webserver type include HTTP and HTTPS, different access port will be required by different access type, user is able to confirm the port info at the webpage, HTTP & HTTPS are both permitted by default.

Set Webserver type via Web: **Network**→**Advanced**→**WebServer**→**Type**.

➤ **VPN**

A40/A41(W) support the feature of Open VPN, and this feature must be supported by VPN Server.

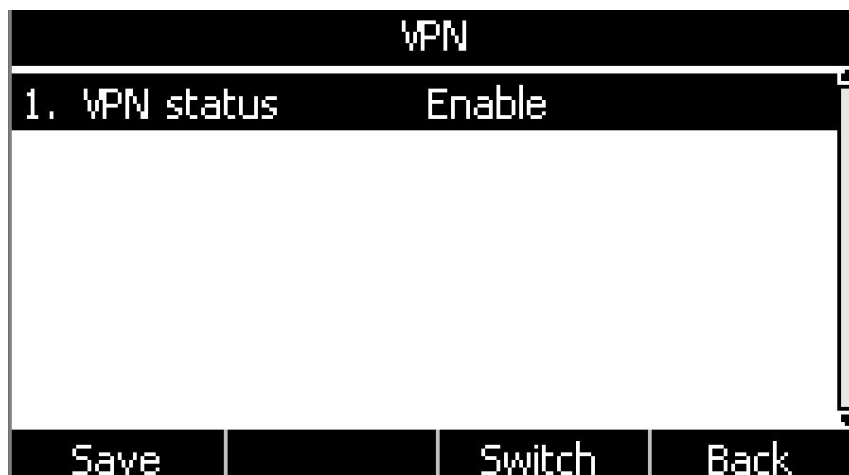

Set the VPN via Web: **Network** →**Advanced**→**VPN**.



➤ **LLDP**

A40/A41(W) supports LLDP, and enable in default. If the phone is connected to a switch and using LLDP, the switch would notifies IP phone of VLAN information.

Set the LLDP via Web: **Network** → **Advanced** → **LLDP**

atcom		Basic	Account	Network	DSS Keys	Phone	Contacts
Basic							
Wi-Fi							
Advanced							
LLDP ⓘ							
Active				Enable			
Packet Interval(1~3600s)				60			
CDP ⓘ							
Active				Enable			
Packet Interval(1~3600s)				60			

➤ 802.1X

IEEE 802.1X authentication is an IEEE standard for Port-based Network Access Control(PNAC), part of the IEEE 802.1 group of networking protocols. It offers an authentication mechanism for devices to connect to a LAN or WLAN.

It supports protocol EAP-MD5, EAP-TLS, EAP-PEAP/MSCHAPv2, EAP-TTLS/EAP-MSCHAPv2, EAP-PEAP/GTC and EAP-TTLS/EAP-GTC for 802.1X authentication.

Set the 802.1X via the webpage: **Network** → **Advanced** → **802.1X**

802.1X ⓘ	
Mode	Disable ▾
Anonymous Identity	<input type="text"/>
Identity	<input type="text"/>
Md5 Password	<input type="text"/>
CA Certificates	<input type="text"/> Browse...
	Import
Device Certificates	<input type="text"/> Browse...
	Import

4. Keypad Lock

It support enable or disable the keypad lock feature, if enable, **the default password is 123**:

Please move the navigation key to check more

Keypad lock	
1. Lock enable	Disabled
2. Lock type	Menu key
3. Lock timeout	10
4. Unlock before	Disabled

Save Switch Back

Keypad lock via webpage: **phone**→**Phone lock**

atcom
Basic
Account
Network
DSS Keys
Phone
Contacts


<div style="background-color: #f2f2f2; padding: 2px;">Preferences</div> <div style="background-color: #f2f2f2; padding: 2px;">Features</div> <div style="background-color: #f2f2f2; padding: 2px;">Upgrade</div> <div style="background-color: #f2f2f2; padding: 2px;">Auto Provision</div> <div style="background-color: #f2f2f2; padding: 2px;">Configuration</div> <div style="background-color: #f2f2f2; padding: 2px;">Dial Plan</div> <div style="background-color: #f2f2f2; padding: 2px;">Voice</div> <div style="background-color: #00a68f; color: white; padding: 2px;">Phone Lock</div> <div style="background-color: #f2f2f2; padding: 2px;">Security</div> <div style="background-color: #f2f2f2; padding: 2px;">Debug</div>	<div style="background-color: #f2f2f2; padding: 5px; margin-bottom: 10px;">Phone Lock</div> <table style="width: 100%;"> <tr> <td style="width: 60%;">Keypad Lock Enable</td> <td><input type="text" value="Disable"/></td> </tr> <tr> <td>Keypad Lock Type</td> <td><input type="text" value="Menu Key"/></td> </tr> <tr> <td>Phone Unlock PIN(0~15 Digit)</td> <td><input type="text" value="..."/></td> </tr> <tr> <td>Phone Lock Time Out(0~3600s)</td> <td><input type="text" value="10"/></td> </tr> <tr> <td>Emergency</td> <td><input type="text" value="110,120,119,911"/> i</td> </tr> </table> <div style="text-align: center; margin-top: 10px;"> <input type="button" value="Confirm"/> <input type="button" value="Cancel"/> </div>	Keypad Lock Enable	<input type="text" value="Disable"/>	Keypad Lock Type	<input type="text" value="Menu Key"/>	Phone Unlock PIN(0~15 Digit)	<input type="text" value="..."/>	Phone Lock Time Out(0~3600s)	<input type="text" value="10"/>	Emergency	<input type="text" value="110,120,119,911"/> i
Keypad Lock Enable	<input type="text" value="Disable"/>										
Keypad Lock Type	<input type="text" value="Menu Key"/>										
Phone Unlock PIN(0~15 Digit)	<input type="text" value="..."/>										
Phone Lock Time Out(0~3600s)	<input type="text" value="10"/>										
Emergency	<input type="text" value="110,120,119,911"/> i										

1. Keypad Lock Enable: select "Yes" or "No" to enable or disable keypad lock


2. Keypad Lock Type: Menu key/Function keys/All keys/Answer call only.
3. Phone Unlock PIN(0~15 Digit):set the phone unlock PIN. Range: 0~15 digit.
4. Phone Lock Time Out(0~3600s): set the phone lock time out. Range: 0~3600s
5. Emergency :set emergency number. Default to 110.120.119 and 911.

5. Reboot

After the restart, the phone will back to standby interface.

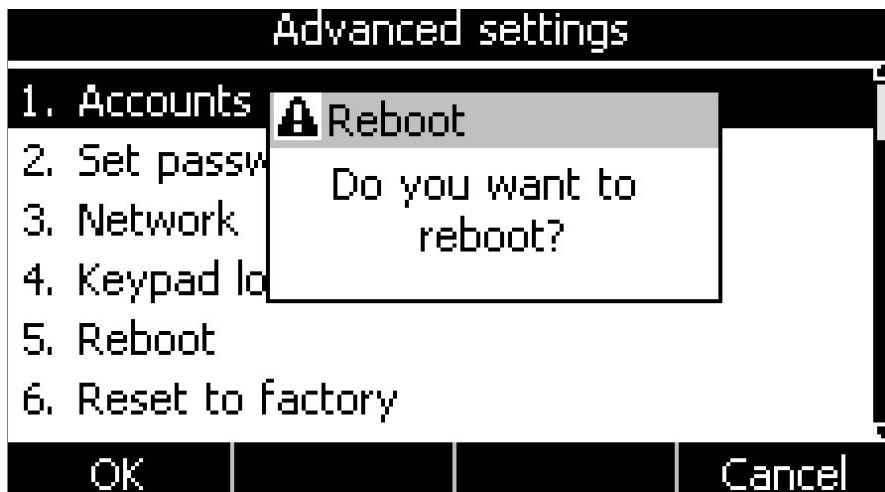


Reboot via webpage: **Phone→Upgrade→Reboot**

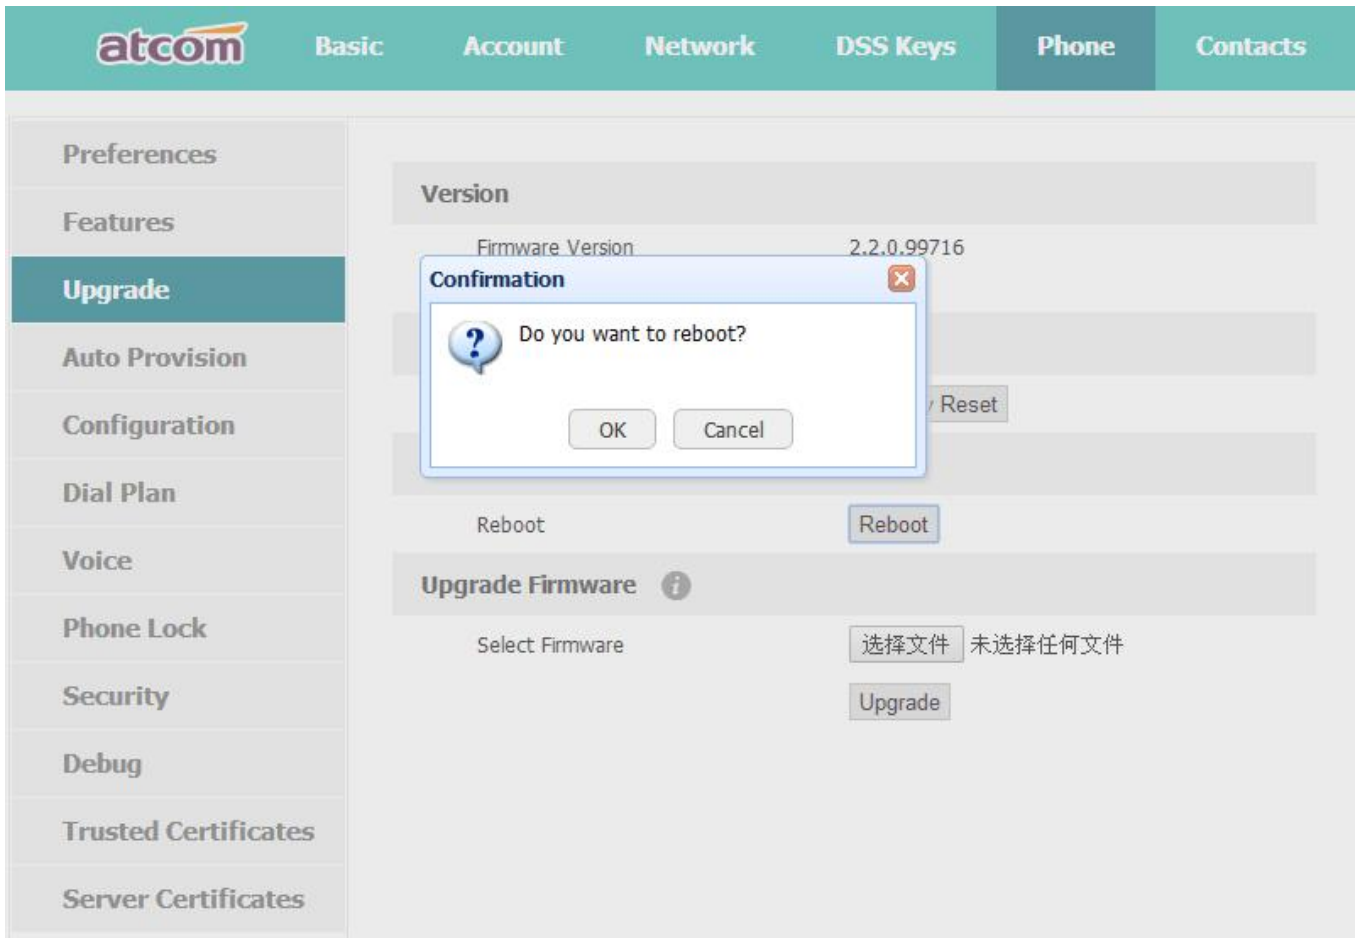


6. Reset to factory

Once reset to factory, all parameter settings will back to the factory default value, and all configure will be cleared, users must be careful on this.

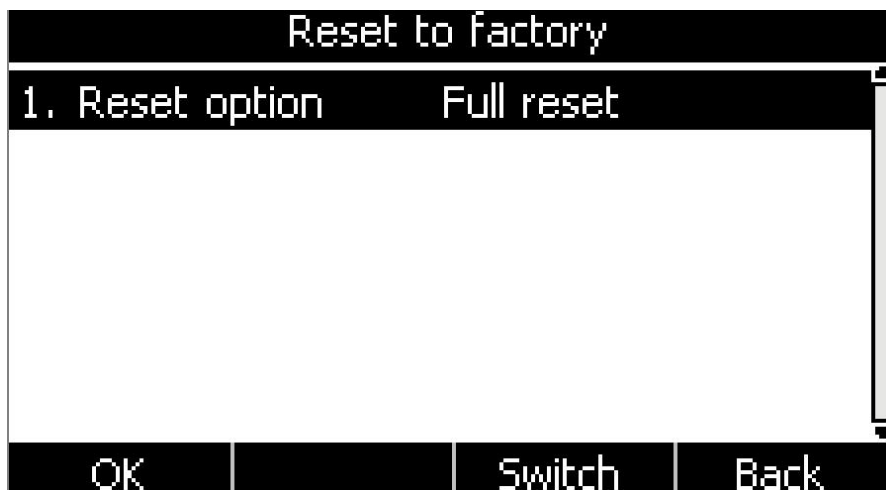

Reset Option: **Full Reset**, **Config Reset** and **UserData Reset**.

Reset to factory via Web: **Phone→Upgrade→Reset to Factory.**

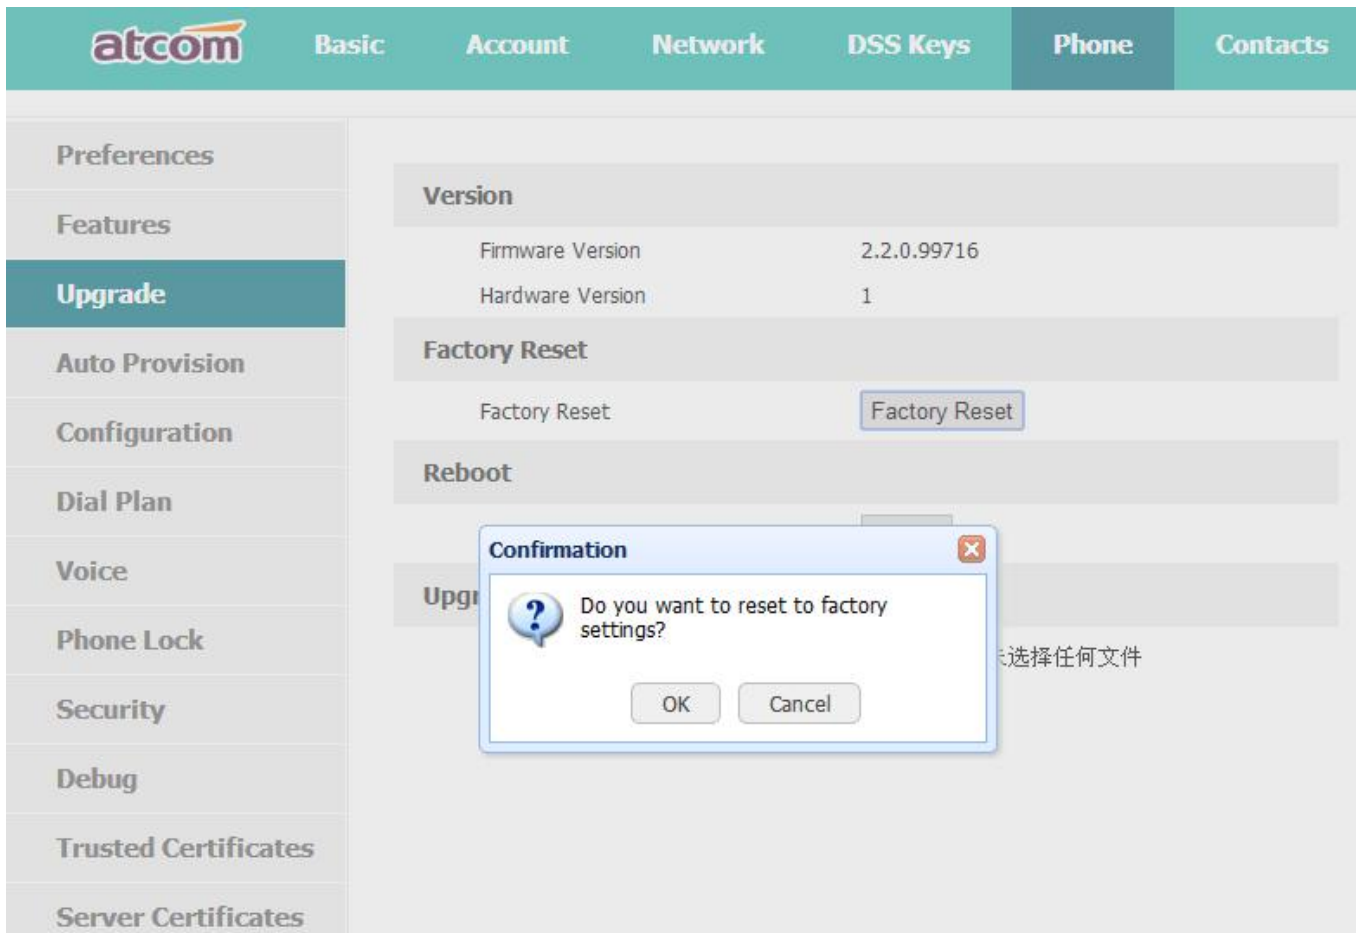



4.7. Display

For more convenient, users are able to adjust the contrast grade and backlight of the main LCD display.



1. Slave Contrast


There are 9 different contrast grades for options, press the soft key "Switch" or the

key   for modification, 8 is the default value.



2. Backlight


Backlight is the brightness of LCD, also it has been defined as 9 different grades. The number "9" means the lightest.

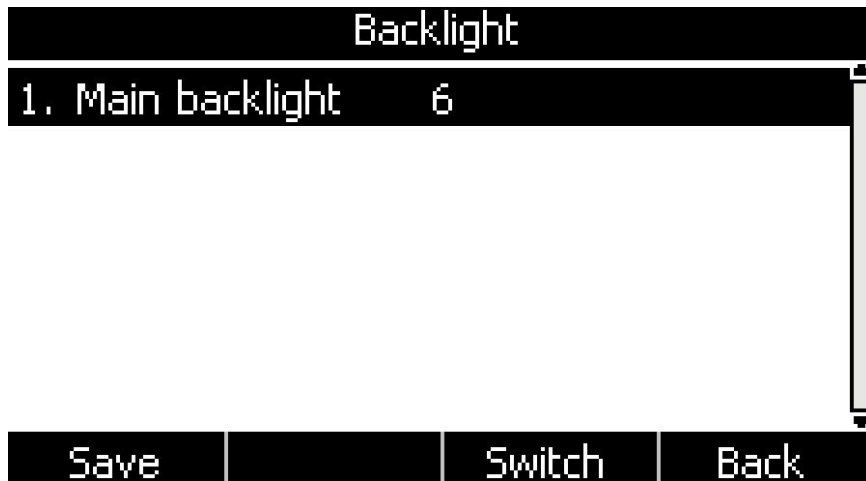



5. Advanced Feature

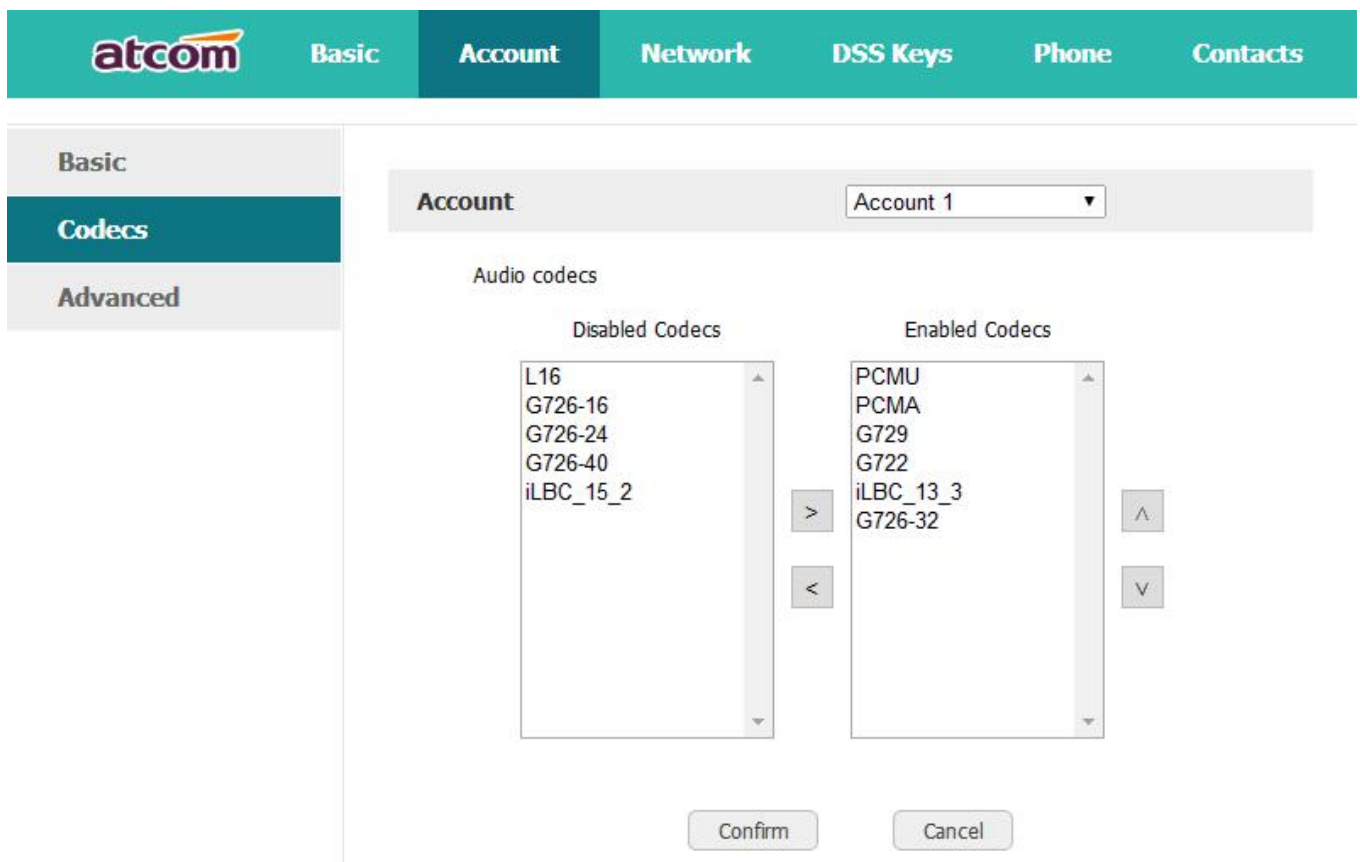

5.1. Codecs

A40/A41(W) support multiple codecs, users can select the codes via Web.



 means to enable the item of “Disabled Codes” ;

 means to disable the item of “Enabled Codes” ;

Click the button  or  to sort all enabled codes, the top item has the highest priority.


Note: Multiple different items of G726, iLBC should not activated simultaneously.

5.2. Capture and Upgrading

Capture package:

It would record the phone current info.

Via webpage: **phone**→**Debug**→**PCAP Feature**

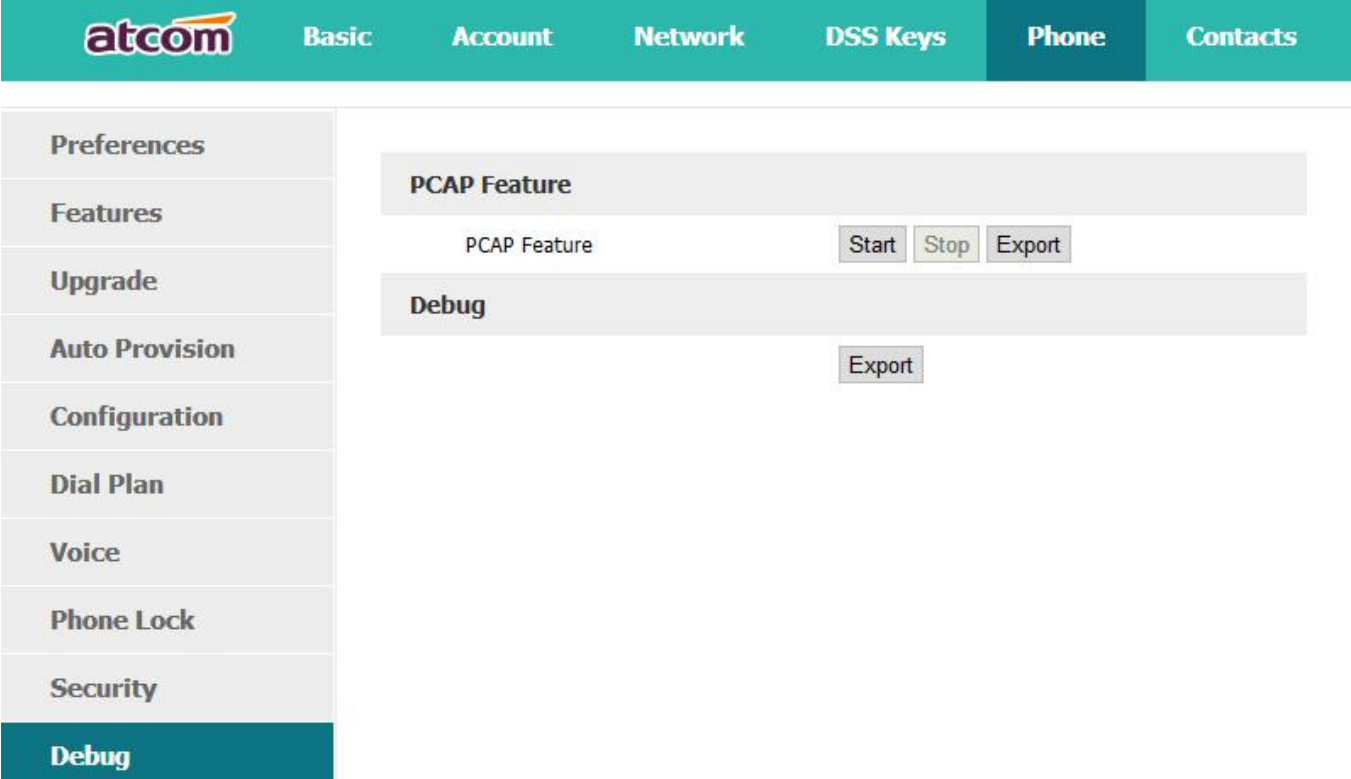


The screenshot shows the ATCOM web interface with a teal header containing the logo and navigation tabs: Basic, Account, Network, DSS Keys, Phone, and Contacts. On the left is a vertical sidebar menu with options: Preferences, Features, Upgrade, Auto Provision, Configuration, Dial Plan, Voice, Phone Lock, Security, and Debug (highlighted in teal). The main content area displays two sections: 'PCAP Feature' and 'Debug'. The 'PCAP Feature' section includes a 'PCAP Feature' label and three buttons: 'Start', 'Stop', and 'Export'. The 'Debug' section includes an 'Export' button.

Click the button "Start" to start the capture and click the button "Stop" to end the capture. Then click the button "export" to download the capture file.

Upgrade firmware:

Via webpage: **phone** → **Upgrade** → **Upgrade Firmware**

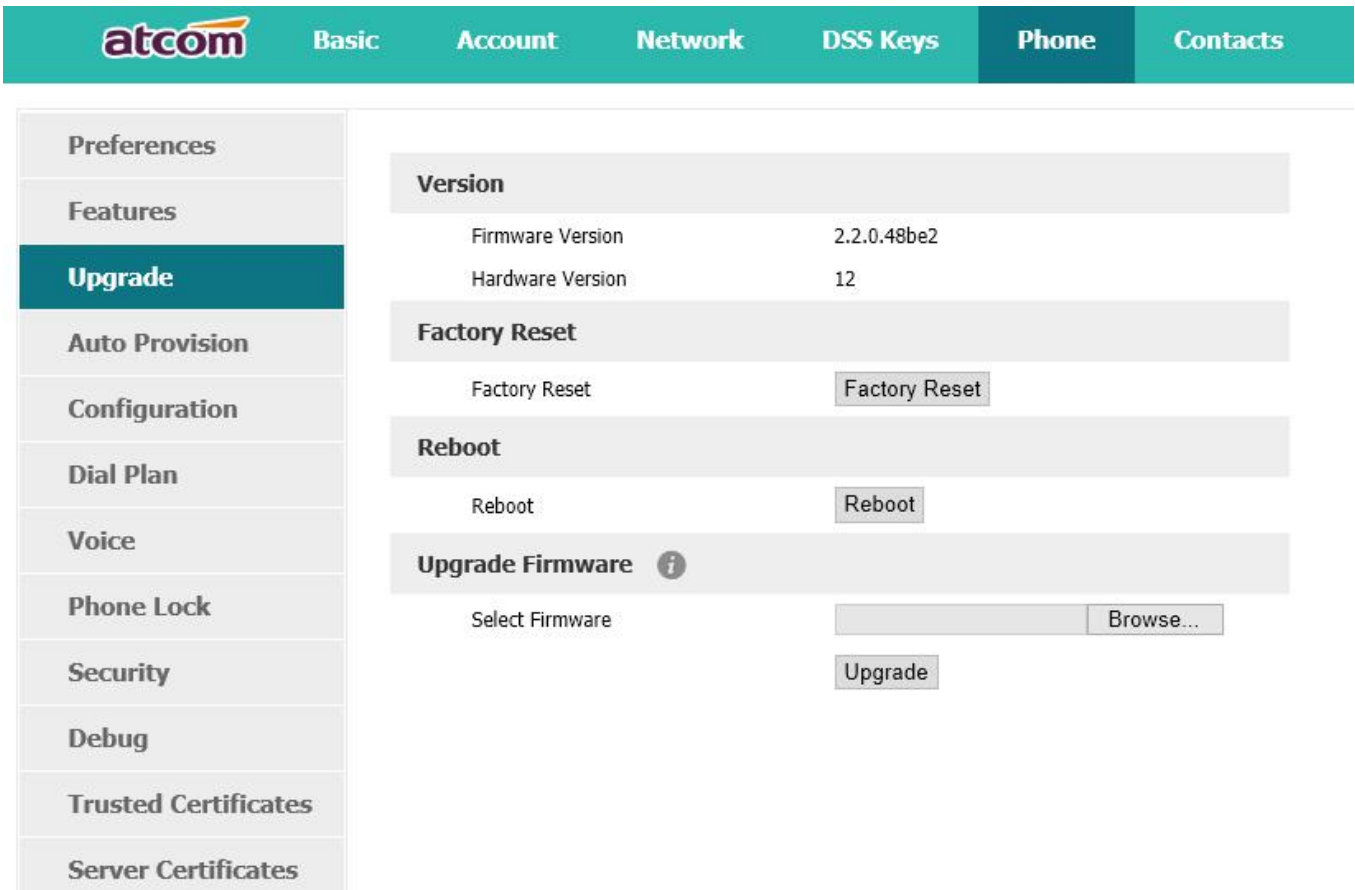


The screenshot displays the ATCOM web interface. At the top, there is a navigation bar with the ATCOM logo and tabs for 'Basic', 'Account', 'Network', 'DSS Keys', 'Phone', and 'Contacts'. The 'Phone' tab is selected. On the left side, there is a sidebar menu with options: 'Preferences', 'Features', 'Upgrade' (highlighted), 'Auto Provision', 'Configuration', 'Dial Plan', 'Voice', 'Phone Lock', 'Security', 'Debug', 'Trusted Certificates', and 'Server Certificates'. The main content area shows the 'Upgrade Firmware' section. It includes a 'Version' section with 'Firmware Version' (2.2.0.48be2) and 'Hardware Version' (12). Below that is a 'Factory Reset' section with a 'Factory Reset' button. Then a 'Reboot' section with a 'Reboot' button. The 'Upgrade Firmware' section has an information icon, a 'Select Firmware' label, a text input field, a 'Browse...' button, and an 'Upgrade' button.






Before upgrading the firmware of phone, users are suggested to check the version of current firmware. Click the button "Choose file" to select the target local file and click "Upgrade" to process upgrading, this will cost a couple of minutes. And after reboot, the phone will be upgraded successfully.

4.3. Auto Provision

User is able to configure the phone to upgrade automatically.

	
Basic	Account
Network	DSS Keys
Phone	Contacts

Preferences	
Features	
Upgrade	
Auto Provision	
Configuration	
Dial Plan	
Voice	
Phone Lock	
Security	
Debug	


Auto Provision	
PnP Active	<input checked="" type="radio"/> On <input type="radio"/> Off 
DHCP Active	<input checked="" type="radio"/> On <input type="radio"/> Off 
Provisioning Server	<input type="text"/> 
User Name	<input type="text"/>
Password	<input type="text"/> 
Common AES Key	<input type="text"/>
MAC-Oriented AES Key	<input type="text"/>
Check New Config	<input checked="" type="radio"/> On <input type="radio"/> Off 
Repeatedly	<input type="radio"/> On <input checked="" type="radio"/> Off
Interval(minutes)	<input type="text" value="1440"/>
Weekly	<input type="radio"/> On <input checked="" type="radio"/> Off
Time	<input type="text" value="03"/> : <input type="text" value="00"/> -- <input type="text" value="03"/> : <input type="text" value="00"/>
Day of week	<input checked="" type="checkbox"/> Sunday <input checked="" type="checkbox"/> Monday <input type="checkbox"/> Tuesday <input type="checkbox"/> Wednesday

Item	Description
PnP Active	Select "On" or "Off" to enable or disable PNP automatic updates
DHCP Active	Select "On" or "Off" to enable or disable DHCP option automatic updates
Provisioning Server	The address to save control file for auto upgrading, it can filled by http, https, tftp and ftp server, for example, tftp://192.168.1.111
User Name	The username to access the file server
Password	The password to access the file server
Common AES Key	Configures the plaintext AES key for decrypting the Common CFG file
MAC-oriented AES KEY	Configures the plaintext AES key for decrypting the MAC-oriented CFG file

Check New Config	If set this parameter as "On", the phone will do some check for upgrading, and it will upgrade automatically once the conditions are met
Repeatedly	If set this parameter as "On", the phone will do some check for upgrading after "Interval(minutes)", and it will upgrade automatically once the conditions are met
Interval(minutes)	This parameter is configurable once the Repeatedly is "On"
Weekly	If set this parameter as "On", the phone will do the check for upgrading at a certain time in every week
Time	The time range that the phone do the check for upgrading every week, and it's configurable once the Repeatedly is "On"
Day of week	The day of week that the phone do the check for upgrading every week, and it's configurable once the Repeatedly is "On"

5.4. Export & Import configuration file

If user wants to set the same configuration on multiple phones, there is an easy way that export the configuration file from one phone and then import this file into other phones. This operation can be completed via Web only.

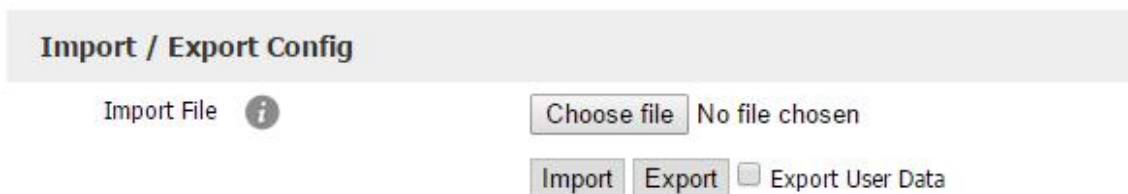

5.4.1. Export configuration file

There is two ways to export the configuration files,

- Don't check the "Export User Data" and click "Export" directly, it will export the template of the configuration file;
- Check the "Export User Data" and then click "Export", it will export a configuration file that carries with user's configured data.

To modify the exported configuration file, you should to decompress it until you get a file names as configuration.

Name	Date modified	Size
configuration	2014/10/10 11:14	
config.tar.gz	2014/10/10 11:14	9 KB

The content of configuration file listed as below,

Name	Date modified	Type	Size
Calllist	2014/10/10 11:14	File folder	
Contacts	2014/10/10 11:14	File folder	
DialRule	2014/10/10 11:14	File folder	
Features	2014/10/10 11:14	File folder	
Network	2014/10/10 11:14	File folder	
Phone	2014/10/10 11:14	File folder	
Setting	2014/10/10 11:14	File folder	
voip	2014/10/10 11:14	File folder	

5.4.2. Import configuration file

Click the button "Choose file" to select the target file for importing, and then click the button "Import". The phone will be rebooted a couple of minutes later, and import successfully.

Note: If some part of the configuration file has been modified manually, it must be re-compressed as the format of "tar.gz" in Linux

5.5. Export System log

When the phone doesn't working well, System log is the best assistant tools for troubleshooting, all operation details has been recorded. This operation is available via Web only.

Export System Log

Log Location Local Server i

Server Name

Log Level

Item	Description
Log Location	You can import the system log to local PC or remote Server.
Server Name	User must fill the address of server if you choose to export the system log to remote server.
Log Level	It defines the detail of system log as 5 different levels, Fatal, Error, Warning, Info, and Debug. The Debug level is the most detailed.

5.6. Dial plan

The customized Dial Plan are available , for example , the rule of replacement, Instant Calling, Area code, Restriction of Outbound.


Before customizing the dial plan, user must learn the basic grammar as below,

.	Represent a character or multiple ones, e.g., "6." can match "66","678","6plus" and so on
x	Represent one character, e.g., "6x" can match "61","62", " 6s" and so on
[]	Represent a character in one range, e.g., " 83[0-5]18618"can match"83018618","83488618" and so on
()	Represent the combination of characters, e.g., "([1-9])([2-7])3" can match "923","153","773" and so on
\$	Add a number after the character "\$" to define the location of the characters, e.g., use the prefix " 8([1-3])(.)" to replace "7\$2", the phone will call "7837" after dialing out "82837"

Note: Any operations (add, modify or delete) on the current dial plan will be not effective until click "Save".

5.6.1. Replace Rule

Dial plan "Replace Rule" means to replace a batch of complicated character string by some simple characters, to make a speed dial.

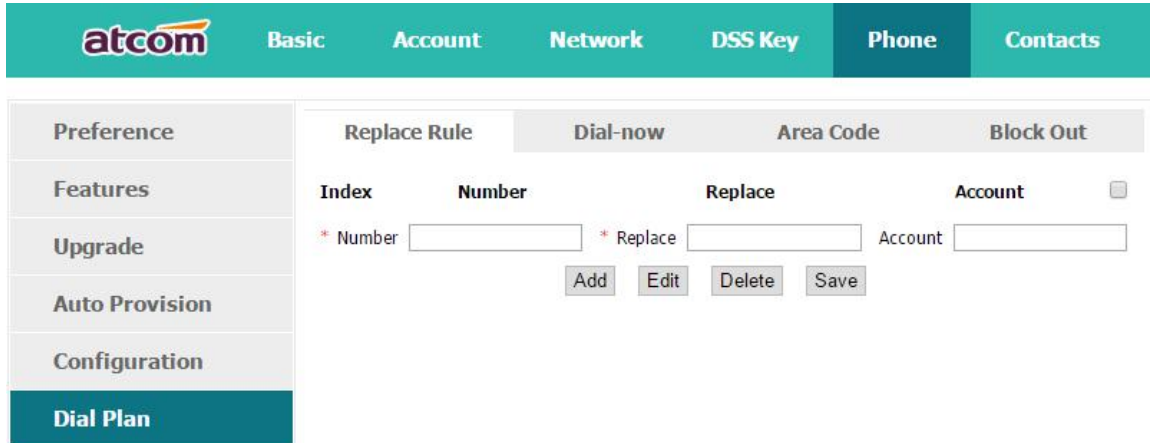


Item	Description	Sample
Number	The string works as replacer, not null	Set Number as "6",
Replace	The string that to be replaced, not null	Set Replace as "6032",
Account	The account to apply this dial plan, blank or 1~4 is valid.	Set Account as "1".
Add	Multiply replace rules can be configured in one phone, after one replace dial plan configured, click this button to add a new one	It means when dial 6, the phone will dial 6032.
Edit	The existed replace dial plans are editable. The specified dial plan should be selected until it is covered with orange and the input fields "Number" and "Replace" shows the details correctly. After modifying, click button "Edit" to make it to be effect	
Delete	Delete one added or saved replace dial plan or multiple ones, click the frame after the specified replace dial plan before delete it, and then click button "Delete"	

Save	Any alteration won't take effect until the button "Save" is clicked.	
-------------	--	--

5.6.2. Dial-now

Dial plan "Dial-now" permits the corresponding phone to be dialed instantly without pressing the soft key "Dial", once the input has been matched. It works like a hotline.

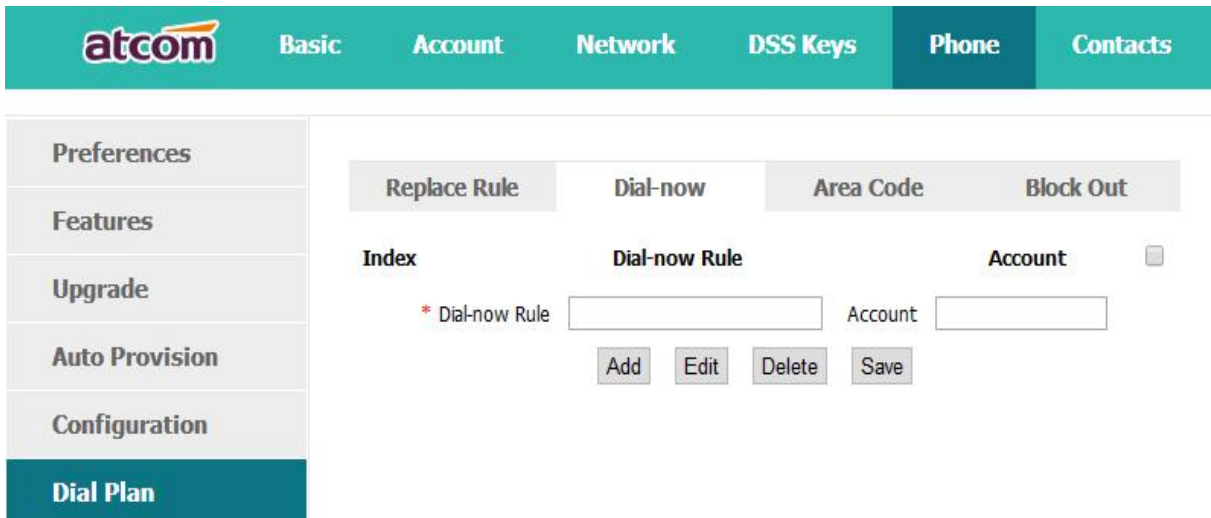


Item	Description	Sample
Dial-now Rule	The string to be dialed out automatically by the phone	Set "Dial-now Rule" as 6xxx, keep "Account" as null
Account	The account to apply this dial plan, blank or 1~4 is valid.	It means the phone will use the 1st available account to call 6033 after "Dial-now Time-out" seconds when inputting four figures begin with 6
Add	Multiply dial-now rules can be configured in one phone, after one dial-now dial plan configured, click this button to add a new one	
Edit	The existed dial-now dial plans are editable. The specified dial plan should be selected until it is covered with orange and the input fields "Number" and "Dial-now" shows the details correctly. After modifying, click button "Edit" to make it to be effect	Note: Dial-now rule is different with hotline. The Dial-now rule will take effect when input numbers

Delete	Delete one added or saved dial-now dial plan or multiple ones, click the frame after the specified dial-now dial plan before delete it, and then click button "Delete"	matches the dial plan, and hotline takes effect in situation that the phone is in dialing state
Save	Any alteration won't take effect until the button "Save" is clicked.	

Set "Dial-now Time-out" via web: **Phone**→**Features**→**General Information**→**Dial-now Time-out (secs)**.

5.6.3. Area Code

Dial plan "Area Code" has been defined to identify each different area. To call a phone number of other areas, user must add the area code to be in front of the phone number. For convenience, area code has been recommended to be configured while frequently dialing to that type of phone number.

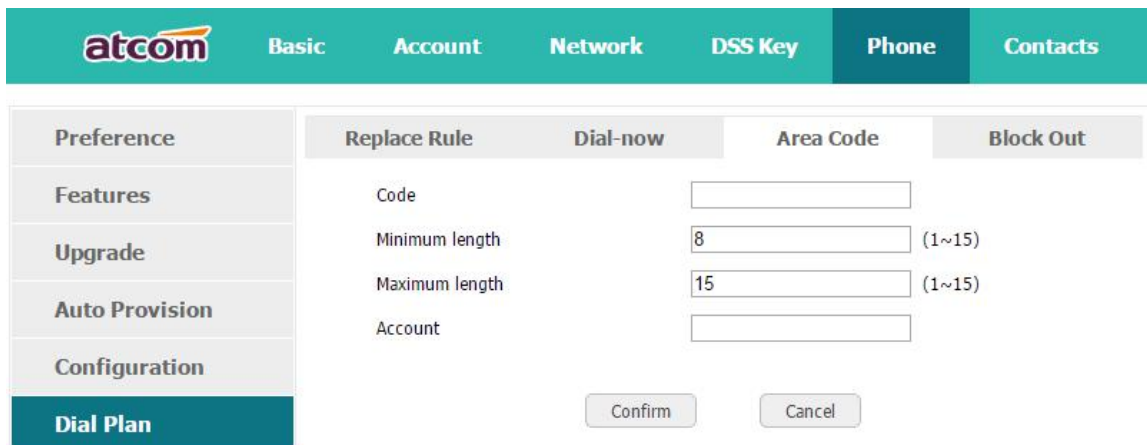

Item	Description	Sample
Code	The area code dialed before the number	Set "Code" as "0086577",
Minimum length	The minimum length of the number input to activate the area code dial plan	Set "Minimum length" as "5".
MA41(w)imum length	The mA41(w)imum length of the number input to activate the area code dial plan	It means when dialing 83018618 with the 5 th account, the phone will dial 0086577 before it.
Account	The account to apply this dial plan, blank or 1 is valid.	Note: If the length of the number input in the dial UI

Confirm	Apply this dial plan	is not between minimum length and the mA41(w)imum length, area code will not take effect
Cancel	Recover all input fields to the state that saved at latest time	

5.6.4. Block Out

Dial plan "Block out" is used to prohibit the phone number outgoing call from some accounts.

Item	Description	Sample
Block Out Number	The number that prohibited	Set "Block Out Number 1"as"10086" It means the phone will enter the "Call End" UI when dial "10086"
Account	The account to apply this dial plan, blank or 1	
Confirm	Apply this dial plan	
Cancel	Recover all input fields to the state that saved at latest time	


6. WI-FI(only for A41W)

6.1. Configure the WIFI on the phone

1. Press “**Menu**”→“**WIFI Settings**”→“**Switch**”, open the WIFI connection mode.
2. Please move the navigation key to check the WIFI you want to connect, Press “**Connect**”, then input the correct wifi password.
3. Return to the standby interface, and phone successful connected to the wifi.
4. The last option is Manual setting, press ‘Enter’, then input the SSID and password.

6.2. Configure the WIFI on the WEB

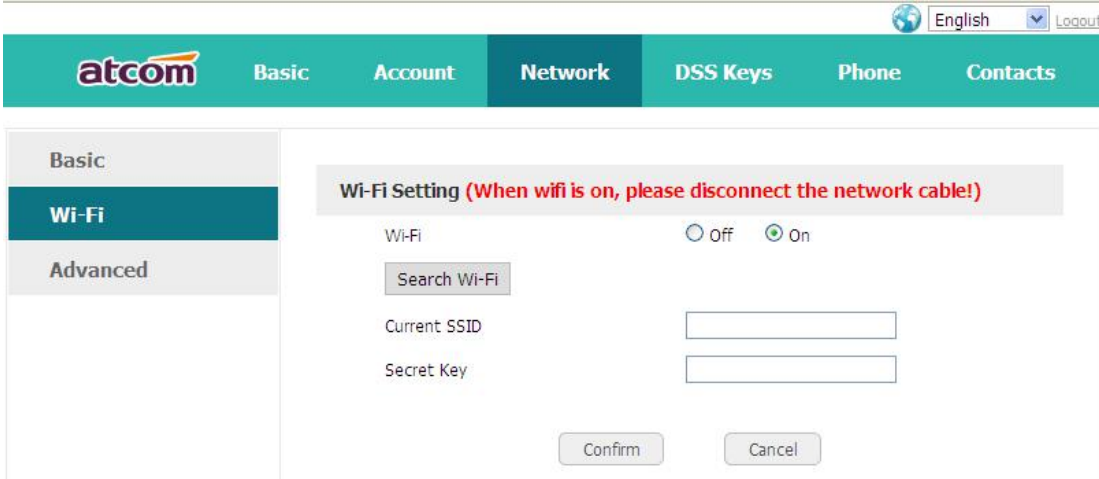

A41(w)W connect to network via Wi-Fi acquiescently, click “**Search Wi-Fi**” button to search the available Wi-Fi.



The screenshot shows the ATCOM web interface for configuring Wi-Fi settings. The top navigation bar includes the ATCOM logo and tabs for Basic, Account, Network, DSS Keys, Phone, and Contacts. The 'Network' tab is selected. On the left, a sidebar menu shows 'Basic', 'Wi-Fi', and 'Advanced' options, with 'Wi-Fi' highlighted. The main content area is titled 'Wi-Fi Setting (When wifi is on, please disconnect the network cable!)'. It features a 'Wi-Fi' toggle switch set to 'On', a 'Search Wi-Fi' button, and input fields for 'Current SSID' and 'Secret Key'. At the bottom, there are 'Confirm' and 'Cancel' buttons. The top right corner shows a language dropdown set to 'English' and a 'Logout' link.

After all available Wi-Fi hotspots are list out, click the round behind the available Wi-Fi which you want to connect.

Index	SSID	Signal	Select
1	cisco	211	<input type="radio"/>
2	360	207	<input type="radio"/>
3	re	207	<input type="radio"/>
4	amoji	205	<input type="radio"/>
5	CHINA TELECOM	205	<input type="radio"/>
6	360_____WIFI-C9	197	<input type="radio"/>
7	_____	197	<input type="radio"/>
8	_____	190	<input type="radio"/>
9	inWatch3	189	<input type="radio"/>
10	ChinaNet-7A6t	188	<input type="radio"/>
11	360_____WIFI-9F	185	<input type="radio"/>
12	iTV-7A6t	185	<input type="radio"/>
13	inWatch2	185	<input type="radio"/>
14	Royale International China	184	<input type="radio"/>

Input the right **"Secret Key"** and then click the **"Confirm"** button, the phone will reboot, after rebooting, the Wi-Fi icon will display on the home screen, it means connect failed when the icon come with , then you should check the configuration. if the icon come with , it means connect successfully.

6.3. Enterprise WiFi

It supports WPA/WPA2 Enterprise wifi , it is based on Radius sever and configuration the Enterprise wifi in the router.

Configure the Enterprise wifi:

1. Upload the Certificates

Via the webpage: **"Phone"**→**"Trusted Certificates"**

Index	Issued To	Issued By	Expiration	Delete
0				<input type="checkbox"/>

Import Trusted Certificates

Load trusted certificates file

2. Input the WIFI account info

Via the webpage: "**Phone**"→"**Network**"→ "**WIFI**"

Press the "Search WIFI", and select the SSID, then input the radius ID and password.

Via the phone:


Press "**Menu**"→"**WIFI Settings**", and select the SSID , then input the radius ID and password.

7. FAQ

7.1. How to reset to factory

There are 3 methods for factory reset:

1. Factory reset via phone:

- a) Press the key 
- b) Select "Settings", then press the soft key "Enter"
- c) Select "Advanced Settings", then press the soft key "Enter"
- d) Input the access password, then press the soft key "Enter"
- e) Select "Reset to factory", then press the soft key "Enter"
- f) Press the soft key "OK", then the phone will be reboot and resumed to factory default settings

2. Factory reset via Web:

- a) Key in the IP address of phone with a browser,
- b) Access the webpage of phone as the role of "admin", username/password is admin/admin.
- c) Select "Phone"
- d) Select "Upgrade"

- e) Click the button "Reset to Factory"
 - f) Click the button "OK"
3. Factory reset during starting:
- a) Hold the key "*" and "#" while power on for 5 seconds
 - b) The phone will be reboot and resumed to factory default setting

7.2. Upgrade the firmware on safe mode

If the phone can't be started successfully, user is able to upgrade the firmware on post mode,

- a) Setup a TFTP Server and set the PC's IP address as "192.168.1.200"
- b) Copy the kernel file we supplied to the root menu of TFTP Server
- c) Ensure the TFTP Server and phone are connected to the same network switch and both reachable
- d) Long Press the key "*" and "1" to upgrade the kernel file, and then plug in power until upgrading information displayed on LCD
- e) The phone will start downloading file from TFTP server
- f) After downloading completed, the phone will be automatically upgraded
- g) After upgrading completed, the phone will be started with the factory default settings

7.3. How to make IP Peer to Peer call

1. Press it in dialing status
2. To make a IP peer to peer call

Switch the input type to '1a', then press '*' key to choose '.'. For example, to dial "192.168.1.100":


1. Change to '1a' input method;

2. input "192", "*", "168", "*", "1", "*", "100"

3. Disable the IP call feature

Via webpage modify the make IP call feature:

Phone→Feature →Accept SIP Trust Server Only, press "Enable".

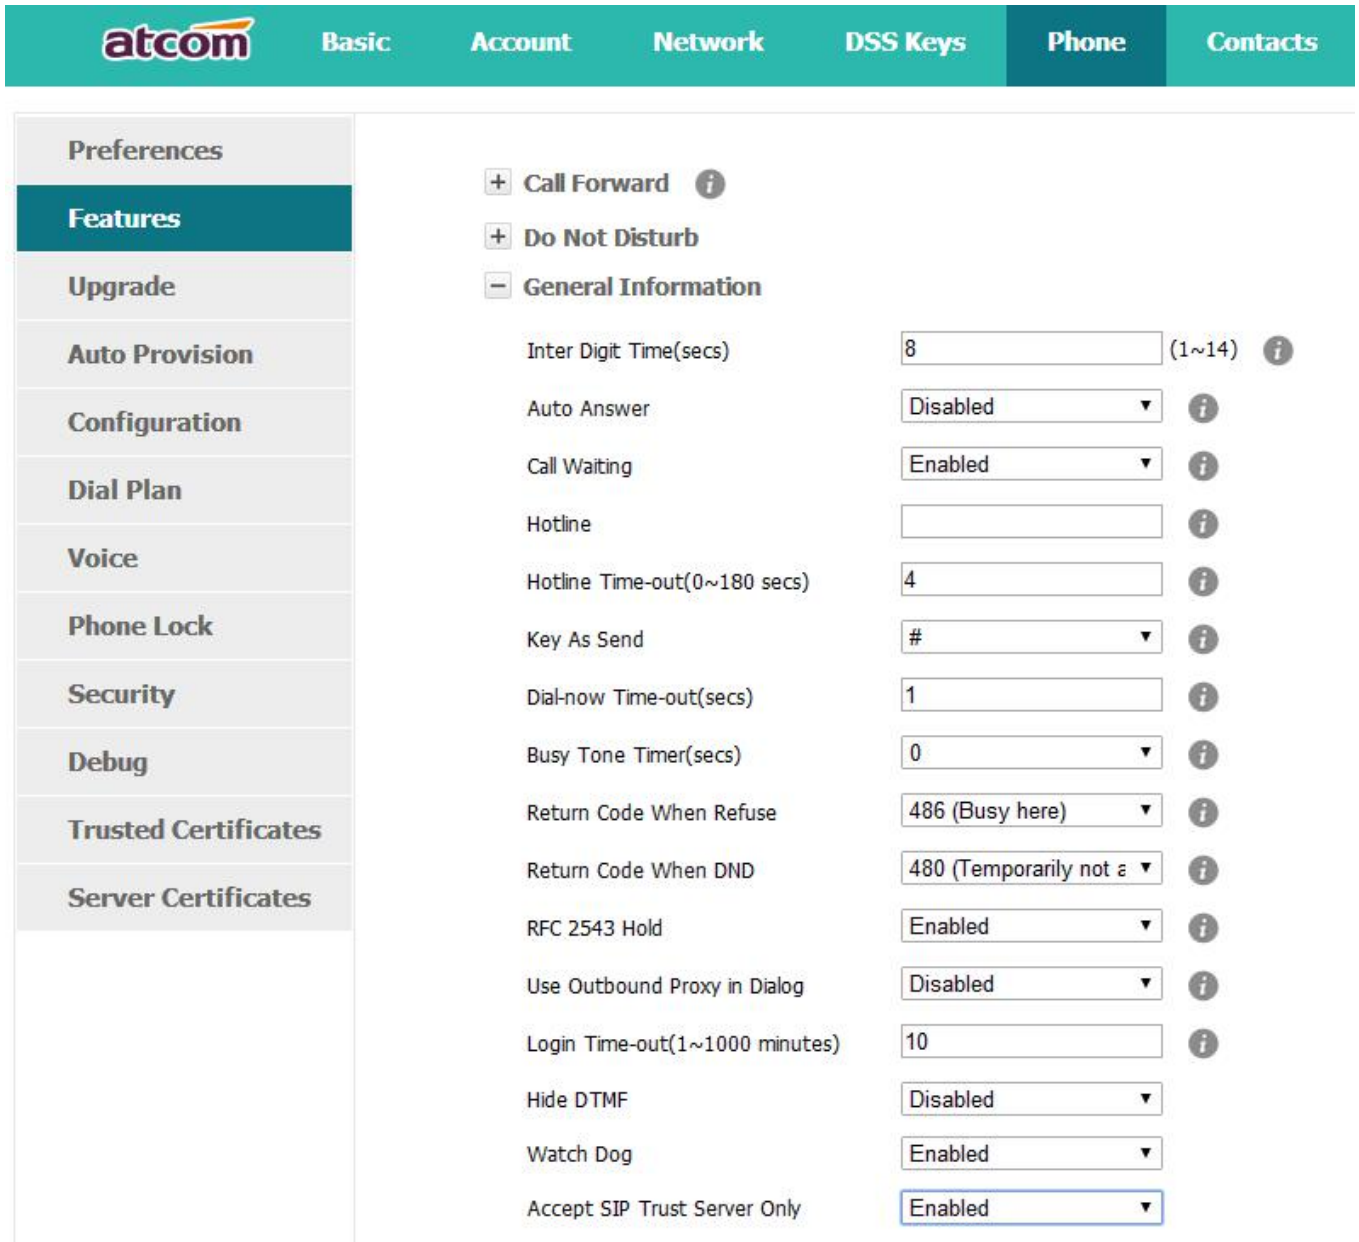

The screenshot shows the 'Phone' settings page in the atcom web interface. The 'Accept SIP Trust Server Only' option is highlighted with a blue border and is set to 'Enabled'.

Setting	Value	Info
Call Forward		
Do Not Disturb		
General Information		
Inter Digit Time(secs)	8 (1~14)	
Auto Answer	Disabled	
Call Waiting	Enabled	
Hotline		
Hotline Time-out(0~180 secs)	4	
Key As Send	#	
Dial-now Time-out(secs)	1	
Busy Tone Timer(secs)	0	
Return Code When Refuse	486 (Busy here)	
Return Code When DND	480 (Temporarily not a	
RFC 2543 Hold	Enabled	
Use Outbound Proxy in Dialog	Disabled	
Login Time-out(1~1000 minutes)	10	
Hide DTMF	Disabled	
Watch Dog	Enabled	
Accept SIP Trust Server Only	Enabled	

8. Troubleshooting

8.1. The phone is failed to register to SIP server

1. First of all, check the IP address. If the LAN port is DHCP, please ensure the DHCP server has been enabled.
2. Check the network gateway
3. Check the DNS
4. Make sure the input account matched the one provided by Service Provider
5. Make sure SIP Server has been enabled already
6. Make sure the Port of SIP Server, it's 5060 by default

8.2. The phone is failed to gain IP address

1. Make sure the network cable has been plugged into the LAN port
2. Make sure the network cable or port of network switch are working fine,
3. Make sure the DHCP server has been enabled, and there are available IP address
4. Try to set the LAN port as Statics IP

8.3. Only one party can hear from another on calling

1. Try to make a IP peer to peer call, to make sure the mic and speaker are working fine
2. Enable STUN via Web
3. Set the address of STUN Server, for example stun.sipgate.com
4. Present this operation above and the phone will be reboot
5. Try to make a normal call again

9. Abbreviation

DND: Do Not Disturb

CFWD: Call Forward

Bxfer: Blind Transfer

Conf: Conference

Num: Number

SIP: Session Initiate Protocol

RTP: Real-time Transport Protocol

SDP: Session Description Protocol

VPN: Virtual Private Network

VLAN: Virtual Local Area Network

QoS: Quality of Service

Syslog: System log

UDP: User Data Protocol

TCP: Transmission Control Protocol

TLS: Transport Layer Security Protocol

BLF: Busy Lamp Field

DNS: Domain Name System

SRTP: Secure Real-time Transport Protocol

NTP: Network Time Protocol

VAD: Voice Activity Detection

CNG: Comfort Noise Generator

10. FCC Caution

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

The device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) The device may not cause harmful interference, (2) the device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, Pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection, uses and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communication. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.