

AT-610 Quick Start Guide

ISSUE 1.0


2009-9-11

1、 Installation and access.....3
2、 Configure AT-610 to make VoIP calls4
A、 WAN Config4
B、 SIP Config5

1. Installation and access

Installation:

Set up AT-610 as below:

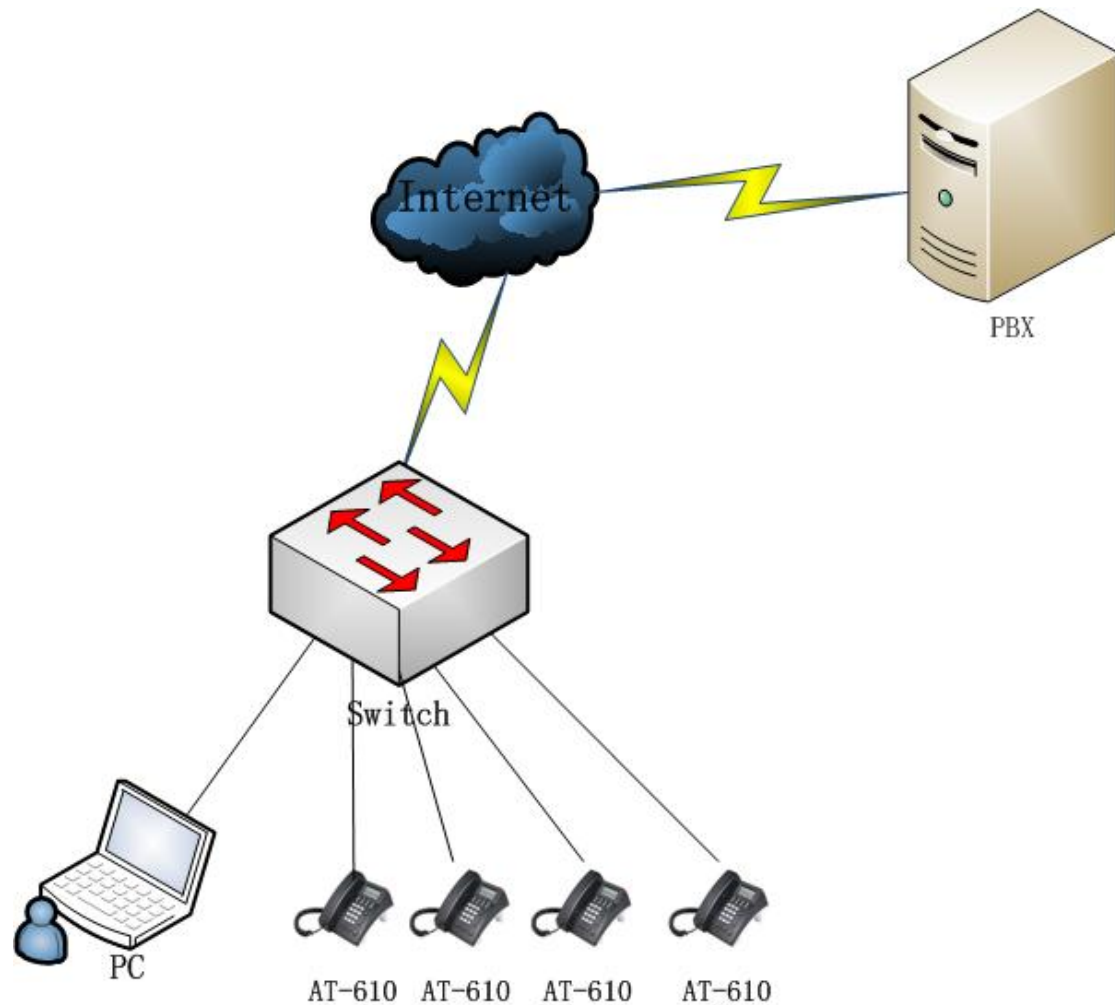

If AT-610 is connect to your network. Press Info key to get the WAN IP address. Modify your computer's IP address to the same network as AT-610

Key in AT-610's IP address in the web browser and press enter, then you can access AT-610's web manage interface. Remember the account is admin/admin for administrator and guest/guest for user.

2. Configure AT-610 to make VoIP calls

A. WAN Config

Enter **Network** → **WAN Config** to set the WAN setting:

AT-610 supports three different IP types: Static IP, Dynamic obtain IP (DHCP) and PPPoE. You can use either of these IP types to connect the internet.



Use Static IP:

- Select "Static";
- Enter the AT-610's IP address in the "IP address" field.
- Set the "Net mask", default 255.255.255.0
- Enter the AT-610's upper gateway IP address (for example: Router) in the "Gateway" field
- Key in the DNS information in the "Primary DNS" and "Alter DNS" fields.

Use DHCP:

- Select DHCP
- If you have a DHCP server in your network, AT-610 will automatically obtain the network information from your DHCP server.

Use PPPoE:

- Select PPPoE
 - Type your PPPoE dialup information in the PPPoE setting fields: PPPoE server (option), Username and password.
- Then the AT-610 will connect to the internet through PPPoE, and automatically obtain the IP address, Net mask, Gateway, Primary DNS and Alter DNS information.

B. SIP Config



The screenshot shows the ATCOM IP Phone configuration interface. The top navigation bar includes 'Current Status', 'Network', 'VoIP', 'Advanced', 'Dial-peer', 'Config Manage', 'Update', and 'System Manage'. The main content area is titled 'Public SIP Configuration' and contains a 'Basic Setting' table with the following fields:

Basic Setting			
Register status	Registered	Proxy Server Address	<input type="text"/>
Server Address	192.168.1.230	Proxy Server Port	<input type="text"/>
Server Port	5060	Proxy Username	<input type="text"/>
Account Name	7009	Proxy Password	<input type="text"/>
Password	****	Domain Realm	<input type="text"/>
Phone Number	7009	Enable Register	<input checked="" type="checkbox"/>
Display Name	7009		

Below the table are two buttons: 'APPLY' and 'Advanced Set'.

Enter **VoIP** setting page and set the sip information

----**Register Server Addr**: sip server address;

----**Register Server Port** : sip server register port;

----**Register Username** : username of your sip account;

----**Register Password** : password of your sip account;

----**Register Number** : Phone number of your sip account; the same as username if none

----**check Enable Register**;

Then you can make VoIP calls if the WAN and SIP config is correct.

Notice: Please go to the “Config Manage” and save the config, otherwise you will lose the setting after device reboot.