



Rainbow1 IP Phone User Manual

Version: 1.2

2015-03-12

Release note

Version	Changed note	Editor	Date
1.0	First Release	Aimee	2014-5-12
1.1	1.5 Management and Maintenance support capture network traffic 4.3 SIP Setting Modify the default value of RTP Packet Size to 20 Add codec payload and name for G726r16,G726r24,G726r32,G726r40 4.4 Account Add parameter RPort Enable Modify Codec configuration 4.6.1 Manual Update Add Pcap feature	Aimee	2014-8-25
1.2	Pictures All pictures are replaced to the latest one 4.1 Basic Add wizard module 4.5.1 Daylight Saving Time Modify the parameters and configure method 4.5.2 Speed dial Delete the speed dial module 4.6.1 Manual Update Delete some parameters 4.6.4 Debug Add the Debug module 5.2 Upgrade firmware under safe mode Modify the way to upgrade firmware under safe mode	stefen	2014-3-12

Content

Contact ATCOM	5
Overview of ATCOM	5
1. Overview of Rainbow 1	6
1.1 Interfaces	6
1.2 Hardware	6
1.3 Software	6
1.4 Network	7
1.5 Management and Maintenance	7
1.6 Protocol	7
1.7 Compliant and Authenticated Standard	8
1.8 Packing List	8
1.9 Installation	8
2. Keypad of IP Phone	16
2.1 Describe of the buttons and Screen	16
2.2 Describe of the LCD Screen Icons	17
3. Basic functions and operations	19
3.1 Answer the calls	19
3.2 Make Call	19
3.3 Pre- dial	20
3.4 Multiple line dial-up	20
3.5 Hang up the phone	20
3.6 Call Transfer	21
3.7 Voicemail	21
3.8 Mute calls	21
3.9 Call Hold	21
3.10 3-Way Conference Call	21
3.11 Call History	22
3.12 Default Password	22
3.13 Check the Phone's IP address	23
3.14 Dial Plan	23
4. Web settings	25
4.1 Basic	25
4.1.1 Status	25
4.1.2 Wizard	25
4.2 Network	27
4.2.1 Basic	27
4.2.2 Advance	28
4.3 SIP Setting	29
4.4 Account	31
4.5 Phone Setting	34
4.5.1 Preference	34

4.5.2 Features	36
4.5.3 Voice.....	37
4.5.4 Ring	38
4.5.5 Tone	38
4.6 Update.....	39
4.6.1 Manual Update	39
4.6.2 Update/Auto Provision.....	39
4.6.3 Reset & Reboot.....	40
4.6.4 Debug	41
4.7 Phone Book	41
4.8 Call Log	41
5. FAQ & Trouble Shooting	42
5.1 How to make a factory reset.....	42
5.2 Upgrade firmware under safe mode	42
5.3 How to make direct IP call.....	42
6. Trouble Shooting.....	43
6.1 The phone can't register successfully.....	43
6.2 The phone can't obtain IP address	43
6.3 Only one part can hear the voice during the call.....	43
7. Abbreviations.....	44

Contact ATCOM

Overview of ATCOM

ATCOM is the leading VoIP hardware manufacturer in global market. We have been keeping innovating with customer's needs oriented , working with partners to establish a total solution for SMB VoIP with IP phone , IP PBX and Asterisk cards

With over 10 years' experience of R&D , manufacturing and service in network and VoIP filed ; mission of creating the biggest value for IP terminals , we commit ourselves in supplying the competitive IP phone and other terminals for IP PBX , softswitch , IMS , NGN providers and carriers; supplying the competitive total VoIP solution for SMB market. We keep improving the customer's experience and creating the bigger value with our reliable products. Until now, our VoIP products have been available in 100+ countries and used by millions of end users.

Contact Sales

Address	Area C, A2F , Block 3 ,Huangguan Technology Park , #21 Tairan 9th Rd, Chegongmiao , Futian District , Shenzhen China
Tel	+ (86) 755-83018618-8806
Fax	+ (86) 755-83018319
E-mail	sales@atcomemail.com

Contact Technical Support

Tel	+ (86) 755-83018618-8001
E-mail	Support@atcomemail.com

Website Address: <http://www.atcom.cn/>

Download Center: <http://www.atcom.cn/download.html>

1. Overview of Rainbow 1



Rainbow1

Type	POE	Power adapter
Rainbow1	Yes	Optional accessory

1.1 Interfaces

- Power input: DC 5V, 1000mA or POE
- LAN: RJ45 port
- PC: RJ45 port
- Headset jack 1 : RJ9 port
- Handset jack 1 : RJ9 port

1.2 Hardware

- LCD: 132×52
- FLASH: 16M
- RAM: 16M
- CPU: 262MHz Dual Core
- LED indicator: 1 Status Light

1.3 Software

- Sip 2.0 (RFC3261) and other related SIP RFCs
- 1 SIP lines
- STUN
- Jitter Buffer, VAD,CNG
- G.711A/U, G722, G.723, G.726-16, G.726-24, G.726-32, G.726-40, G.729 , L16, iLBC
- Echo Cancellation
- SIP Domain name, Authentication
- DTMF(inband, RFC2833, info)
- Call transfer, Call forward, 3-way conference, Call hold, Call back
- DND(Do Not Disturb), Auto answer, Blacklists, Block Call-ID, Block Anonymous call, Dial plan, IP call
- Phone book with 100 white records and 50 black records, 100 answered calls, 100 missed calls, 100 dialed calls
- Update via HTTP, FTP, TFTP, PNP
- Syslog
- SNTP
- WEB access with different login level
- Multi-language: English, Chinese, Farsi, French, German, Hebrew, Italian, Portuguese, Russian, Spanish, Turkish
- Soft button: soft button * 3
- Redundancy SIP server

1.4 Network

- LAN/PC:Support bridge mode
- Support PPPoE(ADSL,cable modem used for Internet connecting)
- Support VLAN(DATA VLAN and VOICE VLAN)
- Support L2TP VPN
- LAN support Primary and Secondary DNS
- LAN support DHCP Client
- Support QoS

1.5 Management and Maintenance

- Support safe mode and firmware updating under safe mode
- Support different level user management
- Configuration via web , keyboard
- Support multi-language
- Auto provision (Firmware and configuration file)
- Support system log and call log
- Support capture network traffic

1.6 Protocol

- IEEE 802.3 /802.3 u 10 Base T / 100Base TX
- PPPoE: PPP over Ethernet
- DHCP: Dynamic Host Configuration Protocol
- SIP RFC3261, RFC3262, RFC3263, RFC3264, RFC3265, RFC2543, RFC3489, RFC3842, RFC3515, RFC2976, RFC3428, RFC2327, RFC2782, RFC1889
- TCP/IP: Transfer Control Protocol/Internet Protocol
- RTP: Real-time Transport Protocol
- RTCP:RTP Control Protocol
- DNS: Domain Name Server
- TFTP: Trivial File Transfer Protocol
- HTTP:Hypertext Transfer Protocol
- FTP:File Transfer Protocol

1.7 Compliant and Authenticated Standard

- CE: AGC01180140201E2, AGC01180140202E2
- Comply with ROHS in EU
- Comply with ROHS in China




- Operation temperature: lower than 60° C
- Storage temperature: lower than 60° C
- Humidity: 10 to 90% no dew

1.8 Packing List

Model	Phone	Handse t	Handset line	Stand bracket	Ethernet Cable	User Manual CD
Rainbow 1	1	1	1	1	1pcs 1.5m	1

Note: Power adapter (Input: AC 100~240V, 50/60Hz; Output: 5V, 1000mA)

1.9 Installation

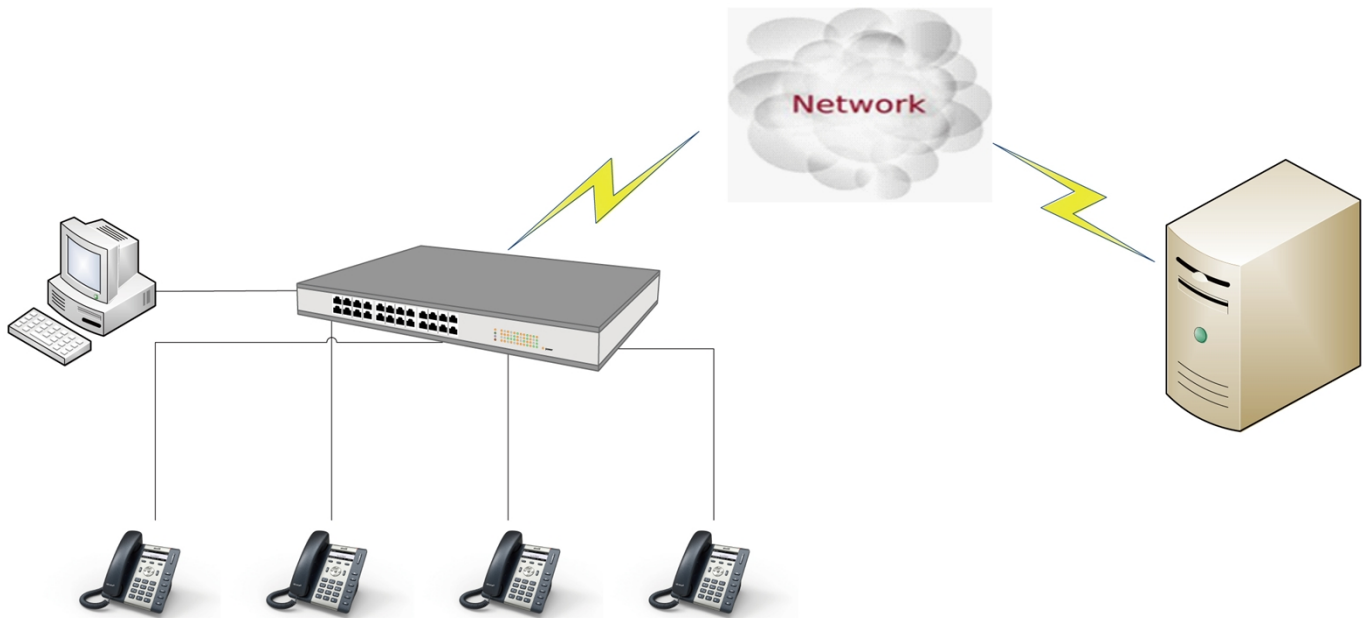


Connect LAN port to PC with Ethernet cable, or connect Rainbow1 to a switch/router which is in the same network as your PC. It uses DHCP mode by default, and you can


review its current IP address by pressing  key on idle state. To access the web interface, you can input the IP address in IE browser. E.G. The IP address of your Rainbow1 is 192.168.1.100, you can input 192.168.1.100 and press enter key on your browser to access its webpage. There are two login level:

User

Admin

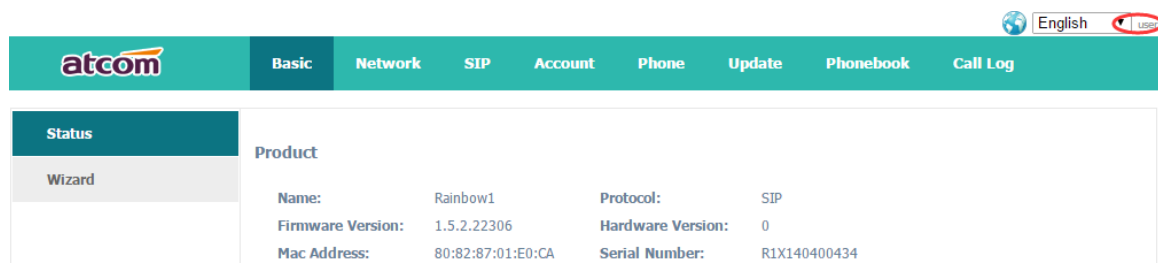


No password is set for those two accounts with factory settings. You can click admin button on the right corner of the webpage to switch from the user to admin mode. To set the password for user and admin login you can firstly login as admin and enter the Network--->Advance page as following.

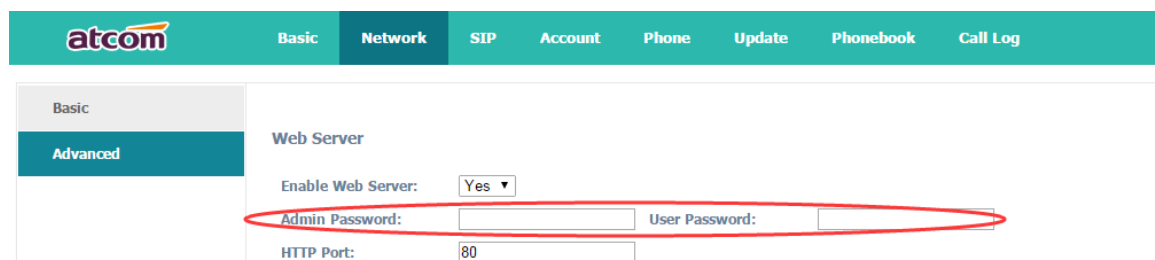


Installation instruction

1. Desktop installation


A. Put the bottom side of the IP phone upside and press one-side joints of stand bracket into the slot, please refer the picture as below:

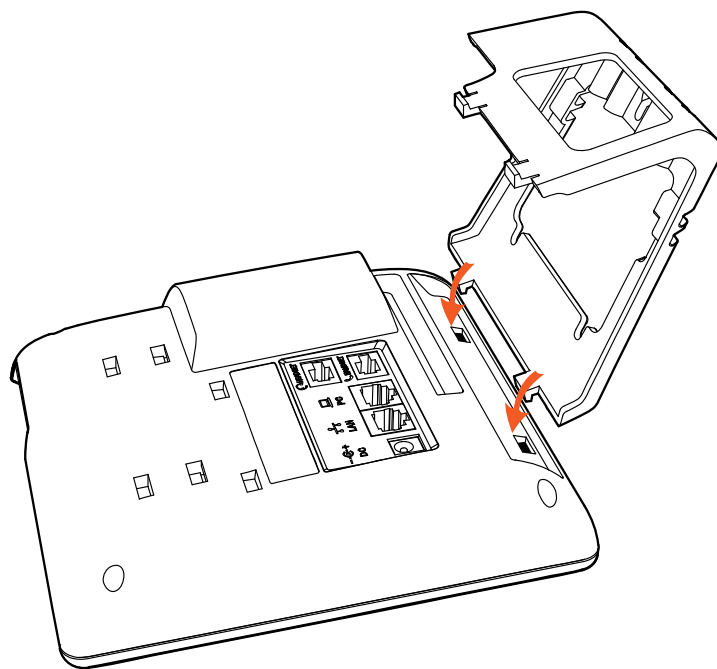

B. Press the other side joints into the slot according to the direction of the arrow

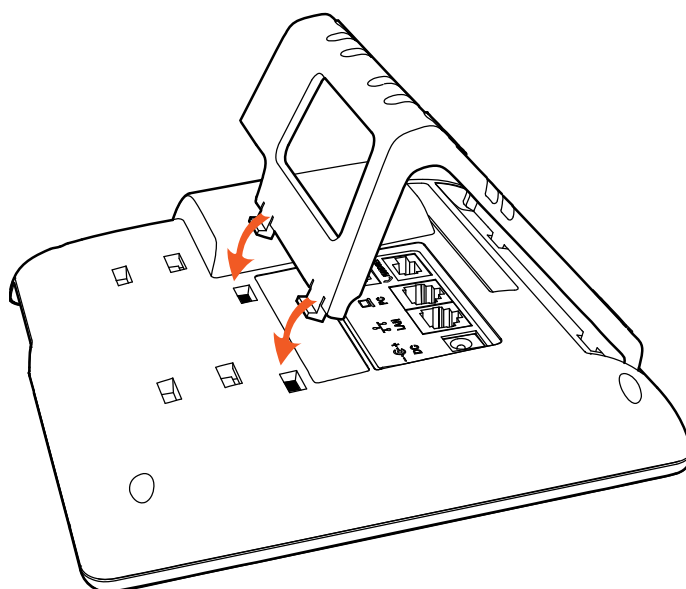


C. It is the right picture after fixing the stand bracket below:

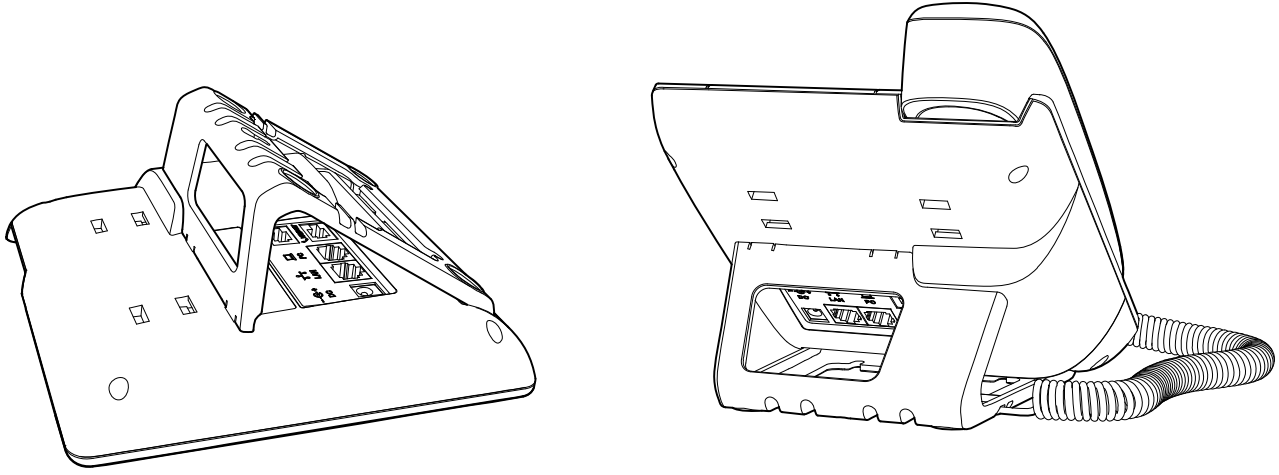


D. Disassemble the stand bracket:

Push the spring joint of stand and pull the stand according to the direction of the arrow. When the joints are pulled out of the slot, you can take off the stand bracket.

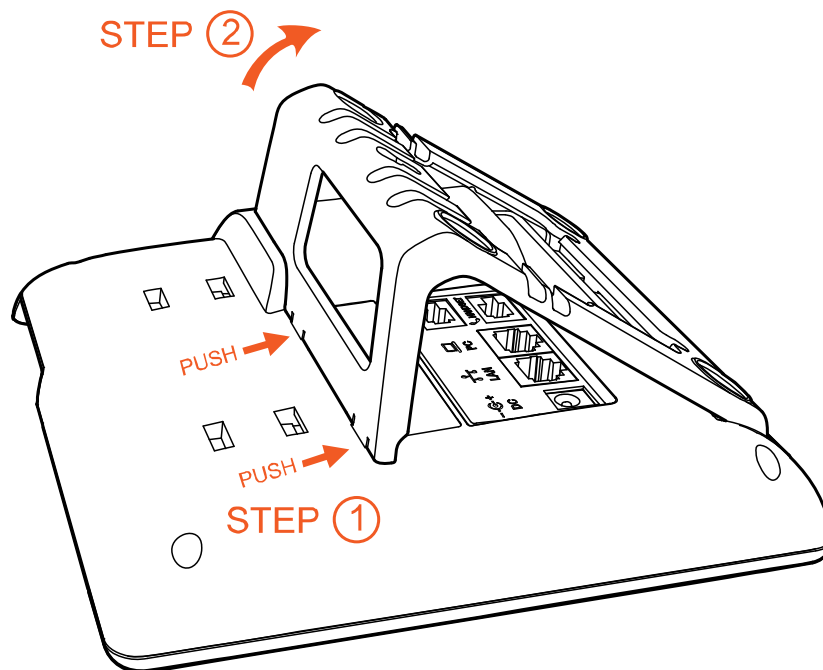


2. Wall-hung Installation


A. Put the bottom side of the IP phone upside and press one-side joints of wall-hung stand bracket into the slot, please refer the picture as below:

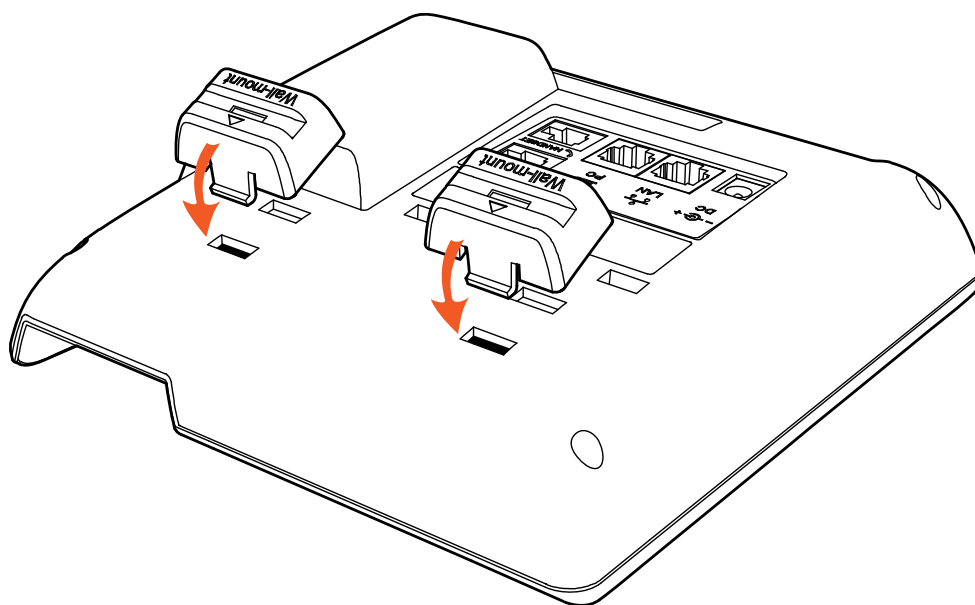


B. Press the other side joints into the slot according to the direction of the arrow

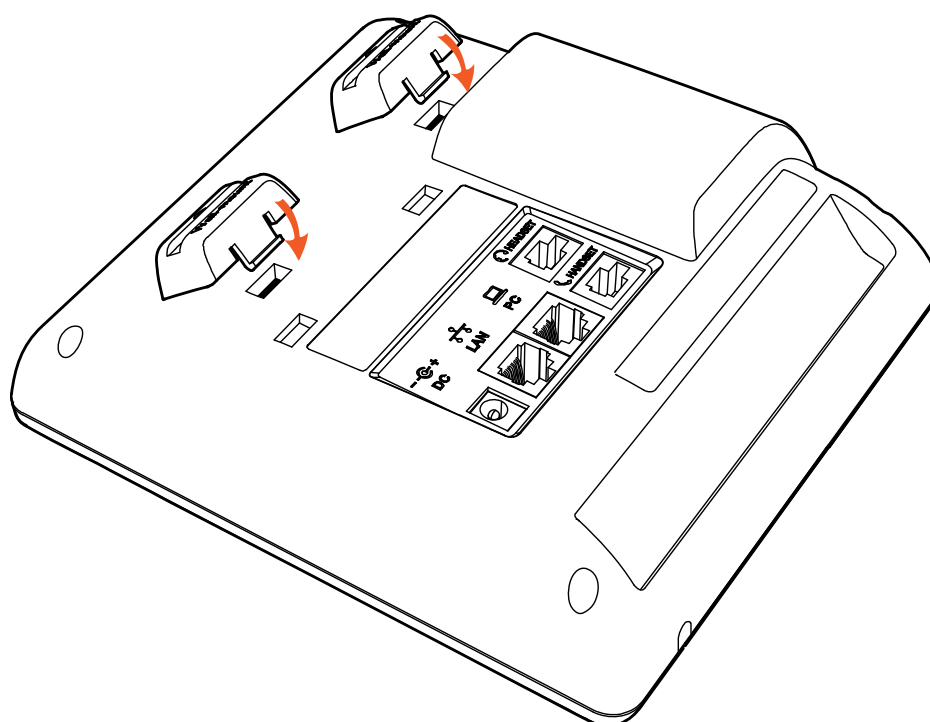


C. After install the wall-hung stand bracket, press one-side joints of stand bracket into the slot, please refer the picture as below:

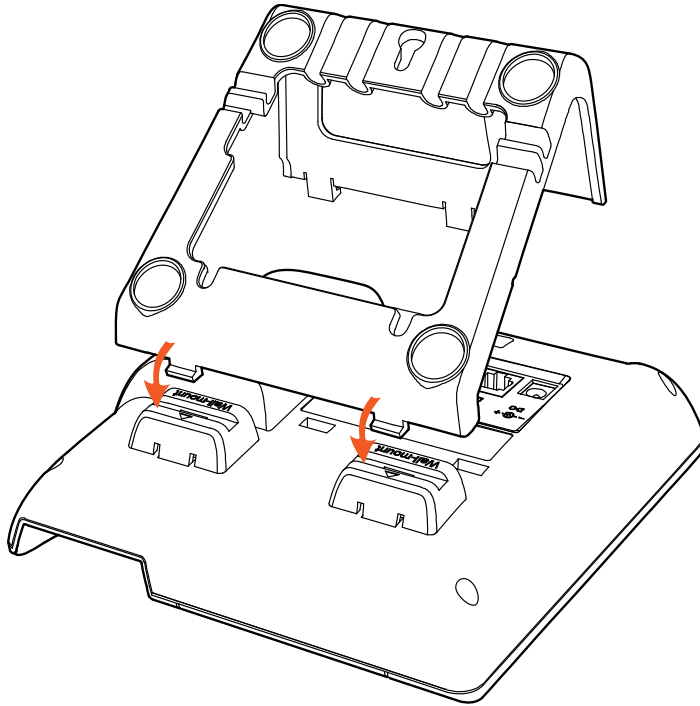


D. Press the other side joints into the slot according to the direction of the arrow

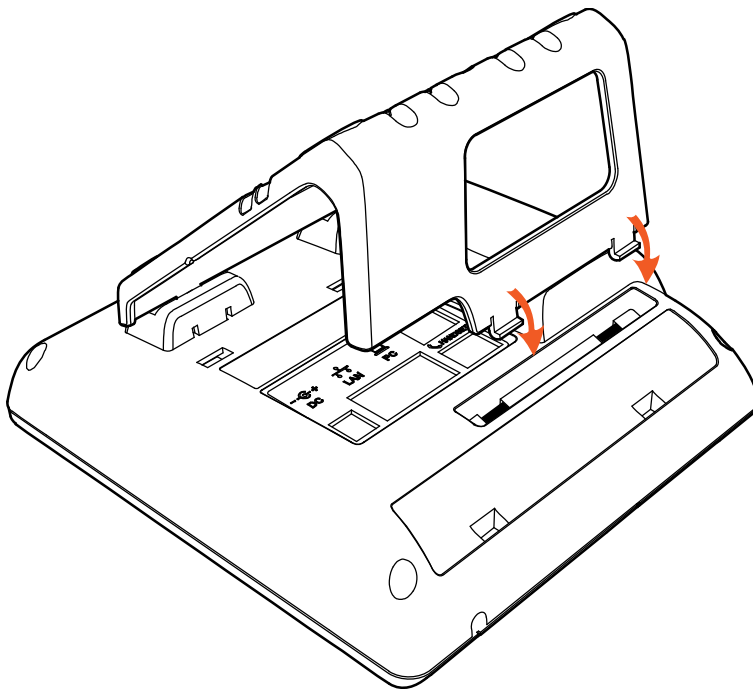

E. Knock in nails or screws on the wall according to the proportion of the distance between the hanging holes as below:

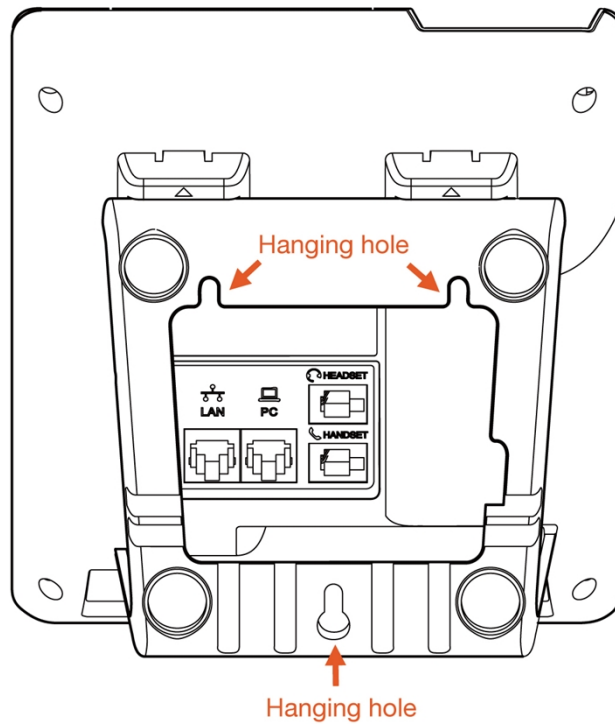


F. It is the right picture after fixing the stand bracket below:

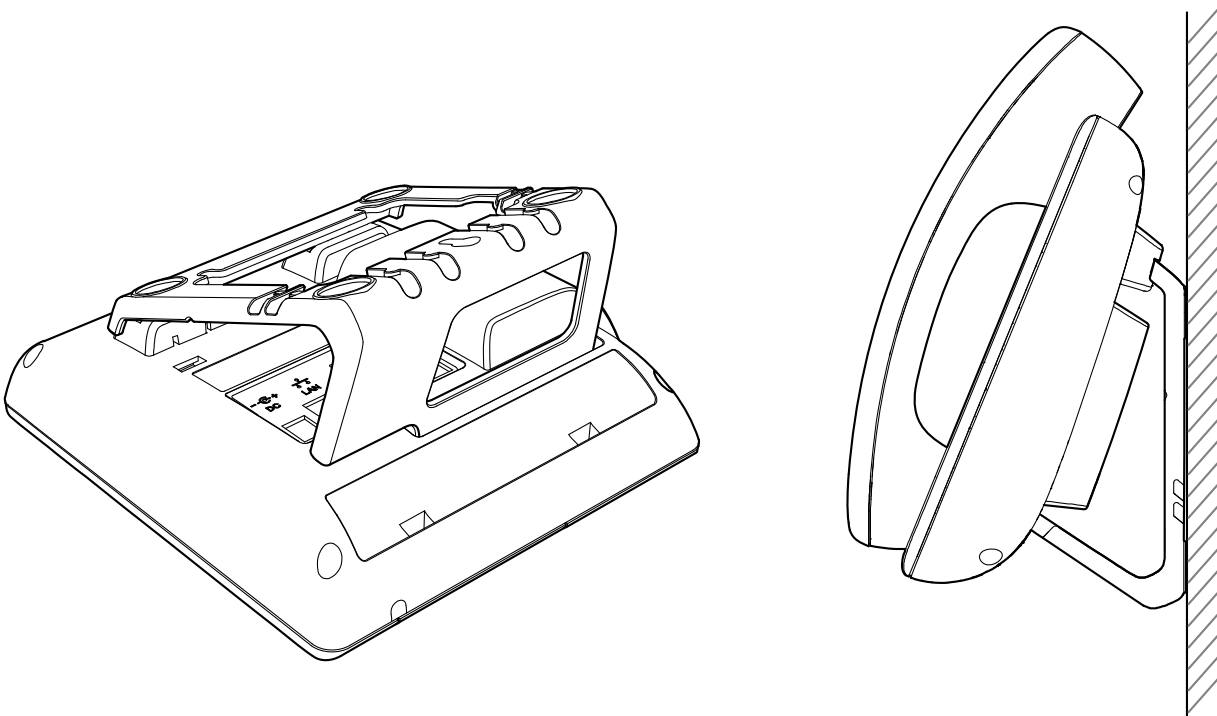


G. Disassemble the stand bracket:

Push the spring joint of stand and pull the stand according to the direction of the arrow. According to the direction of the arrow:

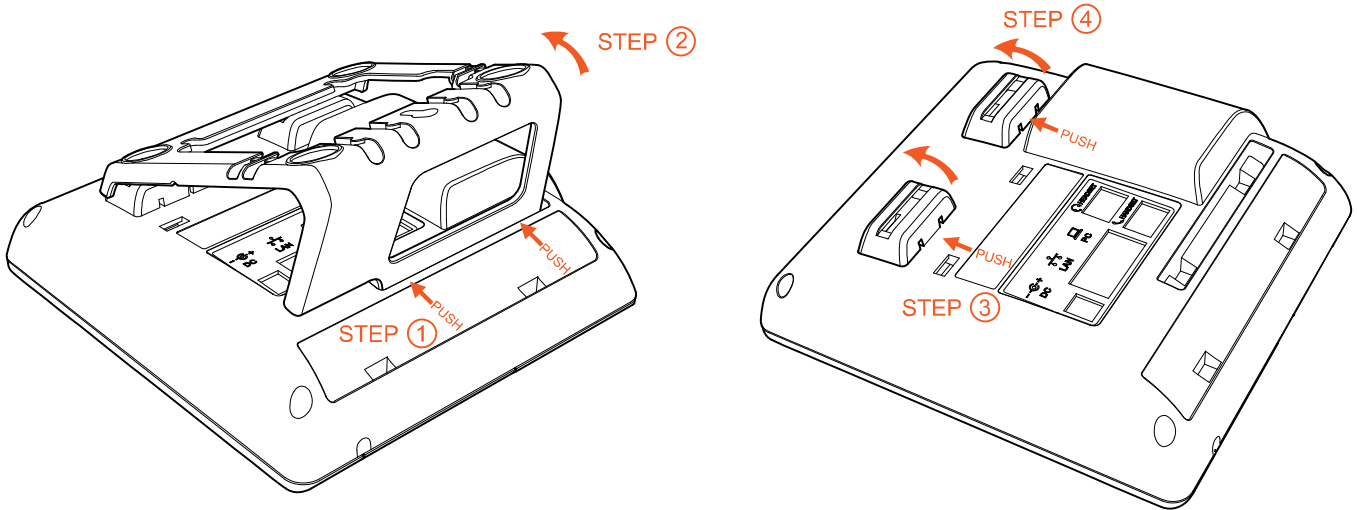


3. Wiring after installing the stand bracket

Plug in the power adapter, network cable and handset or headset to the corresponding ports as below picture and press them to the slots on the stand bracket.

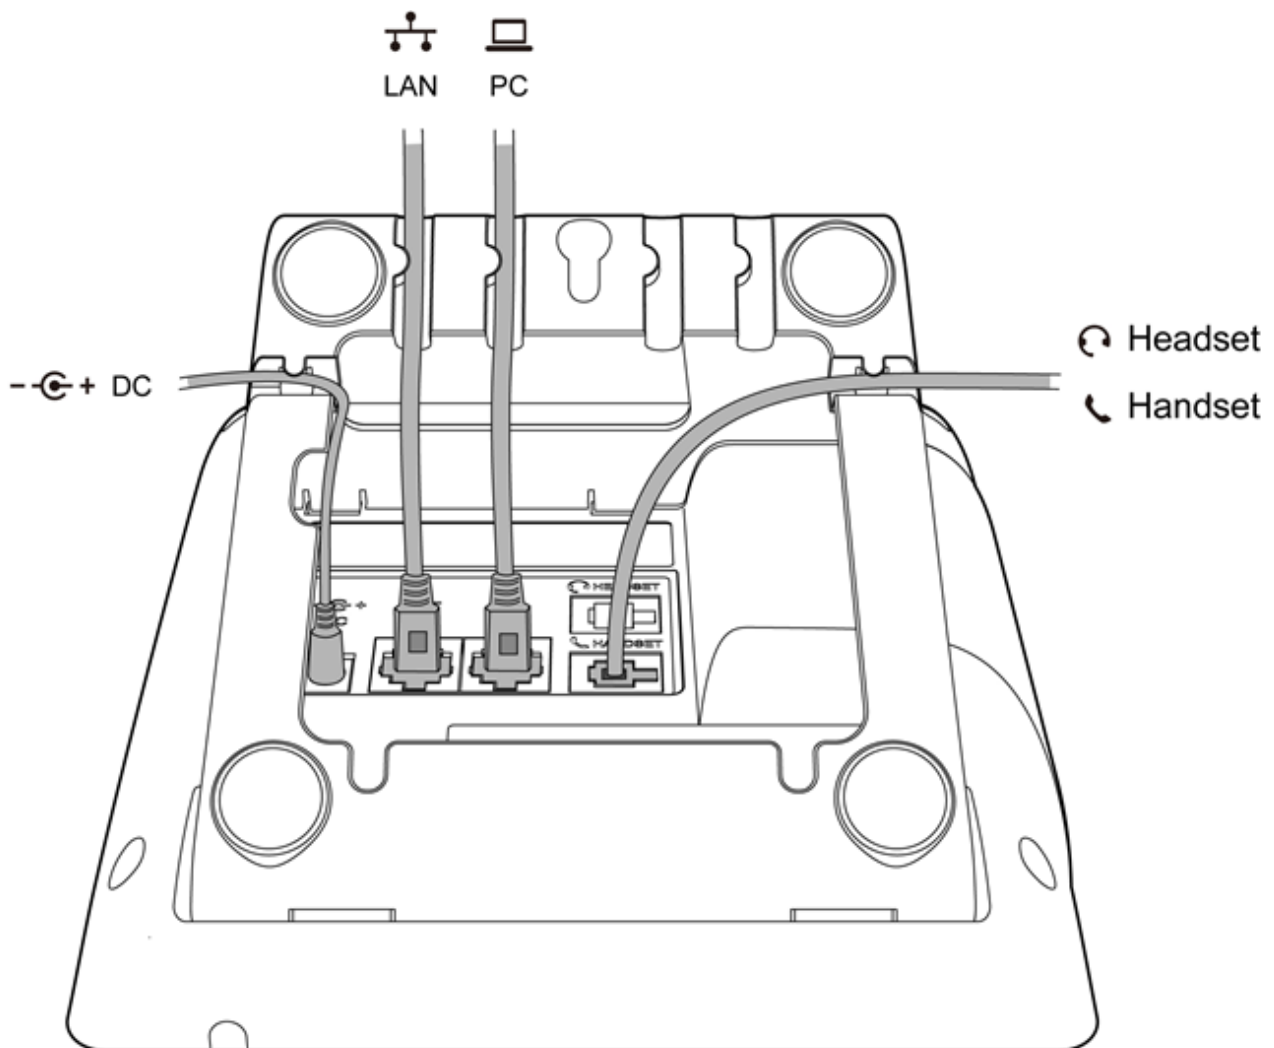

2. Keypad of IP Phone

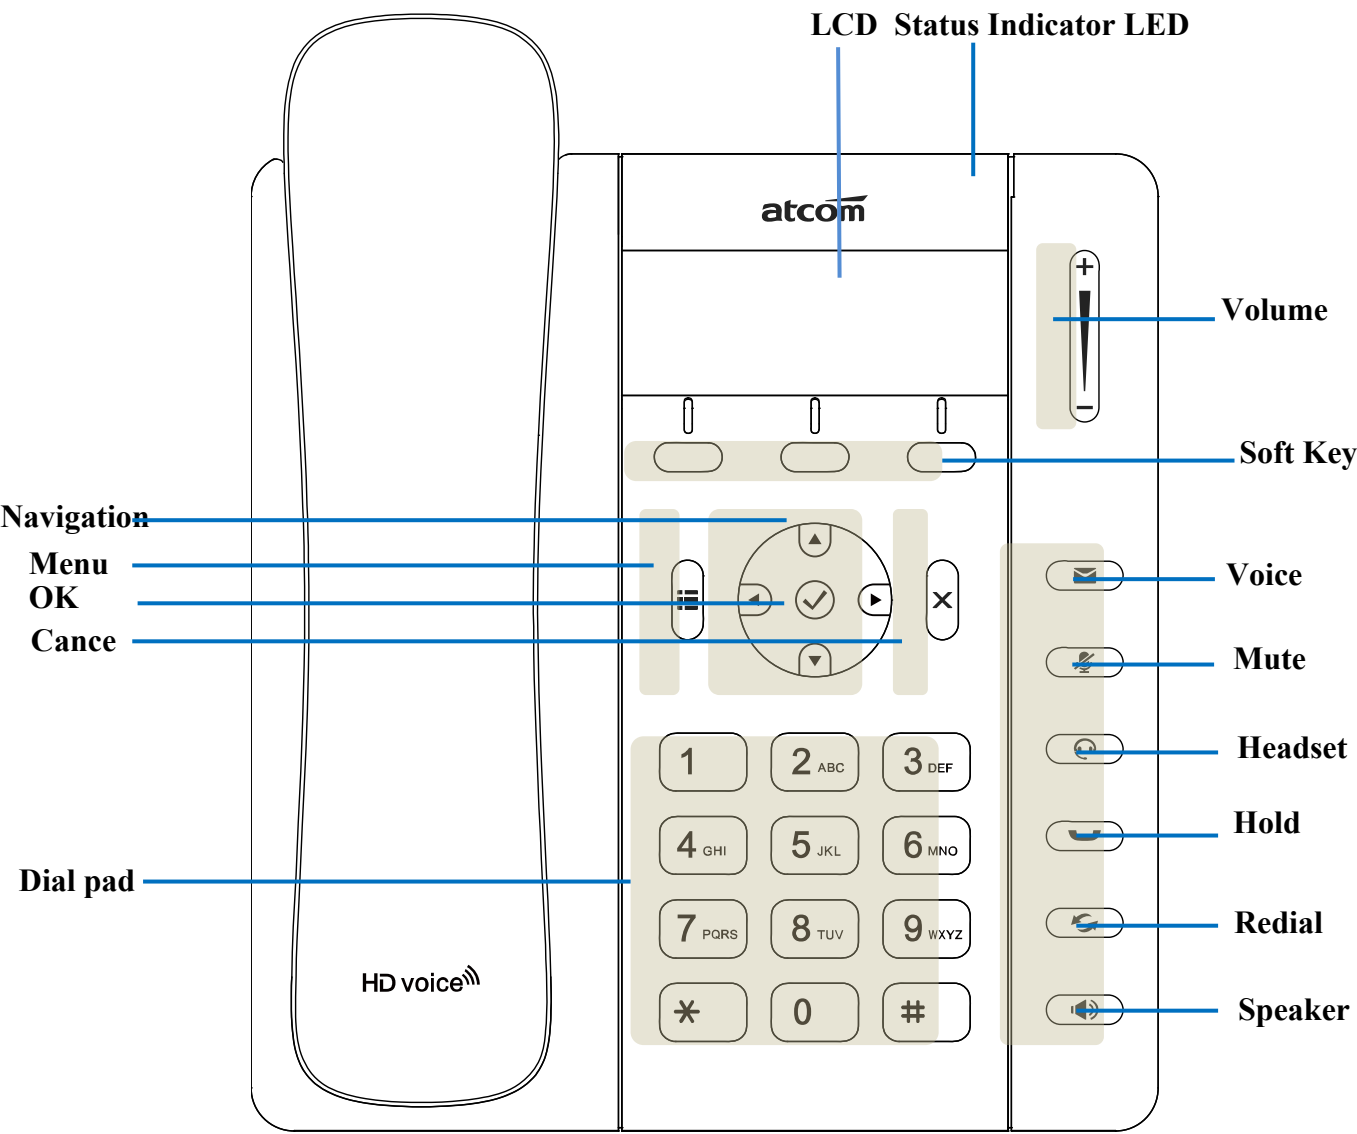

2.1 Describe of the buttons and Screen

Soft Keys	Press to select a function which displayed at the softkey zone of screen Display all optional functions at the last line of LCD screen.
Status Indicator LED	Indicates the phone’s status, ➤ If the phone is being started ,the LED is on ➤ If the phone is standby, the LED is off ➤ If there is income calling, the LED will blink at 120ms on, 120ms off. ➤ If there is a new message, the LED will blink at 600ms on, 600ms off.
LCD Screen	All information such as date, time, phone number,

	incoming caller's ID(if available),line/call status, extension numbers and the soft key features are displayed on it.
Dial pad	Entering numbers or characters.
Navigation keys	Allows users to navigate (left, right, up, down). Press  can enter "Directory". Press  can enter "History".
	Confirm users' operation and show status when Rainbow1 is idle.
	Cancel users' operation.
	Enter menu settings.
	Adjust the volume (speaker/handset/headset/ring). Volume level will be displayed on LCD when pressing volume key.
	Pick up and hung up under the speaker mode.
	Mute the mic in a conversation by pressing the Mute button; this prevents the person on the active call from hearing what you or someone else in the room is saying. To un-mute, press the Mute button again.
	Pick up and hung up under headset mode.
	Check the Voicemail status.
	Hold the current call.
	Redial the last dialed number

2.2 Describe of the LCD Screen Icons

Icon	Description
	The extension is registered
	The extension is unregistered
	There is a new voice mail
	There is an incoming call
	The call is held

	Rainbow1 is in speaker mode
	Rainbow1 is in handset mode
	Rainbow1 is in headset mode
	The call is muted

3. Basic functions and operations

3.1 Answer the calls

When there is an incoming call, phone will remind user with ringing. There are 3 ways to answer the call

A. Answer by handset

Pick up the handset and talk with the caller. If you want to hang up, just put back the handset. When you are talking with the handset and want to switch to speaker mode

or headset mode, please press  key or  key, and then put down the handset.

B. Answer by speaker

Press  key and talk with callers by built-in Micro-phone and Speaker. If you want to hang up, please press  key again. Switch calling or talking into

handset mode by lifting the handset under speaker mode. Press  key will switch calling or talking into headset mode.

C. Answer by headset

Keep your microphone connected with the RJ9 headset jack, when there is an

incoming call, press  key and talk with the caller. If you want to hang up,

please press  key again. Pressing  key can change calling or talking into speaker mode, and lifting the handset switches to handset mode.

3.2 Make Call

A. Use the handset

Pickup the handset and input a phone number. Press soft key "Send" to dial the number. When you hear the tones of "du~~du~~" and the phone number your dialed is being displayed on the LCD, the phone at the side of being called should be ringing. If the called party answers this calling, the call is established and the calling timer is started immediately.

B. Use the speaker

Press  key and input a phone number. Press soft key "Send" to dial the number. When caller hear the tones of "du~~du~~" and the phone number your dialed is being displayed on the LCD, the phone at the side of being called should be

ringing. If the called party answers this calling, the call is established and the calling timer is started immediately.

C. Use the headset

Press  Key and input a phone number. Press soft key "Send" to dial the number. When caller hear the tones of "du~~du~~" and the phone number your dialed is being displayed on the LCD, the phone at the side of being called should be ringing. If the called party answers this calling, the call is established and the calling timer is started immediately.

D. Dial from phone book

1. Press  key and input the keypad password 123 to enter the menu and choose "Directory" option. Press "Select" soft key and then find the contact person by navigation keys. When the certain contact person is highlighted, press "Dial" or just pick up the handset to call this number.
2. Pick up the handset, press "Directory" soft key, then select the contact person and press "Dial" soft key.
3. Pick up the handset, press  and enter "Directory", then select the contact person and press "Dial" soft key.

E. Dial from call history

1. Press  key and input the keypad password 123 to enter the menu and choose "History" option, then enter sub-directory "Dialed Calls", "Received Calls" or "Missed Calls" to select one of call history entry, and press "Dial" soft key or pick up handset to call this number.
2. Pickup the handset, press "History" soft key, then select one of call history entry, and press "Dial" soft key to call this number.
3. Pickup the handset, press  and enter "Call History", then select one of call history entry, and press "Dial" soft key to call this number.

3.3 Pre- dial

It's a method to dial a phone number immediacy at standby mode.

- A. Dial-up the phone number at standby mode
- B. Press soft key "Dial" to send out the number

3.4 Multiple line dial-up

Rainbow1 supports up to 2 concurrent calls. If there is a new incoming call when you're talking on Rainbow1, the new incoming call will be displayed on LCD and status

indicator LED will be fast blinking. User can press soft key "Hold" then press "Answer" to receive the new incoming call.

3.5 Hang up the phone

1. Handset hang up

Put back the handset at handset mode, the current calling will be hung up.

2. Speaker hang up

Press  key at speaker model, the current calling will be hung up.

3. Headset Hang up

Press  key at headset model, the current calling will be hung up.

4. Hang up one line call

Press the hook to hang up the current calling when 2 calls happened simultaneously.

3.6 Call Transfer

1. Attended call transfer

The attended transfer allows user to call a third-party before transferring the calling.

While on calling, press the "Transfer" soft key to hold the current call and phone the third party. Then dial the target number you want to transfer to on the activated line and press "Send" soft key to call that number. After the target party answers the call, press "Transfer" soft key again to complete the transfer.

2. Blind call transfer

The blind transfer allows user to transfer a call without speaking to the third party. On the user side, the call will be ended as soon as the target phone number is dialed. Operating steps: Press "More" soft key to get more option, then press "Bxfer" soft key, input the transfer target number and press "Send" soft key.

3.7 Voicemail

Rainbow1 has a  key for entering voicemail box. Press  key to enter the menu to configure voicemail number if never configure it previously. Otherwise, the voicemail number will be called after press it. If you want to modify it after configured it, please go to the Account webpage to modify the voicemail number.

3.8 Mute calls

The input audio will be not transmitted to peer phone after pressing  key, and the phone will be muted even switched among different modes of speaker, handset and headset. To un-mute, just press  key again.

3.9 Call Hold

The current calling will be hold by pressing soft key "Hold" or  key. And the held call will be resumed after pressing soft key "Resume" or  key or the corresponding line key. Even on 3-way conference calling, the 3-way conference calling will be held after pressing "Hold" key, and be resumed to 3-way conference after pressing "Hold" Key again. Remember the conversation is still on hold without being ended even if hung up under the status of hold.

3.10 3-Way Conference Call

To initiate a conference call:

Press "More" soft key on calling to get more options, then press "Conf" soft key to start a conference call. Enter the phone number of the third party and press "Send" soft key to send it out.

1. After the third party answers the call, pressing "Conf" key again to establish the 3-way conference.
2. 3-way conference initiator can press "Exit" soft key to quit from the conference and leave the other two parties still in the conversation.
3. If the initiator hangs up the call or press the "End Conf" soft key, the conference will be ended and the calling between the other two parties will be hung up.

3.11 Call History

Rainbow1 supports 100 missed calls list, 100 incoming calls list and 100 dialed calls list. When the storage is full, the old record will be erased by the new one.

Press "History" soft key or  key when Rainbow1 is standby, all the incoming(->), outgoing(<-) and missed calls(!) will be listed. There is other ways to check them:

A. Missed call

1. Press  key.

2. Press  key and  key to select "Call History" then press "Select" soft key.
3. Press  key and  key to select "Missed Calls" then press "Select" soft key.
4. Press  key and  key to browse the missed call record. If there is no record, the LCD display will be indicated "List is Empty".

B. Answered call

1. Press  key .
2. Press  key and  key to choose "Call History" and then press "Select" soft key.
3. Press  key and  key to choose "Answered Calls" and then press "Select" soft key.
4. Press  key and  key to browse the answered call records. If there is no record, the LCD display will be indicated "List is Empty".

C. Dialed call

- 1) Press  key.
- 2) Press  key and  key to select "Call History" and then press "Select" soft key.
- 3) Press  key and  key to select "Dialed Calls" and then press "OK" soft key.
- 4) Press  key and  key to browse the dialed call records. If there is no record, the LCD display will be indicated "List is Empty".

3.12 Default Password

Password is needed to access menu and web.

The default password for accessing menu is 123.

There are 2 modes to access web: User mode and Admin mode. All the parameters can be visible at Admin mode while part of them can be visible at User mode.

➤ User Mode

Username: user no default Password

➤ Admin Mode:

Username: admin no default Password

3.13 Check the Phone's IP address

Press  key, then the status of the phone will be displayed on the screen and you will see the current IP address of the phone.

3.14 Dial Plan

Dial plan defines the rule of dial. The syntax of dial plan for Rainbow1 is closely similar as the corresponding syntax specified by MGCP and MEGACO.

Dial plan is stipulated by the below configurable parameters:

- Interdigit Long Timer——refer to [Interdigit long timer](#) for more detail description
- Interdigit Short Timer——refer to [Interdigit short timer](#) for more detail description
- Dial Plan

Dial plan contains a series of digit sequences, separated by the '|' character. The collection of sequences is enclosed in parentheses '(' and ')'.
Default: (*xx.|xxxxxxxxxxxxx.)

When user dials a series of digits, Rainbow1 will response in below way:

- No candidate sequences matched, the number will be rejected and "call ended" will be displayed on the screen. For instance, if the default dial plan only supports digits, any '*' character or letters input will be rejected.
- More than one candidate sequences matched, Rainbow1 will wait for more digits input.
- When input timeout occurs, Rainbow1 will dial the digits input already.
- When input '#' character, Rainbow1 will dial the input digits immediately.

Digit Sequence Syntax:

'x': Matches any one numeric digit ('0' ... '9')

'[]': Numeric ranges are allowed within '[]'. For example, [389] means '3' or '8' or '9', [3-6] means '3' or '4' or '5' or '6', [235-8*] means '2' or '3' or '5' or '6' or '7' or '8' or '*'.

'.' :Any element can be repeated zero or more times by appending a '.' character. For example, 01. matches 01,011,0111,01111,...,011111111...etc.

'<>': subsequence substitution. For example, '<8:1650>xxxxxxx' would match '85551212' and the first digit '8' will be replaced by '1650' and '16505551212' will be dialed.

',' : An "outside line" dial tone can be generated within a sequence by appending a ',' character between digits. Thus, the sequence "9, 1xxxxxxxxx" sounds an "outside line" dial tone after the user presses '9', until the '1' is pressed.

'!': A sequence can be barred (rejected) by placing a '!' character at the end of the sequence. For example, "137xxxxxxxx!" will forbid numbers which have 11 digits and start by 137 to be dialed.

Example:


(xxxxxxx|[*#]xxxx|9,1xxxxxxxxxxx|00xxx!) contains 4 subsequences:

1. Allow to dial numbers with 7 digits
2. Allow to dial numbers with 4 digits and start by '*' or '#'
3. Allow to play an "outside line" dial tone after pressing '9' and dial numbers with 11 digits and start by 1
4. Forbid to dial numbers with 5 digits and start by 00

4. Web settings


Input the IP address in the web browser and press 'Enter' key to access Rainbow1's user webpage.

Click "admin" which is on the right top corner to enter administrator webpage.

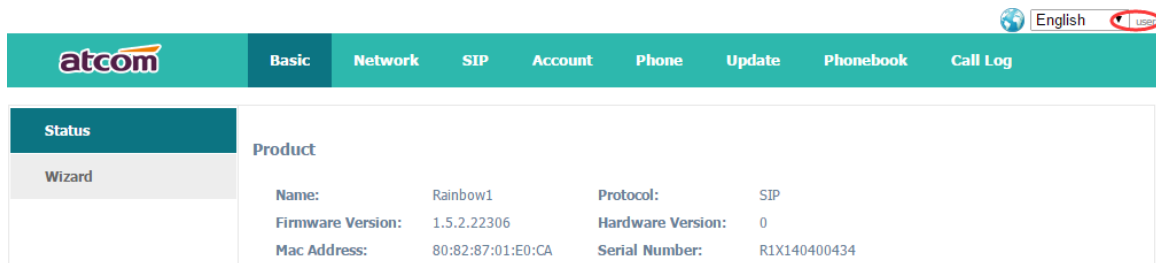

4.1 Basic

4.1.1 Status

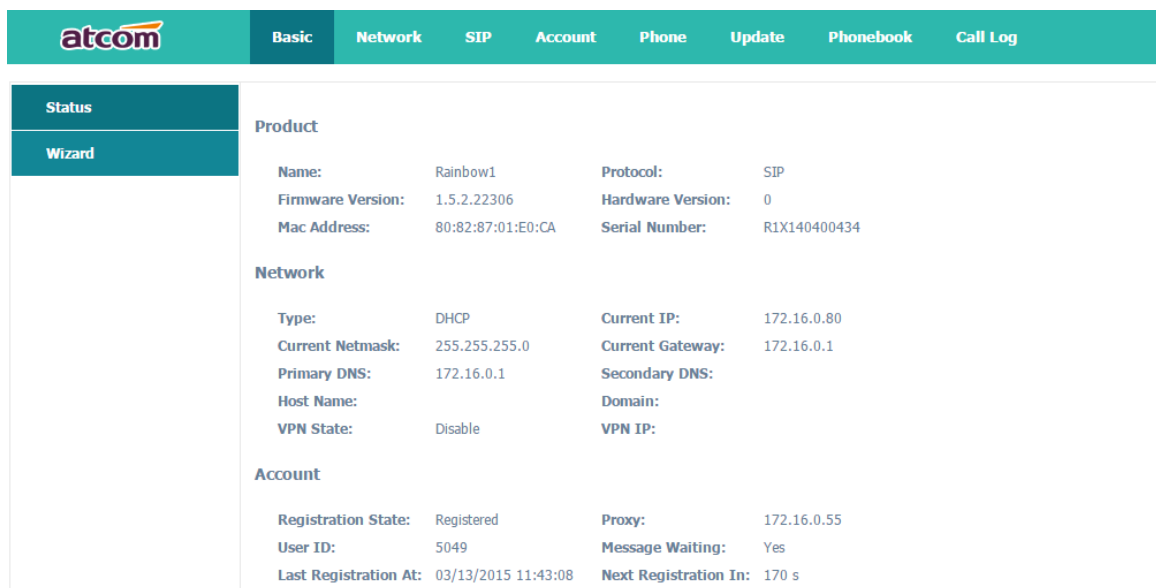


This page shows the IP phone's system status.

1. **Product** shows the product name, protocol, software and hardware version, Mac address and serial number.
2. **Network** shows the network connection type, IP, netmask, gateway, DNS, host name, domain and VPN information.
3. **Account** shows registration state, proxy, user ID, message waiting on or off , the last and next registration time.


4.1.2 Wizard

Wizard is an interface to configure network access type and SIP accounts quickly.

There are 3 ways available when configuring Internet Port:

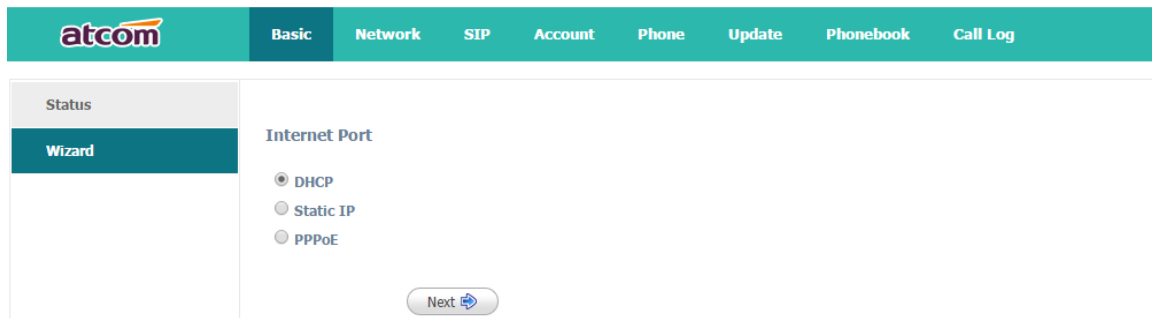


1. If choose DHCP, the telephone will be assigned a IP address automatically, click the button "Next" to enter the web page of "SIP Settings".
2. If choose Static IP, you should input the IP address manually for the telephone, click the button "Next" to enter the web page of "Static IP Settings".

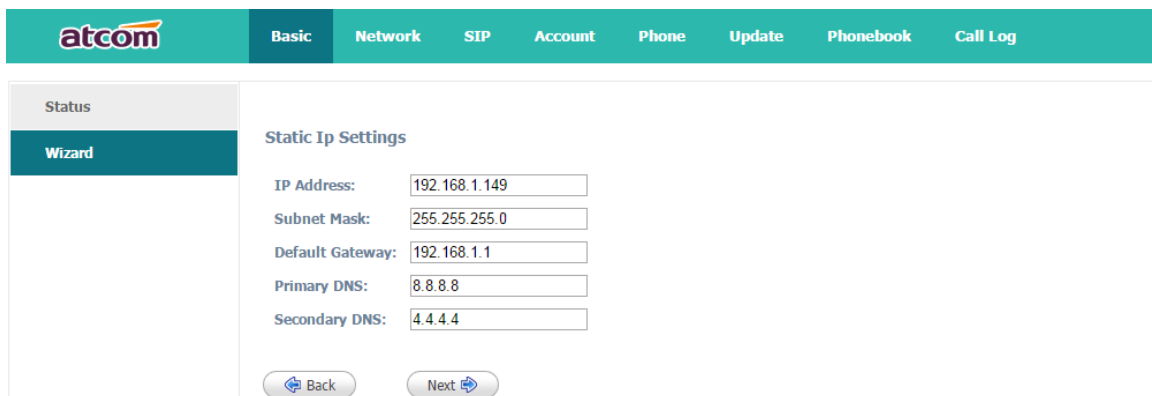

After IP address filled manually, click the button "Next" to enter the web page of "SIP Settings", or click the button "Back" to back to web page of "Internet Port".

3. If choose PPPoE, you should input the username/password (provide by ISP) of PPPoE manually and then click the button "Next" to enter the web page of "PPPoE Settings",

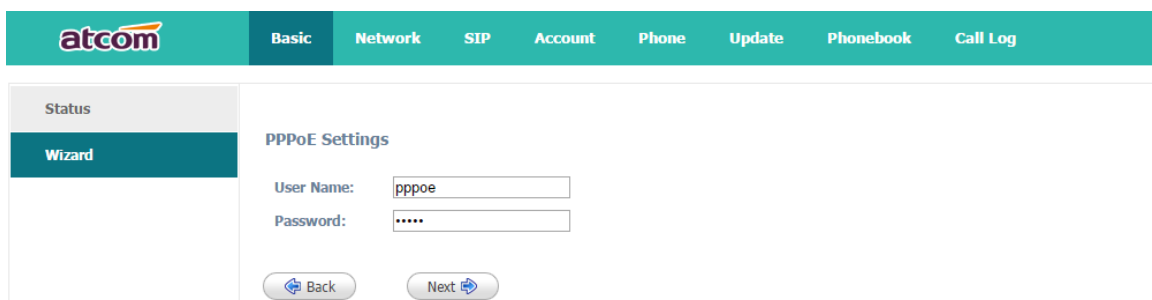

After the username/password of PPPoE filled manually, click the button "Next" to enter the web page of "Account Configuration", or click the button "Back" to back to web page of "Internet Port".

The configuration of SIP Settings will be saved to Line 1 automatically.

Click the button “Finish” to save configurations, and click “Back” back to the previous web page.

4.2 Network

4.2.1 Basic

There are 3 ways to connect to the internet: DHCP, Static and PPPoE, please choose one according to your own situation.

Network mode: DHCP, Static IP and PPPoE

1. DHCP

Obtain automatically dynamic IP from DHCP server.

2. Static IP

- a) IP Address: set IP address
- b) Subnet Mask: set netmask
- c) Default Gateway: set gateway
- d) Primary DNS: set primary DNS server
- e) Secondary DNS: set secondary DNS server

3. PPPoE

Connect the LAN port of Rainbow1 with the Ethernet port of modem then fill user name and password of PPPoE which assigned by ISP (Internet Service Provider).

a) User name: set PPPoE user name

b) Password: set PPPoE password

Press 'Submit' button after finishing setting and all the settings info will be saved and taken effect after Rainbow1 reboots.

4.2.2 Advance

➤ Web Server

Web Server

Enable Web Server :	Yes		
Admin Password :		User Password :	
HTTP Port :	80		

- ✓ Enable Web Server: Enable or disable web access. If choose "no", you're not able to access Rainbow1's webpage.
- ✓ Admin password: Set password for admin webpage access. Input 'http://ip-address/index.asp' in the web browser to access admin's login webpage after setting the admin password, then input username(admin) and password to access the admin's webpage.
- ✓ User password: Set password for user webpage access. Input 'http://ip-address/user.asp' in the web browser to access user's login webpage after setting the user password, then input username(user) and password to access the user's webpage.
- ✓ HTTP port: set port for HTTP access (defaults to 80)
For example, Rainbow1's IP is 192.168.1.223
HTTP port was set as 100, you have to type "http://192.168.1.223:100" in web browser to enter Rainbow1's webpage.

➤ VPN

VPN

VPN Enable:	No	VPN Type:	L2TP Tunnel
Server Address:			
User Name:		Password:	

1. VPN Enable: Select "Yes" or "No" to enable or disable VPN
2. VPN Type: Only support L2TP VPN
3. Server address: VPN server address
4. Username: VPN account's username
5. Password: VPN account's password

After apply, the phone will be reboot. The VPN IP address will be shown on the System Status webpage.

➤ VLAN

VLAN

You should receive the tagging values of a virtual LAN from your provider. Wrong settings will require factory reset.

LAN VLAN Enable:	No	PC VLAN Enable:	No
LAN Identifier(1~4094):	1	PC Identifier(1~4094):	1
LAN Priority:	0	PC Priority:	0

1. Lan VLAN Enable: Whether to enable VLAN of Lan Port
2. PC VLAN Enable: Whether to enable VLAN of PC Port
3. Lan Identifier(1..4094) : Assign VLAN id for voice stream, range from 1 to 4094
4. Lan Priority: the degree is 0-7, 7 is the highest priority.
5. PC Identifier(1..4094) : Assign VLAN id for data stream, range from 1 to 4094
6. PC Priority: the degree is 0-7, 7 is the highest priority.

➤ **Port Link****Port Link**

LAN Port Link:	Auto negotiate	PC Port Link:	Auto negotiate
----------------	---	---------------	---

Choose the network type and port link for LAN and PC

1. LAN Port Link: Auto negotiate, full duplex 10Mbps, full duplex 100Mbps, half duplex 10Mbps, half duplex 100Mbps.
2. PC Port Link: Auto negotiate, full duplex 10Mbps, full duplex 100Mbps, half duplex 10Mbps, half duplex 100Mbps.

➤ **Qos****QoS**

SIP Qos(0~63):	0	Voice Qos(0~63):	0
----------------	--------------------------------	------------------	--------------------------------

QoS: Quality of service

1. SIP Qos: Quality of service for SIP (Diffserv)
2. Voice Qos: Quality of service for RTP (Diffserv)

➤ **Syslog****Syslog**

Enable Syslog:	Yes	Log Level:	Error
Syslog Server:		Port:	514

1. Enable Syslog: Select "Yes" or "No" to enable or disable syslog.
2. Log level: None, Alert, Critical, Error, Warning, Notice, Info, Debug. The debug level is the most detailed.
3. Syslog Server: Syslog Server address.
4. Port: Syslog server port, defaults to 514.

4.3 SIP Setting

➤ Sip Timer Values

SIP Timer Values

SIP T1:	0.5	SIP T2:	4
SIP T4:	5		
Reg Retry Intvl:	8	Sub Retry Intvl:	10

1. Sip T1: RFC 3261 T1 value (RTT). Range: 0 – 64 sec, defaults to 0.5
2. Sip T2: RFC 3261 T2 value (Maximum retransmit interval for non-INVITE requests and INVITE responses). Range: 0 – 64 sec, defaults to 4
3. Sip T4: RFC 3261 T4 value (Maximum duration a message will remain in the network). Range: 0 – 64 sec, defaults to 5
4. Reg Retry Intvl: Interval to wait before the phone retries registration again after encountering a failure condition during last registration. Range: 0 –65535, defaults to 8
5. Sub Retry Intvl: Interval to wait before the phone retries subscriber again after encountering a failure condition during last subscriber. Range: 0 –65535, defaults to 10

➤ RTP Parameters

RTP Parameters

RTP Port Min:	16384	RTP Port Max:	16482
RTP Packet Size(ms):	20		

1. RTP Port Min: Minimum port number for RTP transmission and reception. Range: 1–65535, defaults to 16384
2. RTP Port Max: Maximum port number for RTP transmission and reception. <RTP Port Max> should be at least 2 larger than <RTP port Min>.Range: 1–65535, defaults to 16482
3. RTP Packet Size(ms): Packet size in milliseconds, which can be 10ms, 20ms, 30ms, 40ms, 60ms,defaults to 20.

➤ SDP Payload Types

SDP Payload Types

G711a Codec Name:	PCMA	G711u Codec Name:	PCMU
G723 Codec Name:	G723	G722 Codec Name:	G722
G729ab Codec Name:	G729		
AVT Dynamic Payload:	101	AVT Codec Name:	telephone-event
iLBC Dynamic Payload:	98	iLBC Codec Name:	iLBC
G726r16 Dynamic Payload:	108	G726r16 Codec Name:	G726r16
G726r24 Dynamic Payload:	109	G726r24 Codec Name:	G726r24
G726r32 Dynamic Payload:	110	G726r32 Codec Name:	G726r32
G726r40 Dynamic Payload:	111	G726r40 Codec Name:	G726r40
Lin16 Dynamic Payload:	107	Lin16 Codec Name:	L16

1. G711a Codec Name---G711a codec name used in SDP, defaults to PCMA
2. G711u Codec Name---G711u codec name used in SDP, defaults to PCMU
3. G723 Codec Name---G723 codec name used in SDP, defaults to G723
4. G722 Codec Name---G722 codec name used in SDP, defaults to G722
5. G729ab Codec Name---G729ab codec name used in SDP, defaults to G729
6. AVT Dynamic Payload---RFC2833 payload type, defaults to 101
7. AVT Codec Name---AVT codec name used in SDP, defaults to telephone-event
8. iLBC Dynamic Payload---iLBC dynamic payload type, defaults to 98
9. iLBC Codec Name---iLBC codec name used in SDP, defaults to iLBC
10. G726r16 Dynamic Payload---G726r16 dynamic payload type, defaults to 108
11. G726r16 Codec Name---G726r16 codec name used in SDP, defaults to G726r16
12. G726r24 Dynamic Payload---G726r24 dynamic payload type, defaults to 109
13. G726r24 Codec Name---G726r24 codec name used in SDP, defaults to G726r24
14. G726r32 Dynamic Payload---G726r32 dynamic payload type, defaults to 110
15. G726r32 Codec Name---G726r32 codec name used in SDP, defaults to G726r32
16. G726r40 Dynamic Payload---G726r40 dynamic payload type, defaults to 111
17. G726r40 Codec Name---G726r40 codec name used in SDP, defaults to G726r40
18. Lin16 Dynamic Payload ---Lin16 dynamic payload type, defaults to 107
19. Lin16 Codec Name---Lin16 codec name used in SDP, defaults to L16

➤ NAT Support Parameters

NAT Support Parameters

Enable Stun:

No ▼

Stun Server:

1. Enable Stun: Select "Yes" or "No" to enable or disable using stun to discover NAT mapping.
2. Stun Server: Set stun server, which can be IP address or domain name.

4.4 Account

Rainbow1 has 1 line which is enabled to register by default.

➤ SIP

SIP

Display Name:	5049	User ID:	5049
Authenticate ID:	5049	Password:	
SIP Server:	172.16.0.55	SIP Port:	5060
SIP Redundancy Server:			
Use Outbound Proxy:	No ▼		
Outbound Proxy Server:		Outbound Proxy Port:	5060
Local SIP Port:	5060		
Register Expires:	300	Subscribe Expires:	3600
Transport Type:	UDP ▼	SIP 100Rel Require:	No ▼
RPort Enable:	No ▼		
Session Timer Enable:	No ▼	Early Update Enable:	No ▼
Caller ID Display:	No ▼	Auto Subscribe MWI:	No ▼
Server List:	Common ▼	Dns Mode:	A Record ▼
BLF List URI:			

1. Display Name: This name will be displayed on the LCD. It will show the User ID instead if leave Display Name as blank.
2. User ID: Username of sip account.
3. Authenticate ID: Normally is the same as User ID, but blank is acceptable.
4. Password: Password of SIP account.
5. SIP Server: SIP server address, support both IP address and domain name.
6. SIP Port: SIP server port, defaults to 5060.
7. SIP Redundancy Server: SIP redundancy server address. It can be configured manually and also can be auto configured as the server address carried in the DNS SRV record if there is a DNS which supports specifying the location of the server or domain for SIP protocol. Only when Rainbow1 fails to register to the SIP Server, it will try to register to the SIP Redundancy Server.
8. Use Outbound Proxy: Select "Yes" or "No" to enable or disable outbound proxy.
9. Outbound Proxy Server: Set address of outbound proxy server. All signaling requests will be sent to outbound proxy server firstly.
10. Outbound Proxy Port: Outbound proxy server port.
11. Local SIP Port: The SIP port which used by phone, defaults to 5060
12. Register Expires: Register expiration time, defaults to 300 seconds.
13. Subscribe Expires: Subscriber expiration time, defaults to 3600 seconds.
14. Transport Type: UDP/TCP/TLS. Defaults to UDP.
15. SIP 100Rel Require: Select "Yes" or "No" to enable or disable 100Rel. If enabled, 100rel parameters will be added to the SIP request to support PRACK.

16. RPort Enable: Select "Yes" or "No" to enable or disable rport.
17. Session Timer Enable: Select "Yes" or "No" to enable or disable Session Timer.
18. Early Update Enable: Select "Yes" or "No" to enable or disable Early Update.
19. Caller ID Display: Select "Yes" or "No" to enable or disable Caller ID display
20. AutoSubscribeMWIEnable: Select "Yes" or "No" to enable or disable SubscribeMWI
21. Server List: Choose the server type.
22. DNS Mode: Choose the DNS mode
23. BLF List URI: Set BLF list URI when Rainbow1 cooperates with Broadworks (Broadsoft).

➤ Codec Configuration

Codec Configuration

Disabled Codecs		Enabled Codecs
iLBC_15_2	>> <<	G711A
G723_63		G711U
G726-16		G729
G726-24		iLBC_13_3
G726-40		G723_53
L16		G722
		G726-32
		AVT

1. Disabled Codec: Select disallowed codec for all calls.
2. Enabled Codec Only: Select allowed codec for all calls. The priority of each enabled codec decreases one by one. However, the actual codec used in a call depends on the outcome of the codec negotiation protocol.

➤ DTMF Configuration

DTMF Configuration

DTMF Tx Method: RFC2833 ▼ DTMF Display: Yes ▼

1. DTMF Tx Method: Select the method to transmit DTMF signals to the remote end: Inband, RFC2833, SIP INFO. Defaults to RFC2833.
2. DTMF Display: Select "Yes" or "No" to enable or disable display DTMF.

➤ Call Feature Setting

Call Feature Settings

Message Waiting:	Yes ▾	Voice Mail Number:	
Pickup Service Code:	*8		
UDP Keep Alive Enable:	No ▾	UDP Keep Alive Intvl:	15
Default Ring:	1		
SRTP:	No ▾		

1. Message Waiting: Select "Yes" or "No" to enable or disable indication of new voicemail existed.
2. Voice Mail Number: Set voicemail number.
3. Pickup Service Code: Set Pickup Service Code.
4. UDP Keep Alive Enable: Select "Yes" or "No" to enable or disable UDP keep alive. If enabled, Rainbow1 sends UDP packets periodically to keep the server port alive.
5. UDP Keep Alive Intvl: Set interval to send UDP packets.
6. Default Ring: Set default ring tone.
7. SRTP: Select "Yes" or "No" to enable or disable SRTP (Secure Real Time Control Protocol). This feature will be available only when the server supports SRTP.

➤ Dial Plan**Dial Plan**

Dial Plan:

Dial Plan: Configure dial rule for SIP account, please refer to [dial plan](#).

4.5 Phone Setting

4.5.1 Preference

Output Volume(1~8)

Handset Volume: 5 ▼

Headset Volume: 5 ▼

SpeakerPhone Volume: 5 ▼

Ring Volume: 3 ▼

Input Gain

Handset Gain: 0 ▼

Headset Gain: 0 ▼

SpeakerPhone Mic Gain: 0 ▼

LCD

Backlight Level: 7 ▼

Contrast: 9 ▼

Backlight Time(Seconds): 10 ▼

Keypad Password: ...

Control Timer Values(Seconds)

Interdigit Long Timer(1~64): 20

Interdigit Short Timer(1~64): 8

Reorder Delay(0~60): 2

Reorder Time(0~60): 5

➤ Output Volume(1~8)

1. Handset Volume: Specify handset volume grade
2. SpeakerPhone Volume: Specify speaker volume grade
3. Headset Volume: Specify headset volume grade
4. Ring Volume: Specify ring tone volume grade

➤ Input Gain

1. Handset Gain: Specify handset gain, the bigger the gain, the louder the other party heard.
2. SpeakerPhone Mic Volume: Specify speaker gain, the bigger the gain, the louder the other party heard.
3. Headset Volume: Specify headset gain, the bigger the gain, the louder the other party heard.

➤ LCD

1. Backlight Level: select the backlight level
2. Backlight Time(Seconds): select the backlight time
3. Contrast: select the contrast level
4. Keypad Password: set keypad access password

➤ Control Timer Values(Seconds)

1. Interdigit Long Timer: If the numbers or characters input have not finished and do not full match the dial plan, it will be not dialed out automatically until time out. Range: 0 – 64 sec
2. Interdigit Short Timer: If the numbers or characters input are full matched the dial plan, it will be dialed out automatically until time out. Range: 0 – 64 sec

3. Reorder Delay: It means the delay between the remote end hangs up and reorder tone is played. "0" means the reorder tone will be played immediately.
Range: 0 – 60 sec
4. Reorder Time: Set the duration about how long the page of Calling-end displayed

➤ Date And Time

Date And Time

☒ NTP

NTP Server:
 Time Zone:

☐ Manual

Set Local Date(YYYY/mm/dd):
 Set Local Time(HH:mm:ss):

NTP: Network time protocol

1. NTP Server: Set NTP server address, which can be IP address or domain name.
2. Time Zone: Choose your own time zone.

Manual

1. Set Local Date(YYYY/mm/dd): manually set local date or click  to choose local date. Format: year/month/day.
2. Set Local Time(HH:mm:ss) : manually set local time or click  to adjust local time. Format: hour/minute/second. e.g. 12:00:00.

➤ Daylight Saving Time

Daylight Saving Time

Daylight:

Fixed Type: ☒ By Date ☐ By Week

Start Month: Stop Month:

Start Date: Stop Date:

Start Hour of Day: Stop Hour of Day:

Start Day of Week: Stop Day of Week:

Start Week of Month: Stop Week of Month:

Offset(minutes):

1. Daylight: Whether to enable daylight rules or not.
2. Fixed Type: The type that daylight saving time rules begin to take effects.
3. Start Month: The month that daylight saving time rules begin to take effects.
4. Stop Month: The month that daylight saving time rules lose efficacy.
5. Start Date: When set the Fixed Type as By Date, the date that daylight saving time rules begin to take effects.
6. Stop Date: When set the Fixed Type as By Date, the date that daylight saving time rules lose efficacy.

7. Start Hour of Day: When set the Fixed Type as By Date, the hour of the day that daylight saving time rules begin to take effects.
8. Stop Hour of Day: When set the Fixed Type as By Date, the hour of the day that daylight saving time rules lose efficacy.
9. Start Day of Week: When set the Fixed Type as By Week, the day of a week that daylight saving time rules begin to take effects.
10. Stop Day of Week: When set the Fixed Type as By Week, the day of a week that daylight saving time rules lose efficacy.
11. Start Week of Month: When set the Fixed Type as By Week, the week of a month that daylight saving time rules begin to take effects.
12. Stop week of Month: When set the Fixed Type as By Week, the week of a month that daylight saving time rules lose efficacy.
13. Offset(minutes): The time that adds or reduces when the daylight saving time take effects, e.g., -20, means the time shows on the phone will be 20 minutes earlier than standard time.

4.5.2 Features

➤ Call Forward

Call Forward

Always Target:		Busy Target:	
No Answer:		After Ring Time(Seconds):	5

1. Always Target: Every incoming call will be forwarded to this target.
 2. Busy Target: The incoming call will be forwarded to this target when Rainbow1 is busy.
 3. No Answer: The incoming call will be forwarded to this target when there is no answer.
 4. After Ring Time(Seconds): After this time out, the incoming call will be forwarded to this target if no answer. Defaults waiting for 5 seconds.
- The priority of Always Target is highest when Always Target, Busy Target and No Answer Target have been set. This means all the incoming call will be forwarded to the Always Target.

➤ Call Settings, Others

Call Settings

Do Not Disturb:	No	Call Waiting:	Yes
Block Call ID:	No	Block Anonymous Call:	No
Auto Answer:	No	Auto Answer Delay:	0

Others

Send Key:

1. Do Not Disturb: Select "Yes" or "No" to enable or disable DND (Do Not Disturb). When DND enabled, all the incoming calls will be rejected. At this

moment if Always Target or Busy Target was set, all incoming calls will be forwarded to the targets preferentially.

2. Call Waiting: When Rainbow1 is on calling, and Call Waiting enabled , any new incoming calls will not be rejected but ring back tone can be heard by the remote end. if Call Waiting disabled, only one conversation will be available even multi-accounts have been registered on Rainbow1 .
3. Block Call ID: Select "Yes" here, Caller ID will be blocked, Rainbow1 will call others as anonymous.
4. Block Anc Call: Select "Yes" here, all anonymous call will be blocked, Rainbow1 will reject all anonymous callers.
5. Auto Answer: Select "Yes" here, Rainbow1 will answer all incoming calls by speaker automatically.
6. Send Key: Define the Send key as "*" key or "#"Key. Press "*" Key or "#"Key follow those phone number you want to dial, then number will be dialed out immediately.

4.5.3 Voice

The screenshot shows the 'Voice' configuration page. On the left, a sidebar contains tabs: 'Preference', 'Features', 'Voice' (highlighted in blue), 'Ring', and 'Tone'. The main content area is titled 'Echo Cancellation' and 'Jitter Buffer'. Under 'Echo Cancellation', there are two settings: 'VAD:' with a dropdown menu set to 'No', and 'CNG:' with a dropdown menu set to 'Yes'. Under 'Jitter Buffer', there are three settings: 'Type:' with a dropdown menu set to 'Fixed', 'Min Delay:' with a text input field containing '0', and 'Max Delay:' with a text input field containing '300'. Below these is 'Normal Delay:' with a text input field containing '120'. At the bottom of the form are two buttons: a green 'Submit' button with a checkmark icon and a grey 'Reset' button with a red arrow icon.

Echo Cancellation

1. VAD: Select "Yes" or "No" to enable or disable VAD (Voice Active Detection). If enable, RTP packets will not be sent when Rainbow1 is mute.
2. CNG: Select "Yes" or "No" to enable or disable CNG (Comfort Noise Generator). If enable, comfortable noise will be sent to the remote end to let it perceive the conversation is still active when Rainbow1 is mute.

Jitter Buffer

Rainbow1 is able to buffer incoming voice packets to minimize out-of-order packet arrival. This process is known as jitter buffer.

1. Type: Choose type of jitter buffer. When choose Fixed, the size of jitter buffer is fixed. When choose Adaptive, the size of jitter buffer is the sum of Minimum Delay and the size of RTP packets.
2. Min Delay: The minimum delay of the jitter buffer.
3. Max Delay: The maximum delay of the jitter buffer.
4. Normal Delay: This is used to set fixed jitter buffer which should be between Min Delay and Max Delay.

4.5.4 Ring

Preference	Notes: Ring tone must be wav file, 8k sampling rate, 8 Bit u-law compression. File size should less than 200KB Upload Ring Tone: Choose file No file chosen Upload Ring Tone Type: User Define 1 Delete
Features	
Voice	
Ring	
Tone	

Administer can upload 2 user define ring. The ring file should be wav (8k, 8bit, u-law) and no larger than 200 KBytes.

4.5.5 Tone

Preference	Tone Country Stands: Custom Dial Tone: 350@-30,440@-30;60(*0/1+2) Outside Dial Tone: 420@-30;60(*0/1) Busy Tone: 480@-23,620@-23;10(.5/.5/1+2) Reorder Tone: 480@-23,620@-23;10(.25/.25/1+2) Off Hook Warning Tone: 480@-21,620@0;10(.125/.125/1+2) Ring Back Tone: 440@-23,480@-23;*(2/4/1+2) MWI Dial Tone: 350@-30,440@-30;2(.1/.1/1+2);10(*0/1+2) Holding Tone: 350@-30,440@-30;60(*0/1+2) Conference Tone: 350@-23;20(.1/.1/1..1/9.7/1) Submit Reset
Features	
Voice	
Ring	
Tone	

Set the script for each tone.

For example, MWI Dial Tone: 350@-19,440@-19;2(.1/,1/1=2);10(*0/1+2)
 Frequency1, Frequency2; Cadence Section1; Cadence Section2

350@-19: Frequency1 is 350HZ at -19dBm

440@-19: Frequency2 is 440HZ at -19dBm

2(.1/,1/1=2): Cadence Section length is 2s, 0.1s on, 0.1s off, with frequencies 1 and 2

10(*0/1+2): Cadence Section length is 10s, always on(* means always, 0 means never), with frequencies 1 and 2.

1. Country stands: Select a country standard tone as default.
2. Dial Tone: The prompting audio to remind user to enter a phone number for dialing
3. Outside Dial Tone: The prompting audio to remind user to enter an external phone number (versus an internal extension). This is triggered by a "," character encountered in the dial plan.
4. Busy Tone: The promoting audio when a 486 RSC is received for an outbound call.
5. Reorder Tone: The promoting audio when an outbound call failed or after the remote end hangs up an established call.

6. Off Hook Warning Tone: The promoting audio when user does not put the handset on the cradle properly.
7. Ring Back Tone: The promoting audio when the remote end is ringing.
8. MWI Dial Tone: The promoting audio when an unread voicemails existed.
9. Holding Tone: Indicate the local end that the current calling is hold by the remote end.
10. Conference Tone: The promoting audio to all parties when a 3 way conference is in progress.

4.6 Update

4.6.1 Manual Update

Manual Update	Firmware Version: 1.5.2.22306	
Auto Provision	Hardware Version: 0	
Reset & Reboot	Firmware: Choose file No file chosen	Upgrade
Debug	Configuration: Choose file No file chosen	Upgrade Download
	Phonebook: Choose file No file chosen	Upgrade Download

1. Firmware Version: The current firmware version.
2. Hardware Version: The current hardware version.
3. Firmware: Upgrade the firmware.
4. Configuration: Upgrade or download config.xml file.
5. Phone Book: Upgrade or download phonebook.xml file.

4.6.2 Update/Auto Provision

Manual Update	Auto Provision
Auto Provision	Provisioning Server:
Reset & Reboot	User Name: Password:
Debug	Common AES Key:
	Check New Config: ☒ On ☐ Off
	Repeatedly: ☐ On ☒ Off Interval(minutes): 1440
	Weekly: ☐ On ☒ Off Time: 02 : 00 - 03 : 00
	☒ Sunday ☒ Monday ☒ Tuesday ☒ Wednesday ☒ Thursday ☒ Friday ☒ Saturday
	Day of Week:
	Submit Reset

1. Provisioning Server: The address to save control file for auto upgrading, it can filled by http, https, tftp server, ftp server, for example, tftp://192.168.1.111/upgrade_control_file.xml
2. User Name: The user name to access the file server

3. Password: The password to access the file server
4. AES Key: If the configuration file has been encrypted, the AES key will be used to decrypt for auto-upgrading
5. Check New Config: If set this parameter as "On", the phone will do some check for upgrading, and it will upgrade automatically once the conditions are met
6. Repeatedly: If set this parameter as "On", the phone will do some check for upgrading after "Interval(minutes)", and it will upgrade automatically once the conditions are met
7. Interval(minutes) : This parameter is configurable once the Repeatedly is "On"
8. Weekly: If set this parameter as "On", the phone will do the check for upgrading at a certain time in every week
9. Time: The time range that the phone do the check for upgrading every week, and it's configurable once the Repeatedly is "On"
10. Day of week: The day of week that the phone do the check for upgrading every week, and it's configurable once the Repeatedly is "On"


The sample of control file:

```
<?xml version="1.0"?>
<AUTOUPDATE Model="Rainbow1">
  <Config URL="http://www.atcom.com.cn/temp/$MAC.tar.gz"/>
  <PhoneBook URL="tftp://192.168.1.190/phonebook.xml"/>
  <Firmware MD5="cadfadfaqedadfadfa"
    URL="http://www.atcom.com.cn/temp/Rainbow1-V1.5.2.22306.fw"/>
</AUTOUPDATE>
```

\$MAC.tar.gz refers to the specified files that named as the phones' MAC address, the phone will find the tar.gz file which named as its MAC address automatically once a phone uses this control file to upgrade the Config file at the specified location, for example, a Rainbow4(s)'s MAC address is EA:F5:GA:54:4D:DR, the corresponding control file should name as EAF5GA544DDR.tar.gz.

MD5 is the property of a file, and it's always used for integrity checking, you can get it by using specified software. When upgrade the Firmware, the phone will compare the firmware's MD5 with the specified MD5, and it will refuse to upgrade if they are not the same.

4.6.3 Reset & Reboot

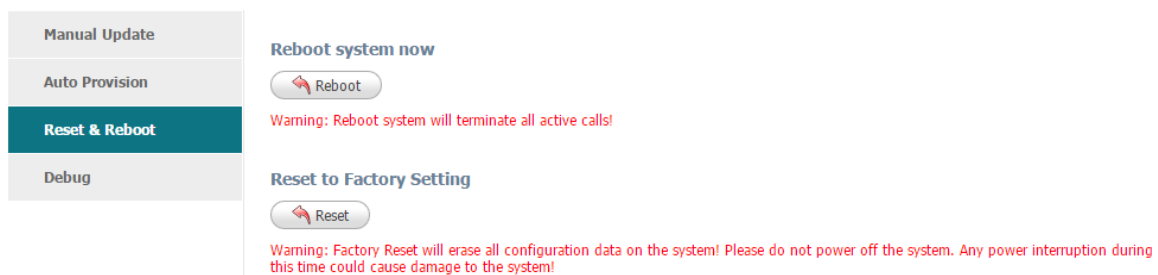

1. Reboot: Reboot will terminate all active calls, and restart the phone in a several seconds.

2. Reset: Click the "Reset" button will set Rainbow1 to factory default, please backup the config.xml, phonebook.xml and attendant_keypad.xml before reset.

4.6.4 Debug



Rainbow 1 support the function of capturing packages, click Start to begin capturing, and Stop after finishing it, then click Export to download the file.

If the Pcap Feature is not enabled when something wrong happened with the phone, you can click the Download button to get the syslog file, and then send it to ATCOM to help you to solve issues.

4.7 Phone Book

The screenshot shows a 'Phonebook' interface. It has a sidebar with the 'Phonebook' label. The main area contains buttons for 'New Contact' and 'Delete All' at the top. Below is a table with columns 'Mode', 'Name', and 'Number'. There are two rows of contact information. At the bottom of the table are buttons for 'New Contact', 'Delete All', 'Submit', and 'Reset'.

	Mode	Name	Number	
1	Contact	voicemail	6750	Delete
2	Contact	salvator	9527	Delete

1. New Contact: Add a new phonebook record.
2. Delete All: Delete all the phonebook records.
3. Mode: Directory or Blacklist. All calls from Blacklist will be rejected.
4. Name: Specify a name for each phone number. This name will be displayed on LCD when call to this number or call from this number.
5. Number: Phone number.
6. Submit: Submit to apply the change.
7. Reset: Cancel the inputting.
8. Delete: Delete the corresponding record.

Notice: The maximum of records in the phone book is 100.

4.8 Call Log

Dialed

Received

Missed

Delete All

	Name	Number	Time
1 :	5042	5042	13/03 14:40
2 :	ip calling	172.16.0.73	13/03 14:37

Dialed

Received

Missed

Delete All

	Name	Number	Time
1 :	5045	5045	13/03 14:42
2 :	5041	5041	13/03 14:35

Dialed

Received

Missed

Delete All

	Name	Number	Time
1 :	5041	5041	13/03 14:42
2 :	5042	5042	13/03 14:35

- 1. Redial: Record of dialed list, maximum 100 records.
- 2. Received: Record of received list, maximum 100 records.
- 3. Missed: Record of Missed list, maximum 100 records.

5. FAQ & Trouble Shooting

Frequently Asked Questions

5.1 How to make a factory reset

There are three ways to make a factory reset:

1. Factory reset from keyboard, steps are:



a) Press  and input password 123.

b) Find and select '12 Factory Reset'.

c) Press 'OK' key, then the phone will be restarted automatically and factory reset.

2. Factory reset through web, please refer to [Reset & Reboot](#);

3. Factory reset during rebooting, steps are:

a) Press '*' and '#' key immediately after plugging in the power adapter.

b) Wait for about 5 seconds, Rainbow1 will be reset to factory default setting after rebooted.

5.2 Upgrade firmware under safe mode

If the phone could not start up normally, please upgrade firmware under safe mode. Steps are:

1. Build a TFTP server and set its IP address as 192.168.1.200.

2. Rename the firmware like Rainbow1.tar.gz, and then decompress it, rename the app file like RAINBOW1.FW and then copy it to the root directory of the TFTP server. Make sure the TFTP server and the phone are connecting with the same switch and reachable to each other;

3. Keep pressing '#' key and start up the phone until the LCD displays 'Upgrading...';

4. The phone will download the firmware from the TFTP server;

5. After the download is done, the phone will upgrade automatically;

6. After the update is finished, the phone will start up with the factory configuration.

5.3 How to make direct IP call

When hook off/ pressing speaker or headset key,

1. Press soft key 'Num' until it switch to 'IP'.

2. Using '*' key to input '.'. If user wants to dial 192.168.1.100, then press 192*168*1*100.

3. After inputting the IP address, press dial key to dial it out.

6. Troubleshooting

6.1 The phone can't register successfully

1. Check the IP address, and if the mode of WAN port is DHCP, please make sure the DHCP server is in service.
2. Check the gateway.
3. Check the DNS.
4. Make sure the information of the account is consistent with which offered by the service supplier.
5. Make sure the SIP server is on.
6. Check the port of the SIP server whose default value is 5060.

6.2 The phone can't obtain IP address

1. Make sure the cable has been connected to the LAN port of the phone.
2. Make sure the cable and the switch's port that connected with the cable is available.
3. Make sure the DHCP server is on and there are some assignable IP addresses in the address pool.
4. Try to change the LAN port mode as Static.

6.3 Only one part can hear the voice during the call

1. Make an IP dial-up call to make sure the telephone receiver and microphone are normal.
2. Enable STUN on web page.
3. Set STUN server as `stun.sipgate.com`.
4. Click 'submit' and wait for the phone to restart.
5. Try to make calls again.

7. Abbreviations

DND : Do Not Disturb
CFWD : Call Forward
Bxfer : Blind Transfer
Conf : Conference
Num : Number
DelChr : Delete Char
Y/N : Yes/No
SIP:Session Initiate Protocol
RTP:Real-time Transport Protocol
SDP:Session Description Protocol
VPN:Virtual Private Network
VLAN:Virtual Local Area Network
QoS:Quality of Service
Syslog : System log
UDP:User Data Protocol
TCP:Transmission Control Protocol
TLS:Transport Layer Security Protocol
BLF:Busy Lamp Field
DNS:Domain Name System
SRTP:Secure Real-time Transport Protocol
NTP:Network Time Protocol
VAD:Voice Activity Detection
CNG:Comfort Noise Generator